



Automated Remote Origination Network Test System

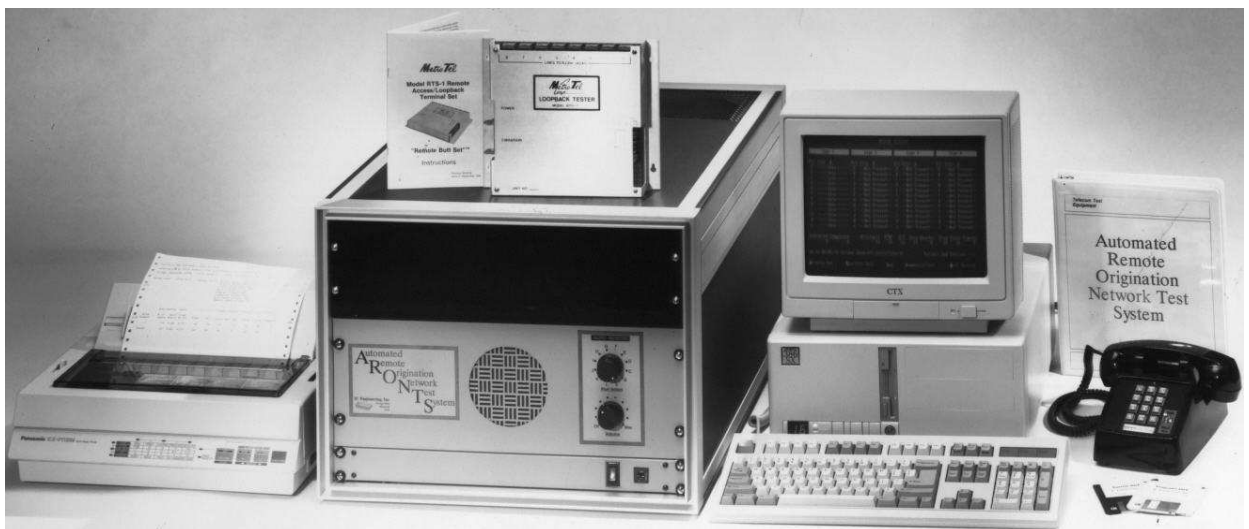

ARONTs Instruction Manual

©1991, 2011

IC Engineering, Inc.

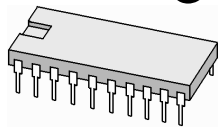

*PO Box 321
Owings Mills, MD
USA 21117-0321*

www.ICengineering.com
410-363-8748

Printed in the USA

Table of Contents

1. INTRODUCTION	Page 1
1.1 How to Use This Manual	Page 1
1.2 The Purpose of Remote Origination Testing	Page 1
Local Telephone Company	Page 1
Long Distance Carrier	Page 1
1.3 ARONTS Features	Page 2
Figure 1: ARONTS Network	Page 3
2. SYSTEM ELEMENTS	Page 4
2.1 Hardware Components	Page 4
Control Computer	Page 4
Test Module	Page 4
Figure 2: Test Module	Page 5
2.2 Software Elements	Page 4
Files	Page 4
File Handling While Testing	Page 7
3. TEST CALL PLACEMENT	Page 8
3.1 File Versions	Page 8
3.2 Sites	Page 8
RTS-1 Sites	Page 9
Simple Hot Shoe Sites	Page 9
Coded Hot Shoe Sites	Page 9
3.3 Test Schedule	Page 10
Partitions	Page 10
Routining	Page 10
Operation Tables	Page 10
3.4 Test Numbers	Page 11
3.5 Dialing Registers	Page 11
3.6 Test Definitions	Page 12
3.7 Setup Parameters	Page 13
3.8 Site Access	Page 13
3.9 Test Number Selection	Page 13
3.10 Specific Tests	Page 14
3.11 Module Commands	Page 14

4. REPORTING	Page 15
4.1 Failure Log	Page 15
4.2 Test Analysis	Page 15
4.3 Canned Reports and Custom Analysis	Page 15
Import of Statistics into Graphics Programs	Page 16
4.4 RawData Usage	Page 16
5. UTILITY FUNCTIONS	Page 17
5.1 File Maintenance	Page 17
5.2 Other Menu Utilities	Page 17
5.3 Remote Access	Page 17
Local Effects	Page 17
Remote Location	Page 17
5.4 LoadSite	Page 18
6. MENU OPERATION	Page 19
6.1 Main Menu	Page 19
6.2 Operations	Page 19
6.2.1 Test Sites	Page 19
Master Display	Page 20
Display One	Page 20
Specific Test	Page 21
Failures	Page 21
Display Communications	Page 21
Quit Testing	Page 22
6.2.2 Resume Testing	Page 22
6.2.3 Exit to DOS	Page 22
6.3 Database	Page 22
6.3.1 Site Information	Page 22
Field Editing	Page 23
Site Selector Menu	Page 24
6.3.2 LEC Names	Page 26
6.3.3 CO Descriptions	Page 27
6.3.4 State/Country Names	Page 27

6.4 Test Configuration	Page 27
6.4.1 System Setup	Page 27
6.4.2 Test Schedule	Page 30
6.4.3 Test Definitions	Page 31
6.4.4 Test Numbers	Page 32
6.4.5 Dialing Registers	Page 33
6.4.6 Module Commands	Page 33
6.5 Custom Menu	Page 34
6.6 Utilities	Page 35
6.6.1 Test Analysis	Page 35
Statistics by Test Number	Page 35
Statistics by Site Number	Page 35
Site Data	Page 36
File Output	Page 36
6.6.2 Failure Log	Page 37
SIT Frequencies and Durations	Page 38
Table I: Log Code Descriptions	Page 38
6.6.3 Terminate Print Job	Page 38
6.6.4 Wipe RawData File	Page 38
6.6.5 Zero Statistics	Page 39
6.6.6 Revise Date	Page 39
6.6.7 Hour/Minute Change	Page 39
6.6.8 File Maintenance	Page 39
Backup/Retrieve Options	Page 40
7. TEST CONSTRUCTION	Page 41
7.1 Versions	Page 41
7.2 Test Definitions	Page 42
Test Number Assignment	Page 42
Dialing Register Assignment	Page 42
7.3 Dialing Registers	Page 43
7.3.1 Substitution Dialing Register Commands	Page 43
7.3.2 Access Registers	Page 43

7.3.3 Test Call Registers	Page 44
Simple Dialing Patterns	Page 45
Dial-up Services	Page 45
Credit Card Calling	Page 45
Call Reorigination	Page 46
RTS-1 Programming	Page 46
Trunk Testing	Page 46
 8. COMPUTER CONFIGURATION	 Page 47
 9. TEST MODULE	 Page 48
9.1 Typical Operation	Page 48
9.2 Communications Protocols	Page 48
9.3 External Communications Protocols	Page 50
9.3.1 Summary of Interactive Command Protocols	Page 50
9.3.2 Interactive Command Protocols	Page 51
9.4 Dialing Register Syntax	Page 57
9.5 Internal Functional Description	Page 59
9.5.1 System Architecture	Page 59
9.5.2 Master Controller	Page 59
9.5.3 Coupler Controller	Page 59
9.5.4 Tone Controller	Page 59
9.5.5 Coupler Cage	Page 60
9.5.5.1 Front Coupler Backplane	Page 60
9.5.5.2 Rear Coupler Backplane	Page 60
9.5.5.3 UVC-1 (Universal Voice Coupler)	Page 60
9.5.6 Main Cage	Page 61
9.5.7 System Power Supply	Page 61
9.5.8 Internal Communications Prioritization	Page 61
9.5.9 Internal Communications Protocols	Page 62
9.5.9.1 Coupler Controller (addresses 10-1F)	Page 62
9.5.9.2 Tone Controller (addresses 41-7F)	Page 64

10. SOFTWARE REVISIONS	Page 67
10.1 Main Menu	Page 67
10.2 Resume Testing	Page 67
10.3 Site Information	Page 67
10.4 Common Features	Page 67
10.5 Test Numbers	Page 67
10.6 System Setup	Page 68
Maximum Test Number	Page 68
Credit Card Numbers and Secret Authcodes	Page 68
More Options	Page 68
10.7 Test Definitions	Page 68
Long Range Group	Page 69
10.8 Reconfirmation	Page 69
10.9 File Maintenance	Page 69
10.10 Test Analysis	Page 69
Test Number Conditions	Page 69
10.11 Job Queue	Page 70
Set Job Queue	Page 70
Run Job Queue	Page 70
Interface with Other Systems	Page 71
10.12 RawData Path	Page 71
10.13 Tester Program	Page 72
Log Times	Page 72
New Log Codes	Page 72
Log Code Clarification	Page 72
10.14 Test Number Import	Page 74
Example	Page 74
10.15 [Failure] Log	Page 75
10.16 Site Selector Menus	Page 75
10.17 Conversion of Test Schedule Files	Page 75
10.18 Computing Environment	Page 76
Memory	Page 76

10.19 Version 6 Firmware	Page 76
10.19.1 Additional Dialing Register Actions	Page 76
10.19.2 Additional External Communications Protocols ..	Page 77
10.19.3 Additional Internal Communications Protocols ..	Page 78
10.19.4 Gain Table	Page 78
10.20 April 2005 Update Option	Page 78
10.20.1 SNMP Trap Output	Page 79
10.20.2 Telnet Remote Access	Page 79
10.21 June 2006 Update	Page 80
10.21.1 Installation	Page 80
10.21.2 Originating Numbers	Page 80
o1-o8 Dialing Register Commands	Page 80
Originating Number Checks in Tester	Page 80
10.21.3 RTS-2 Sites	Page 80
10.21.4 Expect Timeout	Page 81
10.22 June 2007 Update	Page 82
10.22.1 Hardware	Page 82
10.22.2 Installation	Page 82
10.22.3 Rawdata Path	Page 82
10.22.4 Print Options	Page 82
10.22.5 SNMP Trap Output	Page 83
Configuring SNMP Data	Page 83
Viewing Trap Generation Status	Page 84
10.22.6 Remote Access	Page 84
10.22.7 File Maintenance	Page 84
ARONTS Dip Switch settings	Page 85
Testing Flow Diagram	Page 86
Webpage Frequently Asked Questions	Page 87

1. INTRODUCTION

This section describes the purpose of originating calls remotely to test a network, and the features of the *Automated Remote Origination Network Test System* (ARONTs).

1.1 How to Use This Manual

All users of the test system should read sections 1, 2, 3, 4, and 5. These sections describe the overall test process. The program menus are self-explanatory. Section 6 covers the use of these options and should be read if any difficulty arises in using the programs, or if the screen explanations are not found to be comprehensive enough for the individual operator. Advanced users who wish to customize the test system for differing dialing patterns and construct new tests should refer to section 7. System administrators who need to use the Control Computer for other purposes, change the Control Computer to another, or reinitialize the system software must read section 8. Section 9 gives a detailed description of the test system internals.

1.2 The Purpose of Remote Origination Testing

Conventional network testing is conducted by placing test calls from a centralized test point to all terminating points. This method is well suited to parametric tests. Connectivity assessments are made by checking that test calls *reach* the intended termination. One-way access circuits place an insurmountable obstacle in front of centralized test call origination for the purpose of connectivity checks. This can be viewed from the perspective of the local telephone company, and from the viewpoint of the long-haul carrier. In either application, it is also desirable to be able to *independently* make test calls and verify billing output from the associated switching system: ARONTs provides this ability.

Local Telephone Company

The local operating company (Telco) accepts dialed digits from its subscribers on the line-side of its Central Office (CO) switches, makes decisions regarding the type of call, and routes the customer to an error message, another local subscriber, or out of the Telco's network into one of many long distance carriers through the trunk side of the CO. This process is referred to as *translation*. The complex decision tree can only be tested (independently from the CO internal diagnostics) by originating calls from the line side of the CO. Conventionally, dedicated *foreign exchange* (FX) lines are brought from every CO to a centralized testing location, permitting call origination equivalent to that of subscribers located in the CO's exchange.

The quantity of FX lines increases if various classes of service are to be tested. Single party, coin, presubscriptions

to different long distance carriers, and other distinguishing characteristics makes it impractical to actually test each of the possibilities by transporting one of each of these line types to a centralized point by FX circuit.

Complicating the test situation is the fact that the telecommunications networks presently possess a much richer selection of service offerings than traditionally available in the industry, by orders of magnitude. Translations are handled by complex software systems – it is well known that side effects are not at all uncommon in such sophisticated computers. A change can be made in one portion of the call handling process, and some feature not believed to be at all related to the change may be affected. Massive outages have recently occurred in the networks of very large carriers; these are characterized by the increasing difficulty of even tracking down what the circumstances were that led to the difficulty. The inevitable movement of complex software systems into the telephone network brings with its mixture of new options and call handling abilities a growing need to test and monitor the systems, *particularly when a new software revision is loaded*.

Older analog CO's not controlled through complex software, while limited in ability to add service enhancements, at least remain consistent once the installation is proved out. Many of these offices have been replaced with modern digital CO's; the rest will eventually disappear. As more CO's are modernized, the quantity of cutovers to software upgrades and improvements, which is a continuous process, grows as well.

ARONTs is a tool to create automated scripts of test calls for translation verification. It is a centralized test system which accesses remote points in order to originate calls into the line side of the CO under test. Once a test script is prepared for each CO location, the same test run can be executed with a minimal amount of manual labor – and should be done every time a new software load is installed in the CO.

Long Distance Carrier

From the *interexchange carrier's* (IXC) perspective, connectivity testing falls into two categories: access via the Telco; and network routing. The subscriber places a call through his Telco; it is the Telco's responsibility to send the call to the IXC. If this access is not performed properly, every participant suffers: the subscriber's call does not go through; the Telco does not collect access charges from the IXC; and the IXC receives no revenue for the aborted call. The direct economic loss, while difficult to quantify, is definite; and the indirect economic loss which results from the customer's loss of confidence and good faith regarding the IXC is of serious concern. It can prove devastating in

an arena where the customer is constantly bombarded with high-powered advertising from many carriers aimed at capturing subscribers from competitors; and while it may be intellectually ironic that a subscriber "switches" to another IXC because the *Telco* made a mistake and did not route the call correctly, the effect is the same as if the IXC had caused the problem.

An example of this is 800 service offerings. The end user makes an 800 call through his local operating company. The Telco translates the called number by its exchange and determines which IXC is to handle the call. The Telco then routes the call to the IXC's point of presence (POP) within the *Local Access and Transport Area* (LATA). There is no independent means to test this translation by the Telco; calls must actually be placed within the area where the Telco makes the IXC determination to verify the proper translation – generally at the Access Tandem.

Should the Telco route the call to the proper IXC, the call may still be blocked due to lack of available lines within the trunk group connecting the IXC to the Access Tandem. This is a dynamic problem which is only evident during periods of heavy traffic.

Call failures are particularly devastating for 800 service. Many 800 callers are responding to advertising and may call on a whim. Should the call not go through, the caller may simply forget about the call, and the advertiser (the IXC's customer) never receives either the call or a complaint. The whole purpose of the service is to make it as easy as possible to place a call, removing all pressure from the caller. Other more persistent callers may wish to place another call directly to the customer, but don't know the non-800 telephone number, and cannot. In both cases, the customer may never know about the loss of calls, and therefore not make a complaint to the IXC, making it impossible to resolve the problem. Additionally, 800 service is partitioned by each Telco to determine the proper IXC; and the determination is made by the *called* number rather than the *calling* number (ANI) which is used for extraction of presubscriber information. Since only 800 calls (and only some of those) are affected by this type of translation error, the end user is less likely to observe the problem and notify his Telco.

Independent from the problem of verifying access to the IXC's network from the Telco is the need to verify the IXC's internal routing and call connection times. Centralized testing from a single point of origin can exercise all points of a network between that point and any reachable terminating point. Generally, once a network is accessed, any terminating location can be reached with the suitable selection of a telephone number. If, for example, a network consists of a star configuration, where all calls are passed to a central switch and routed from that terminus, it is possible

to test all outgoing circuits connected to the switch. If the circuits are all truly two-way in nature, testing a set of lines in the outbound direction can provide some degree of functional testing of the inbound calls.

Distributed switching networks pose a more difficult testing situation. Calls are transferred between switching centers dynamically, and the actual path traversed by a single call depends upon the call's point of origin. It is possible to embed special routing codes into particular test numbers which force fixed routes to be taken. Depending upon how accurately these forced calls emulate actual call switching based on real traffic distribution, test results may or may not be reliable estimators of network statistics.

For the reasons of one-way circuits from the Telco, distributed routing, and questionable network emulation models, it is desirable for the IXC to be able to test its network by placing calls which originate from many different locations. ARONTS is a tool which supplies this capability, and permits testing the *actual* existing network under *real* dynamic conditions.

1.3 ARONTS Features

ARONTS is designed to assist network analysts and technicians in determining the operational state of a telephone switching system. It is intended to do the following:

- Detect incorrect translation tables
- Find dynamic trunk blockage
- Measure call placement times

Simultaneous test calls are made on as many as 48 test center telephone lines; while these lines are the source of the test calls, the actual test number is dialed from a remote location – the test center lines are used to reach the remote location in order to place the test call itself. Figure 1 shows the network test configuration.

Multiple originating points are used to place test calls; these points are referred to as *Sites*, and may be of several different types. Options are provided to create a site database and define the operational parameters for each site individually. Existing data files can be imported into ARONTS' database.

A set of *Test Numbers* and *Dialing Registers* are used to test the network. These telephone numbers terminate in 1004 Hz milliwatt test tones. Each number is handled in a different manner by the network system routing, and in general they terminate in different end offices. Successful calls traverse the network and return the milliwatt tone. All dialing patterns can be accommodated, including international calling, calling card 0+ calls, dial-up services, and reoriginated calls.

The time between the dialing of the last digit of the test number and the detection of the milliwatt tone is measured

for each test call to determine the call placement time. These calls are recorded to permit the extraction of *Wait Time* averages and standard deviations. The Wait Time average is used for comparison against network design goals, and the standard deviation is used as a measure of call placement consistencies.

Test call results are categorized as: *Milliwatt* (successful); *SIT*; *DTMF*; *Busy*; *Reorder*; *Ring*; *Voice*; and *Timed Out*. SIT tones are Special Information Tones which generally precede taped messages. These are sent by the Telco for situations such as incorrect dialing or blocked trunks. Some IXC's also generate these tones for network blockage. Call rejection DTMF tones sent by the IXC due to network blockage or other errors are captured and used to segregate the calls blocked by the network.

A schedule is used to control testing. A Telco or IXC switch can be *routined* with this list of defined test calls, or continuous testing via time scheduling (*Operation Tables*) intended to search for trunk blockages and measure network statistics can be done.

A monitor speaker and front panel selector switch allow the user to monitor the calls in progress, with related screen displays. *Specific tests* can be ordered by the system operator on demand, amidst the scheduled tests. Provision is made for *manually assisted* test calls. An external telephone is used to monitor the test call, which ARONTS places automatically; the disposition of the test is deter-

mined by the human operator, who enters a DTMF result code for the test. ARONTS logs the call without the necessity of manual paper shuffling. These test calls are generally used to verify that the correct carrier's Operator (0-, 00-) – or Information (411) and Repair (611) services – are properly reached. The number of simultaneous manually assisted calls can be as many as the number of ARONTS ports.

The system may also be used with direct connection to a CO or IXC switch via loop or ground start (optional) interfaces on the line side, or loop reverse battery interface (optional) to the trunk side of the switch. This last option permits testing with trunk protocols: wink signaling and MF tone generation, for testing Feature Group D access circuits.

The test system creates a variety of statistical reports. Report outputs can be imported into graphical packages for presentation. Often-used reports are easily made into custom *canned* reports, accessible with a single keystroke. A *Failure Log* records call detail on every failed (or, if requested, successful) call, including the precise DTMF or SIT tone sequence received and the connect (or failure) time. A user defined output file can be created containing test call detail for use in billing comparison, or import into spreadsheet or database packages for custom analysis.

ARONTS may be accessed for monitoring and control from a remote location via modem.

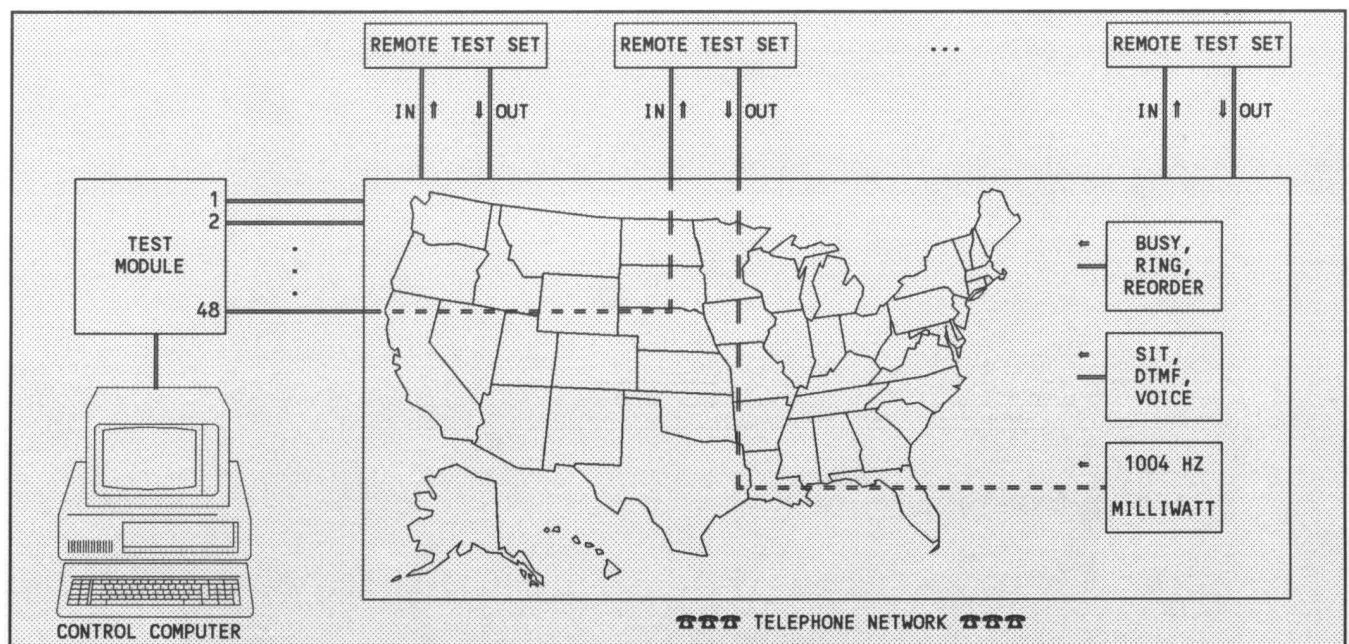


Figure 1: ARONTS Network

2. SYSTEM ELEMENTS

This section describes the basic hardware and software pieces which together constitute the Automated Remote Origination Network Test System.

2.1 Hardware Components

The test center consists of two hardware components: the Control Computer and the Test Module. Field locations contain Remote Test Sets described in section 3.2.

Control Computer

The *Control Computer* is an IBM-compatible PC. The computer is equipped with the following: a hard disk drive; a high density floppy disk drive; a parallel printer port; a serial interface on Com1; a modem on Com2; a minimum of 640k RAM; and MS-Dos.

The Control Computer handles all high-level system tasks. These include making the determination of which sites to test at a particular time; deciding which test numbers to use for each call; selection of appropriate command sequences to place different types of test calls; interfacing with the Test Module through the Com1 serial port; handling remote access of the entire system through the modem on the Com2 serial port; test result collection and logging; database creation and modification; and report generation.

Test Module

The *Test Module* connects with the Control Computer through a single RS-232 serial interface, and handles up to 48 telephone lines. Each test line connects to a line coupler which is in turn connected to a *Tone Controller*. The Tone Controller generates and detects the various required signals: DTMF, 1004 Hz, SIT, busy, reorder and ringback tones, and voice; regulates call timing parameters; and makes Wait Time measurements.

The line couplers are supervised by *Coupler Controllers*. These handle the on- and off-hook statuses of the lines and monitor for loss of loop current. The Test Module itself is controlled by a *Master Controller*. This board communicates with the Control Computer, and with the Coupler and Tone Controllers through an internal parallel communications channel.

The Test Module requires 2-wire DTMF capable loop start lines. Connection is through a standard RJ21X interface. One or two cables come out of the box terminated with 50-pin jacks. Circuit #1: tip/ring = pins 26/1; circuit #2: tip/ring = pins 27/2; etc. Circuit #25 (pins 50/25) is the line selected by the front panel switch, and may be connected to a butt set or equivalent for monitoring and manual assist testing. If more than one manual assist position is desired, the additional butt sets are paralleled with the port lines at the RJ21X connector, with a 200Ω

2-watt resistor in series. A standard non-electronic telephone instrument can be used in place of a butt set if a 1μf 400 volt nonpolarized capacitor is placed in series, with a Talk/Monitor switch shorting out the capacitor in Talk position.

Figure 2 shows a block diagram of a 12-port Test Module. See section 9 for a detailed description of the Test Module.

2.2 Software Elements

The Control Computer executes a set of programs to accomplish the various required tasks. These individual programs are transparent to the user; they are automatically called when the operator selects an option from the Main Menu. All programs and data files are manipulated by the control software so that it is not necessary for the user to be acutely aware of the individual elements; nevertheless, it is helpful for the operator's general comprehension of the system to have an overall knowledge of the various software pieces.

Upon powerup or system reset ({Control} + {Alt} + {Delete} keys simultaneously depressed) the computer *boots up* and executes a command file initializing various parameters. The test program directory is selected and a *batch file* immediately executes which performs further initialization, and sends control to the *Main Menu* program. This menu program offers system utilities and a path to the other testing programs. When the particular program terminates, control is returned to the menu program. An option is available in that screen to permit exit to the *Operating System*. If this is selected, ARONTS relinquishes control of the Control Computer directly to the user. This option should only be selected by computer literate operators.

Files

There are a number of data files manipulated by the programs. The user rarely deals directly with these files through Dos.

Setup File: Setup.Dat contains all of the information controlled by the *System Setup* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

Site Information File: Sites.Dat contains all of the information specific to the sites other than the Notes, and is controlled by the *Site Information* option from the Main Menu. Information is read from and written to this file on a site-by-site basis while in the Site Information View/Modify program.

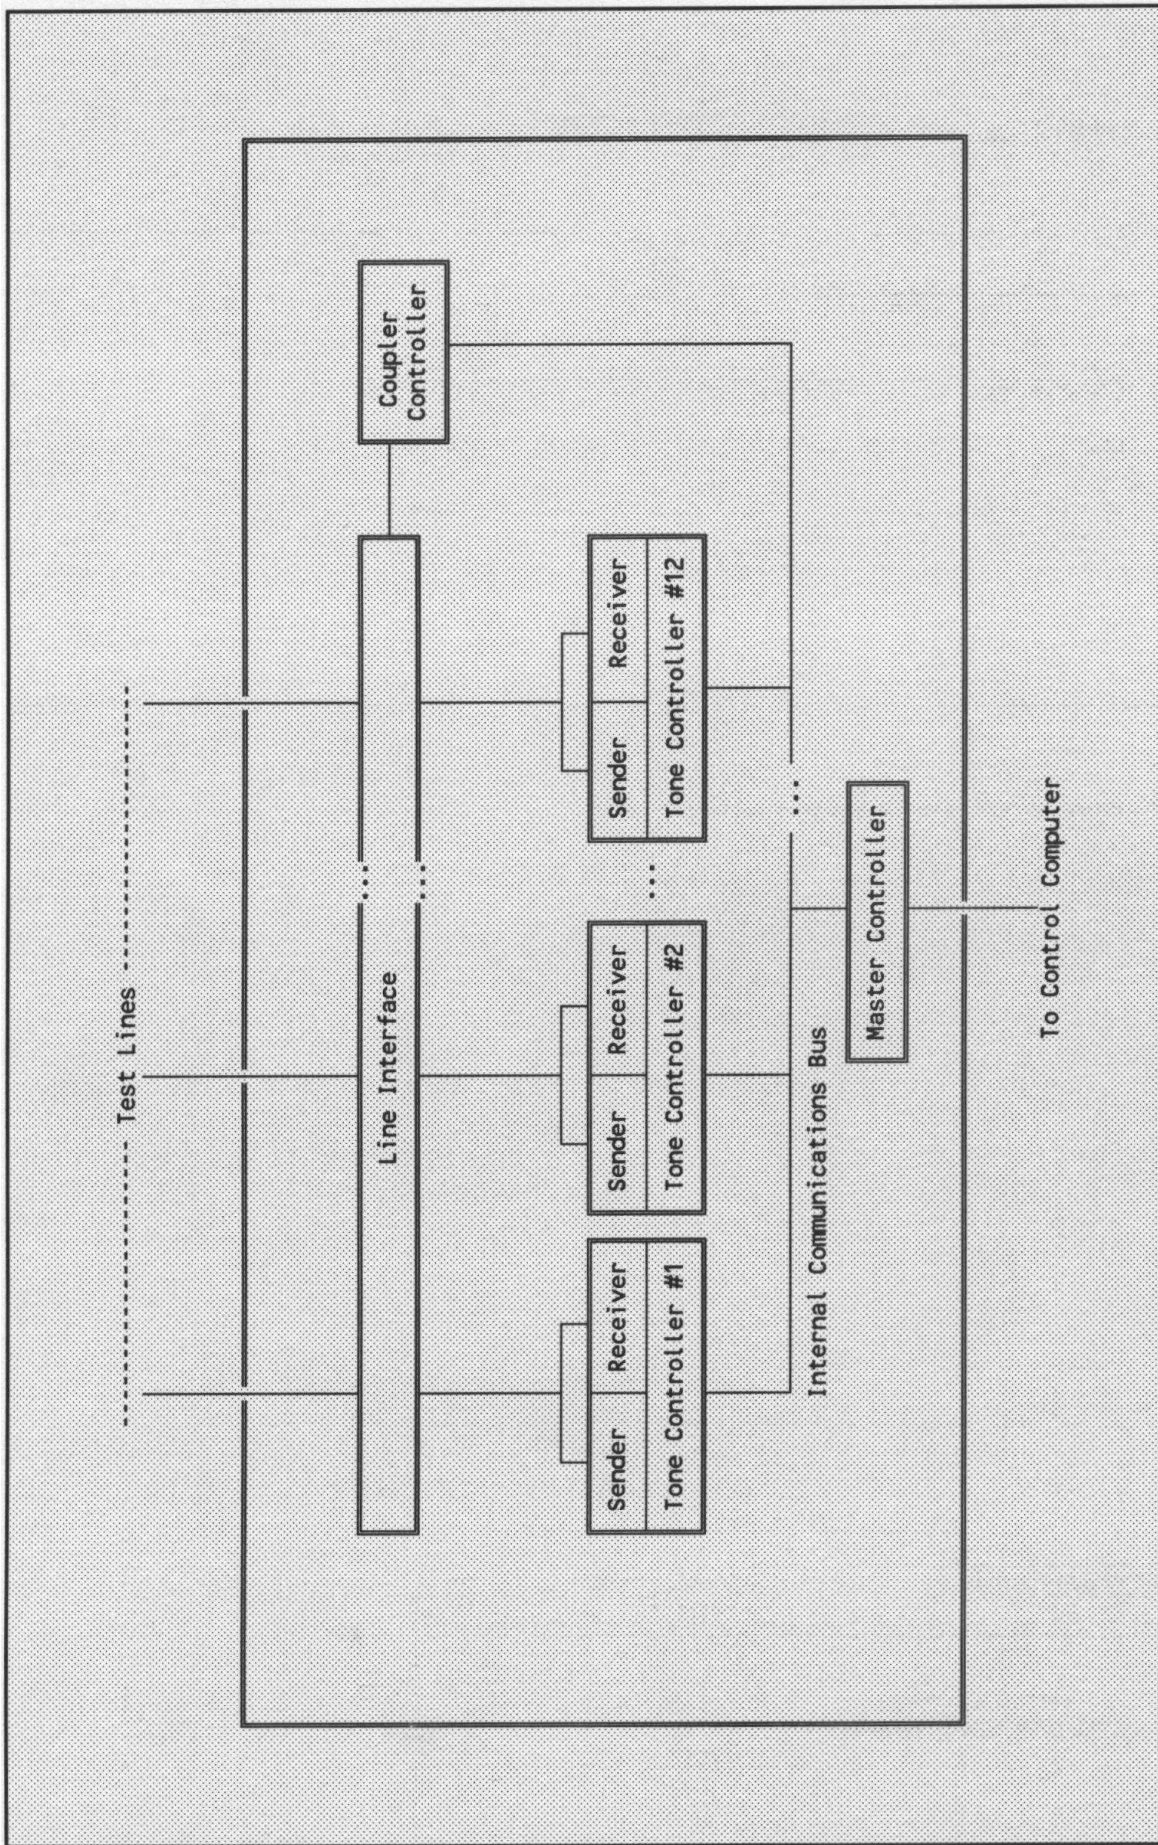


Figure 2: Test Module

Site Notes File: Notes.Dat contains the site Notes information, and is controlled by the *Site Information* option from the Main Menu. Information is read from and written to this file on a site-by-site basis while in the Site Information View/Modify program.

Test Number Statistics File: ResultsT.Dat contains information regarding the number of test calls, the average Wait Time, and the standard deviation of the Wait Time for successful tests, and peg counts for each of the unsuccessful call result types, broken down by test number. The file is updated when testing, and reports are generated from it through the *Test Analysis* Main Menu option.

Site Statistics File: ResultsS.Dat contains information regarding the number of test calls, the average Wait Time, and the standard deviation of the Wait Time for successful tests, and peg counts for each of the unsuccessful call result types, broken down by site number. The file is updated when testing, and reports are generated from it through the *Test Analysis* Main Menu option.

Failure Log File: Log.Dat contains the failures (or successes and failures if requested) detected during testing. It is read (and cleared) by the *Failure Log* Main Menu option as well as the *Test Sites* program.

Test Schedule File: TestSked.Dat contains all of the information controlled by the *Test Schedule* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

Test Definitions File: Test_Def.Dat contains all of the Test Definition information specific to the sites, and is controlled by the *Test Definitions* option from the Main Menu. Information is read from and written to this file on a site-by-site basis while in the Test Definitions View/Modify program.

Test Numbers File: TestNums.Dat contains all of the test numbers, controlled by the *Test Numbers* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

Dialing Registers File: DialRegs.Dat contains all of the Dialing Registers, controlled by the *Dialing Registers* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

Module Commands File: Module.Dat contains all of the commands sent to the Test Module at the start of the *Test Sites* option from the Main Menu. This file is

viewed and modified (not generally necessary for the user) by the *Module Commands* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

LEC Data File: LEC.Dat contains all of the LEC names, controlled by the *LEC Names* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

CO Descriptions File: CO_Desc.Dat contains all of the CO descriptions, controlled by the *CO Descriptions* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

State Names File: States.Dat contains all of the State names, controlled by the *State/Country* option from the Main Menu. Upon entry to the program, the entire file is read, and the user views and modifies this internal copy of the file. Upon exit, the file is updated if so selected by the user.

File Notes File: FileNote.Dat is the scratchpad provided by the *File Maintenance* option from the Main Menu.

Archive Files: TestSked.ZIP, Test_Def.ZIP, TestNums.ZIP, DialRegs.ZIP, and Module.ZIP are the compressed archives handled by the *File Maintenance* option from the Main Menu.

Custom Menu File: Custom.Bat is the Dos batch program file modifiable by the end user, and activated by the *Custom Menu* option from the Main Menu.

Canned Report Files: Any filenames selected to store keystrokes for use with the Analysis program, used by the *Custom Menu* option from the Main Menu.

Listing File: Printer.Txt is created by all programs when listings are requested.

Statistics Export File: D:\Report\Analyze.Txt is created by the Analysis program for export to graphics packages.

Output File: D:\Report\RawData.Txt contains user defined test call detail, and is created when testing. It is used by billing comparison programs or for export into spreadsheet or database packages for custom analysis.

Offloaded Files: Printer.Exe, Analyze.Exe, and RawData.Exe are self-extracting files placed in the directory \Aronts on floppy disks for transfer to other computers.

Resume File: Resume.Dat is created upon exit from testing, and read upon entry to testing when the *Resume Testing* option is selected from the Main Menu.

Program Files: *.Exe and *.Bat filenames.

File Handling While Testing

The *Test Lines* Main Menu option selects the testing program. Upon startup, various data files are read into memory. The Failure Log and RawData Output files are appended on a call-by-call basis. The files are not *closed* until the program terminates, so should power be turned off in the middle of the tester program, it is possible that the last records of these files would not have been written. For this reason, the program should always be exited by menu option.

The Results files are updated in different ways at differing times. Upon releasing a Site, the updated results totals for that Site are written to the ResultsS file. The updated results by test number are written whenever one of two conditions is met: a maximum number of test calls (nominally 500) have produced results; or a maximum period of time (nominally 1 hour) has elapsed. The results are written to ResultsT for every test number at that time. Should the power be turned off in the middle of the program, the results by site number are accurate up to the tests performed from the sites currently active on the system; and the results by test numbers are accurate up to the last time that update was performed. The data should be self-consistent as long as the power was not lost during the precise instant when the file was being written.

3. TEST CALL PLACEMENT

This section describes the logical progression ARONTS uses to place test calls. The selection of control files, order of accessing sites, and individual test call handling are discussed. The purpose of this section is to detail the parameters and related decisions which lead to the determination of how and when calls are made. File data structures relevant to these decisions are identified. The usage of actual program menus to implement these processes is discussed in section 6, and specific test construction is addressed in section 7.

3.1 File Versions

ARONTS always uses the *current version* of each data file (with the one exception of the Test Definition option, discussed in section 3.3). All current file versions have a Dos filename extension of DAT. The Test Schedule, Test Definitions, Test Numbers, Dialing Registers, and Module Commands (current) files can be *archived* with version numbers. Previously created files stored in the archives can be retrieved and made current. The above five files can be used in any combination of version numbers. Once the selected archived files are made current, the version numbers are transparent to all decisions (with the one exception noted above). The other files contain information which are not test dependent – the data is related to the current status of locations and equipment, which should constantly be kept updated.

3.2 Sites

The test call origin points are referred to as *Sites*. In general, ARONTS first accesses a remote site, and then places a test call from that point of origin. Tests may also be conducted directly from the ARONTS telephone lines: in this case, the ARONTS location is designated to be a site as well. Each Site has the following parameters specified: Site Number, Master Site Number, Local Exchange Carrier, Zone, Access Number, Access Register, Central Office Type, Site Type, Notes, Status, Shared Status, Conforming Status, State, LATA, Site CLLI, Tandem CLLI, and Originating Number(s). If the Site Type is RTS-1, the additional parameters of Test Code, Program Code, and 8- or 16-line units are present. If the Site Type is Coded Hot Shoe, the additional parameters of Access Code and Authorization Code are present.

The *Site Number* is assigned for reference purposes. It ranges from the value 1 to a maximum number of sites the software has been configured for, nominally 500. The files can be configured for a maximum of 25,000 sites. It is recommended that this configuration be kept to a maximum which is reasonably expected to be needed, as it keeps the

file sizes down and increases system speed. The files can be expanded to handle a larger number of sites should this become necessary. When configured at the maximum of 25,000 sites, approximately 11 megabytes of disk storage is used for the ARONTS program and data files.

The *Master Site Number* provides a means to group sites together which are accessed from the same point, or cannot be accessed simultaneously for any reason. ARONTS does not access more than one member of a Master Site group at a time. The Master Site Number can be any number within the range of valid site numbers, but normally is the actual Site Number of one of the sites in that group. For example, if Site Numbers 10-15 are in a single group, they each could be assigned Master Site Numbers of 10, indicating the first site in the Master Site group.

The *Local Exchange Carrier* (LEC) designates the telephone operating company covering the site location. Up to 9,999 LECs can be used, but an option is provided to reduce the maximum LEC number for speedier operation. This number can be changed by the user at any time without file reconfiguration.

The *Zone* can be used as a time zone, or a way to group sites for testing during different time periods. Options are provided to designate testing of sites within a specified time zone during each hour of the day. This is intended to be used to facilitate *busy hour* testing, permitting East, Central, Mountain, and Pacific time zone sites to be scanned during their respective peak traffic periods.

The *Access Number* is the telephone number used to reach the site. This is a bare telephone number, without any leading 1's or other dialing pattern dependent digits. This number can be either a *domestic* or an *international* type. Domestic telephone numbers are always 10-digits in length, and are separated into area code, exchange, and station fields for display. International numbers are from 1- to 12-digits in length, and are separated into two groups of 2-digits and one trailing group of 8-digits for display. These groupings have no purpose other than visual display clarity – no ARONTS decisions are based upon the digit separators.

The *Access Register* is a Dialing Register (section 3.5) which contains information as to how to dial the Access Number from the ARONTS location. It contains information such as wait for dialtone, dial 1 + 10-digits, or simply 7-digits for locally accessible sites, and trailing commands necessary to become authorized to use the site for call origination.

The *Central Office Type* designates the type of switching system used in the CO. It may include information

regarding software revision versions, as well as whether it is a digital or analog switch, etc. The purpose of this field is to permit a simple command to be given to test all sites subtending CO's of a particular type and software revision, without the necessity of manually compiling a list of such locations.

The *Conforming Status* is either Conforming or NonConforming. This field further describes information which, while deducible from the CO Type, makes it simpler to be able to test all conforming or nonconforming CO's without manually determining which CO types conform to Equal Access and which do not.

The *Status* is either *Activated* or *Deactivated*, and is used to enable or disable testing from the site. The *State* field is a 2-character field used to designate the state, province, or country of the remote site; the *LATA* field contains the Local Access and Transport Area number of the site; and the Site and Tandem CLLI fields contain an 11-character CLLI code.

Notes provides four 50-character lines of text which can be used for any purpose desired. Information such as contact people, office numbers, addresses, etc. can be placed into this area for reference purpose. ARONTS does not use this text for any decisions.

The *Shared Status* is either Shared or UnShared. RTS-1 sites can share incoming and outgoing lines with other systems (such as a PBX or a key telephone system). If the incoming access line is shared, the RTS-1 must be programmed to answer after several rings to permit the other equipment to answer first during business hours. It is therefore necessary to skip these sites for testing during business hours (and cannot be used for busy hour testing). Setting these locations to Shared permits these sites to be skipped during specified hours. Primarily intended for RTS-1 sites, this field can be used for Hot Shoe sites as well.

The *Originating Number(s)* is/are the ANI of the actual outgoing lines at the remote sites used to originate test calls. RTS-1 sites provide multiple outgoing lines per site, while Hot Shoe sites provide a single outgoing line. This field is used for two purposes: ARONTS can be set to access sites with a given area code (and exchange) of originating lines; and the complete originating number can be recorded in files used to compare test calls against billing records pulled from the CO switch, which contain the ANI of the outgoing test line.

The *Site Type* is either RTS-1, Hot Shoe, or Coded Hot Shoe.

RTS-1 Sites

MetroTel's *Remote Test Set*, model *RTS-1*, is used at remote locations to permit call origination using standard telephone lines. Two or more lines are required. To access the set, one of the lines is dialed; the RTS-1 answers the call

and accepts a test or program code. It provides a method to place a test call remotely with regeneration of DTMF digits at the remote site: after accessing, ARONTS commands the RTS-1 to place the call; the RTS-1 seizes an outgoing line, waits for dialtone, and redials the requested test number.

To knock the call down, ARONTS sends an appropriate code; the RTS-1 hangs up the outgoing line and waits for another command from ARONTS. In this fashion, ARONTS can choose to make as many test calls as desired once the remote RTS-1 has been accessed. The unit also provides a timeout option should the call not terminate as expected.

Remote Test Sets may be of any size (up to 56 test lines), and equipped with firmware version 2.1 to permit automated access of the part. Each Site Number can accommodate two modules (16 lines); sites with more lines than this are broken down into several Site Numbers, all with the same Master Site Number. If every line connected to the RTS-1 is required for use as an outgoing test line (there is no dedicated access line), more than one Site Number is assigned to the unit (with the same Master Site Number). This permits two different access numbers to be used to call the box, so that every line connected can be used to place test calls.

The *Test* and *Program Codes* assigned to the RTS-1's are entered into these ARONTS site fields. The site can be designated as a 1- or 2-module RTS-1 (8- or 16-lines).

RTS-1 sites provide greater capability through faster testing and local regeneration of DTMF tones. The units keep track internally of several peg counts, and ARONTS reads this information upon access.

Simple Hot Shoe Sites

A *Simple Hot Shoe* site is a location which provides a new dialtone after answering a standard telephone call. This second dialtone can be used to place calls. Naturally, these sites must be restricted in some fashion so that test or 800 (or at least non-toll) numbers only can be reached to prevent unauthorized abuse.

The protocol used to place test calls from these locations is to dial the access number, wait for a dialtone, and dial the test number. To disconnect the call, the originating line from the test center must be released. To place additional test calls the entire process is repeated.

Coded Hot Shoe Sites

A *Coded Hot Shoe* site is a location within the access tandem which provides a new dialtone after answering a standard telephone call, and is further protected by an Authorization Code and an Access Code. The *Authorization Code* is used to provide security, and the *Access Code* is used to select an end office connected to the tandem for test call origination.

The protocol used to place test calls from these locations is to dial the access number, wait for a dialtone, enter the Authorization Code, wait for dialtone, dial the Access Code, and dial the test number. To disconnect the call, the originating line from the test center must be released. To place additional test calls the entire process is repeated.

3.3 Test Schedule

The current *Test Schedule* specifies which sites are to be accessed for testing, how ARONTS ports are partitioned, which Test Definitions version is to be used (section 3.6), and the mode of testing to be used (routining or operation tables).

Partitions

ARONTS ports may be grouped into up to four different *Partitions*. While testing is being performed, each partition operates according to its own particular setting. For each partition, the Test Schedule defines: the ports belonging to each partition; the set of sites to be accessed; a Test Definitions file version to be used; and whether Routining or Operation Tables are to be utilized.

The sites to be tested can be specified by combinations of restrictions made on the fields in the Site file (section 3.2). This can be as simple as: test all Activated sites; test sites 3, 10, and 12; test all Conforming CO's; or test all sites in LATA 123 – or it may be a complex requirement such as: test all sites in the range of 400-900 which are in territory served by LEC's 23, 87, or 234, and have originating NPA/NXX's of (301)/363, (410)/833, (312)/xxx, (408)/946, or (913)/791, are served by DMS-100, Step by Step, or Crossbar CO switches, are in Maryland, Kansas, California, Illinois, or Missouri, are in LATA's 45, 87, or 233, have Site CLLI codes which match BALxxxxxxx or SANFxxxxxxx, have Tandem CLLI codes which match other masks, and are RTS-1 locations which are not shared. This example may have no actual matches; only a few of the field specifications are generally used at one time.

Routining

If Operation Tables are not specified for use within a partition, that partition operates in a *Routining* mode. In this mode, a set of tests is performed on a given set of sites, and it is deemed important for each of those tests to be executed until some type of result is obtained. This mode is useful for translation testing of new CO switches, switches upgraded with software revisions, or validation of billing, as several examples. When Routining (a CO, tandem, or IXC switch), the number of *Repetitions* for each test may also be specified (for that partition). Specifying more than one repetition is helpful when analyzing the test log: if a test fails once, but works other times, the problem may lie in trunking overload, alternate route choices, weak

tone generator/detector common equipment, or other variable quantities. If the same test fails on *every* occurrence, the problem is most likely a static translation error (or an unsuitable test). Tests are not repeated until every test has been conducted on all selected sites for the prior repetition – the repeated tests are spread out over a greater length of time than if they were repeated before going on to other tests.

Operation Tables

A partition can be set up to use *Operation Tables* instead of Routining. The purpose of this mode is primarily to scan a group of sites for dynamic connection problems. Inadvertent translation errors, trunk blockage, and alternate route selection errors can be detected in this manner. This mode of operation can also be used to gather averages on end-to-end connection times under *actual*, not simulated or modeled, conditions. These results are viewed more from a statistical point of view than an individual test basis, although any existing translation errors are certainly detected if they are exercised. Busy hour testing is most effectively performed in this operating mode.

Repetitions are not stated when using Operation Tables; testing is continuous. Which sites are to be accessed (of those picked for use in the partition) and how many consecutive tests are to be performed for each site changes on an hourly basis. The procedure works as follows:

- ① The date is checked to determine if it is a holiday
- ② If it is not a holiday, the day-of-week is checked
- ③ One of eight Operation Tables is picked: Sunday-Saturday, or Holiday
- ④ The hour of day is checked
- ⑤ The entry in the selected Operation Table for the current hour is used

Each entry specifies: a (time) Zone, or All Zones; whether to skip Shared sites; and the maximum number of consecutive tests to perform from each site. Typical usage is to perform one test during busy hour for each time Zone, in the attempt to check trunking from as many sites as possible in the limited time period, and to skip Shared sites during business hours.

When Operation Tables are being used, if a site is unavailable, or a test cannot be performed (because of a collision with other tests simultaneously being conducted on other ARONTS ports), these tests and sites are simply skipped. However, the sites selected are accessed in a cyclical manner, so that site repetitions do not occur until all other selected sites have been tried. Similarly, the tests defined for a particular site are handled cyclically, so that each time a site is accessed, the specified number of tests performed begin at the test after the last one conducted in the most recent access of that site.

One partition can be conducting Busy Hour testing with Operation Tables while another partition is handling Routining for static translation verification, with the same or different sets of sites. The types of tests to be performed may be different, so it is possible to specify a Test Definitions version number for each partition (each partition may have a different set of tests to perform, even for the same sites).

3.4 Test Numbers

Once a site has been accessed, a test is conducted by placing a call to a *Test Number*. These numbers are defined in a Test Number file, which contains bare telephone numbers, without any leading 1's or other dialing pattern dependent digits. The numbers can be of either *domestic* or *international* types. Domestic telephone numbers are always 10-digits in length, and are separated into area code, exchange, and station fields for display. International numbers are from 1- to 12-digits in length, and are separated into two groups of 2-digits and one trailing group of 8-digits for display. These groupings have no purpose other than visual display clarity – no ARONTS decisions are based upon the digit separators. Up to 3,000 Test Numbers can be defined per version of the Test Number file, and are referenced by numbers in the range of 1-3,000.

Most telephone numbers specify a single circuit termination, making it impossible to place more than one simultaneous call to the same number. ARONTS keeps track of the numbers in use on all ports, so that a Test Number in use on one port for one site causes that Test Number to be excluded from use on other ports and sites. Test Numbers which can have multiple simultaneous usage (and therefore terminate to a trunk group), such as 411 or trunked milliwatt circuits, can be marked as such. Test Numbers marked as Multiple are not excluded from simultaneous access on more than one ARONTS port.

3.5 Dialing Registers

Structures which state the dialing pattern used to place a telephone call with a given telephone number are referred to as *Dialing Registers*. These registers contain information such as wait for dialtone, dial 1 + 10-digits for toll calls, 0 + 10-digits for credit card calls, 7-digits for local calls, and trailing commands indicating what type of response to look for (such as a milliwatt tone). They are used either to access a site or to place a test call once the remote site has been accessed. Detailed descriptions of Dialing Register contents are found in sections 7.3 and 9.4.

Dialing Registers are referred to by number, in the range 1-500. Associated with each Dialing Register are four fields: Call Code, Out Line, Expected, and Continue.

A register's *Call Code* is a 3-character category of the test call type. This can be used as an equivalent to the numeric AMA call codes, when matching of billing files against test call files is being done, or for any other type of post-processing analysis of test call detail output. ARONTS uses this field only for display and logging purposes.

The *Out Line* specifies the output line number on which the test call is being placed at the remote site. Tests made from Hot Shoe sites should have the Out Line set to 1 (there is only one line available). Tests made from RTS-1 sites should have the Out Line in the ranges of 11-18 and 21-28. The first digit refers to the RTS-1 module number and the second digit the line number on that RTS-1 module. ARONTS uses this field as a pointer to the Originating Numbers stored in the Site file to find the actual Originating Number used in each test call for display and logging purposes. This field is associated with Dialing Registers because the codes to access particular RTS-1 lines must be contained within the Dialing Register itself.

The *Expected* field indicates to ARONTS what type of criteria to apply to the result of the test. If set to *None*, the call is made without either logging the test or accumulating statistics on the test result. If the Expected field is set to *RTS-1*, the call is being used to set parameters on the RTS-1, and an affirmative RTS-1 acknowledgement is expected. These calls result in either a *Success* or *DTMF* output, and are logged, but do not accumulate statistics (which are intended to be used for actual test calls). If the Expected field is set to *Milliwatt*, the test call is supposed to reach a 1004 Hz milliwatt number, and if so, is logged as a *Success*. Other categories which may result are: *SIT* (special information tone), *DTMF*, *Busy*, *Reorder*, *Ringin*g, and *Voice*. These results are logged and accumulated in the Statistics files (section 4.2). If the Expected field is set to *Manual DTMF*, the test call is supposed to be monitored by a technician/operator who listens to the test result and enters a DTMF code specifying the result of the test. A DTMF code of 0000 tells ARONTS to log the test as a Success; any other code is recorded as an error with the DTMF code included in the log for reference purposes. The code can be used to differentiate between a variety of incorrect results. These calls do not accumulate statistics. (The time it takes to reach a determination is included in the log output.)

An additional category for *all* Expected types is that of *Time Out*: if this occurs on any test call, the call is logged and statistics accumulated no matter what the Expected setting. Logging and the determination of the test result are covered in section 4.1. Independent from the Expected field setting, the contents of the Dialing Register must contain the appropriate commands to accomplish the discrimination between various test termination possibilities desired.

The *Continue* field permits a Dialing Register to be "chained" to another Dialing Register. This can be used for two purposes: longer Dialing Registers and dependent tests. Dialing Registers are constrained to a character length of 100 digits (when expanded, section 7.3). If it is necessary to construct a Dialing Register which is longer than this limit, the first register should have its Expected field set to None and its Continue field set to the number of the Dialing Register which is being used to continue the (single) test. There is no limit to the number of linked Dialing Registers, but it is recommended that it be kept to the minimum necessary. The last register in the sequence should have its Expected field set to the desired result, with all predecessor registers set to None.

Dependent tests are tests in which it is necessary to first accomplish some action in order to reach the state where it is possible to make the desired test. An example of this is call reorigination. Typically, these calls work as follows: either a 0+ credit card call is made, or a call to an 800-number followed by an authorization code and dialed number is made. In both cases, an actual complete call is accomplished (for test purposes to a milliwatt number). While the call is in progress, a long DTMF # returns the caller to a prompt to place a subsequent telephone call, *without reentering credit card or authorization numbers*. In order to be able to test the reorigination feature, it is first necessary to place the original call; this is done by the first Dialing Register. That register is then Continued with another register which contains the codes to send a long DTMF # and redial the test number. In these cases, both Dialing Registers should have their Expected fields set to Milliwatt, so that the progress of the test call can be logged. If the first register's Expected field is set to None, the call proceeds the same except that the first test result is not logged.

3.6 Test Definitions

The Test Schedule specifies which sites are to be accessed for testing. The Site file contains static information regarding the site itself and how to access it. A separate file contains *Test Definitions* which state which Test Numbers and Dialing Registers are to be used once a site is accessed. The Test Definitions file contains a separate list of Test Numbers and Dialing Registers *for each individual site*. A description of the information for a single site number follows.

Five *Groups* of test calls are provided, numbered from 1 to 5. Each Group contains: a Dialing Register used to place the test call; the total number of Dialing Registers used to place the test calls; and a list of Test Numbers for use with those Dialing Registers.

More than one Dialing Register is used to place repetitive calls to the same Test Numbers for primarily two purposes: testing on different RTS-1 outgoing lines; and placing identical calls using different 10xxx IXC selection codes. As a first example, if there are four types of CO lines in which the list of Test Numbers should terminate properly, located on RTS-1 lines 14 through 17, and Dialing Registers 114 through 117 reflect these dialing codes, then the Test Definition specifies Dialing Register 114 with the number of tests set to 4. ARONTS starts with the stated Dialing Register. After placing calls to all listed Test Numbers with that register (in this example, 114), it advances to the next consecutive register (115) and repeats the test calls to all listed Test Numbers. In this case, the same test calls result on all four RTS-1 outgoing lines. A second example has the consecutive Dialing Registers identical except for varying 10xxx codes, so the test calls are repeated for every IXC indicated within a Dialing Register. This can be executed with either RTS-1 or Hot Shoe sites.

The list of Test Numbers used within a Group can contain up to 100 different Test Numbers, constrained to a range of 100. (In other words, the largest number minus the smallest number must be no greater than 100.) If a Test Number outside this range is required, it is put into a different Group.

If more than five Groups are required, the *Continue* Test Definition field is used to continue with a complete Test Definition for a different site number. This subsequent site number should be unassigned to an actual site, or it would not be possible to enter Test Definitions for *that* site. (Although it is possible to have versions of Test Definitions which address fewer sites with more complex, continued entries.) The Test Definition Continue field is completely separate from, and is not related to, the Dialing Register Continue field.

The Test Definitions file is the only data file which does not necessarily use the current file version. The Test Schedule for each partition specifies either the current version, or an explicit Test Definition version number. This permits different tests to be performed on identical sites on different ARONTS partitions. Each partition may be assigned to test different service offerings. Although different Test Definitions can be used on each partition, all partitions use the current versions of the other files: most notably, the Test Number and Dialing Register files. These files must contain a superset of all Test Numbers and Dialing Registers for the various Test Definitions used simultaneously.

3.7 Setup Parameters

ARONTS provides the ability to vary system wide *Setup* parameters. The number of ports and telephone lines connected to the hardware can be specified, along with the maximum LEC and Test Numbers (sections 3.2, 3.4). The RawData output file (section 4.4) can be turned on or off, and fields defined for that and a Report file (section 4.3). RTS-1 information collection can be enabled or disabled (section 4.2). Successful tests can be marked for logging (section 4.1). A credit card number and a secret authorization code can be entered to simplify usage within Dialing Registers (section 7.3) and keep these sensitive codes protected. Passwords can be changed as authorized ARONTS users fluctuate.

3.8 Site Access

When site testing is begun, ARONTS starts a process of finding site matches according to the specifications contained in the Test Schedule partitions. As site matches are found, they are assigned to ARONTS ports by partition, and access calls are made. Calculation of site matches continues until all site numbers have been checked.

The number of sites scheduled for Routining multiplied by the number of Repetitions specified for each respective partition is displayed (as calculated). Partitions using Operation Tables are not included, as they are continuous. The number of sites completed is updated when all defined tests for a site are finished. Only site completions for partitions for which Routining is specified are counted for display. As a result, when the completed sites reaches the scheduled sites, all Routined tests have been completed – but partitions using Operation Tables continue testing.

If testing is stopped prior to all scheduled tests being completed, and the Resume Testing option is selected, ARONTS picks up where it left off as far as site access is concerned. All defined tests for each site accessed are performed, even if some had been completed in the previous run; but previously completed sites are not reaccessed (for that Repetition iteration).

Partitions set for Operation Tables access the first matching site past the last which was completed in previous Operation Table tests for any partition. If this next scheduled site is in use on any ARONTS port, it is simply skipped. It is also skipped if the Master Site number for the potential next site is the same as the Master Site number of any site in use on any ARONTS port.

Partitions set for Routining access the first matching site found which is not in use on any ARONTS port, and does not have the same Master Site number as any other site in use on any ARONTS port. The sites may not be accessed in numerical order because sites are inaccessible due to

usage in other partitions, or identical Master Site numbers are encountered. All matching sites are completed in a partition for a particular Test Schedule Repetition iteration before those same sites are reaccessed for the next iteration. Near the end of accessing the last few sites within a partition, all ARONTS ports may not be filled for a short period of time while the last few sites are completed. When a Repetition iteration is completed, the ports in the partition are freed for new accesses.

Once a site is accessed, it remains accessed until all defined tests have been completed. Hot Shoe sites are reaccessed for every test call until all tests are finished.

ARONTS makes up to three successive attempts to access a site – if none are successful, the failure is logged and the site is skipped.

3.9 Test Number Selection

After a site has been accessed, ARONTS makes decisions as to which Test Number/Dialing Register pairs are used to place test calls. In general, the ordering for such tests is as follows:

Test Definition
Group
Dialing Register
Test Number

Barring any collisions, this means that all listed Test Numbers for Group 1 of the first Test Definition (that of the Site Number) are used from lowest number to highest number with the Dialing Register specified for Group 1. When the last Test Number is finished, the Dialing Register is incremented (assuming that more than one is specified), and the same group of Test Numbers is used again from lowest to highest. When the last Dialing Register for the Group is completed, the next Group in the Test Definition is used in the same fashion. When the last Group is finished, the next Test Definition is used (assuming that it is continued). This process repeats until all Test Numbers are used with all specified Dialing Registers of the last Group of a Test Definition which is not continued. Tests are conducted in partitions using Operation Tables in precisely this order; whenever a Test Number not marked for Multiple use is encountered which is in use on another ARONTS port, that particular test is simply skipped.

Test selection behavior is somewhat different in partitions which are Routining. If no collisions are encountered, the ordering is as stated above. When an unavailable Test Number is encountered, it not simply skipped; instead, the first Test Number found in any Group of the current Test Definition which is available is used with its first corresponding Dialing Register. When the last Test Number in a Group is finished, the next Dialing Register for that

Group is selected. The Dialing Registers have no bearing upon which Test Numbers are selected; however, the next Dialing Register in a particular Group is not used until all Test Numbers have been used for the current Dialing Register. When all Dialing Registers have been used with all Test Numbers in all Groups in a current Test Definition, the next Test Definition is fetched; operation continues identically until the last Test Definition is completed.

Routining makes it possible for no Test Numbers to be available at a certain time for a particular Site and port. Should this occur, ARONTS places that site and port into the *Paused* state; no tests are issued for that site until a Test Number becomes available due to being relinquished by another site and port.

RTS-1 sites remain connected to ARONTS until all defined tests have been completed. If the RTS-1 site is lost for some reason ARONTS reaccesses the site. Hot Shoe sites are reaccessed for every test call until all tests are finished. ARONTS makes up to three successive attempts to reaccess a site – if none are successful, the failure is logged and the site is skipped.

3.10 Specific Tests

ARONTS normally places calls according to the Test Schedule. Provision is made, however, for a test to be conducted immediately by operator command. This may be desired in order to monitor a test aurally which failed in a previous automated execution; or a reported problem has supposedly been corrected and a quick verification of proper operation is wanted. Two types of *Specific Tests* can be made: perform one test using a specified Test Number/Dialing Register pair for a specified Site; or perform all tests defined in the current Test Definition for a specified Site. In both cases, it is first necessary to access the desired Site.

When a Specific Test is requested, ARONTS first determines if that Site is currently accessed on any port. If it is, the test in progress on that port is first completed, and then the requested Specific Test begins. If the Site is not accessed at the time, ARONTS waits for any port to become available. In order to accelerate this process, if all ports are otherwise occupied, new tests are not initiated on any ARONTS port; the first port which completes its current test releases its Site, making the port idle. The Site which was effectively dumped (gracefully) is *not marked* as completed (if Routining). That site will eventually be reaccessed and all tests executed (the same as if testing had been terminated and subsequently resumed). If the dumped Site's partition is using Operation Tables, no special action is taken with regard to the dumped Site.

If a single Specific Test was conducted and the Site was already active, when the Specific Test is completed the port returns to its scheduled operation. If the Site was accessed just to perform the Specific Test, it is released and the port freed for the next site access.

If a Specific Test is performed requesting all defined tests, the Test Definitions file version of the partition in which the test port is located is utilized for those tests.

If *only* a Specific Test is desired without other scheduled tests automatically being performed, two simple mechanisms can be used to do so: a previously created single partition Test Schedule with no matches can be retrieved (after archiving the current Test Schedule if it had been modified); or, if the last time testing was done, Operation Tables were not used, and all tests were completed, the Resume Testing option results in no automatic tests, since no scheduled tests remain. A good Test Schedule which guarantees no matches has one site entered into the Site match list, and both Activated and DeActivated set to No. This eliminates ARONTS' searching all available sites for matches; only the one site entered is checked (and not matched).

3.11 Module Commands

A *Module Commands* file is used to initialize the Test Module prior to beginning a test session. It is not generally necessary for the end user to deal with this information. If special circumstances require changes to the default settings, a thorough understanding of section 9.3 is essential.

Included in the Module Commands are four Dialing Registers which are used automatically by ARONTS software. These can be altered to modify operation.

Dialing Register A is used to command RTS-1's to transmit their peg counts; B is used to command RTS-1's to hang up; C programs a delay for RTS-1's when a port is Paused; and D is used to regain control of an RTS-1 if the conclusion of a test call does not achieve the RTS-1 prompt. This last situation is most likely to occur if a strong voice recording follows a SIT tone sequence, or if only a voice recording results from the test call: in these cases, it is possible for the voice to interfere with ARONTS' *release circuit* command (####). The default register D effectively regains control of the remote unit in seconds.

The above four Dialing Registers have no correlation with the numbered Dialing Registers 1-500 accessible to the end user. Every time a numbered register is used, that information is temporarily (automatically) stored into the Test Module's register Z, and used for that action only.

4. REPORTING

This section describes the mechanisms ARONTS provides to obtain and analyze test call results. The use of failure logs, built-in analysis tools, and data export to other analysis packages are discussed. The purpose of this section is to detail the types of information which is recorded and the ways in which it can be manipulated. Elemental programming tools relevant to these goals are detailed. The usage of actual program menus to implement these processes is discussed in section 6.

4.1 Failure Log

Every test call placed with a Dialing Register with any Expected field other than None can potentially add an entry to the *Failure Log*. When each test call ends, a *Log Code* is assigned to the test dependent upon the type of result. If the setup parameters call for logging of failures *only*, log codes in the range 101-199 are added to the log; if the setup parameters call for logging of successful *and* unsuccessful tests, log codes in the range 100-199 are added to the log. The log is primarily intended to be a *Failure Log*, corresponding to the first situation; out of the thousands of test calls made, only the ones which require attention are logged as further action required. When routining, and recording only failures, when the session is completed, *all* scheduled tests have been completed successfully *except* for the ones recorded in the Failure Log; note that some codes indicate an entire Site was skipped. A good reason to log successful in addition to unsuccessful tests is to verify operation the first time a new Test Definition is run; every test call is recorded. Once the Test Definition is verified for accuracy, subsequent runs can be made logging failures only.

The Failure Log can be displayed and printed either while testing is in progress, or from the Main Menu. The former ability is provided mainly to permit the user to quickly monitor the progress of testing without halting that testing. It is also possible to have the system "beep" on every addition to the Failure Log to alert the operator of test failures.

When the Failure Log is called up from the Main Menu, an option is provided to extract from it log entries restricted to a single Site Number. This may be used if multiple site testing is being performed, but different individuals are responsible for correcting problems at different sites – separate display and printout can be made for the site selected.

The Failure Log contains all pertinent information relevant to the test in question, and can be displayed on screen or printed out in several ways. DTMF digits received are included in the log entry, as well as SIT codes.

These codes are detailed in section 6.5.2, along with a listing of Log Codes.

4.2 Test Analysis

Test call statistics are collected independently from test call detail recordation in the Failure Log. All test calls (other than those made with Dialing Registers with an Expected field of None) which achieve any type of result update two files: *Site Statistics*, and *Test Number Statistics*. These two files keep call statistics broken down by Site and Test Number, respectively. Peg counts of Milliwatt, DTMF, SIT, Busy, Reorder, Voice, Ringing, and Time Out are kept. In addition, the average and standard deviation of the time required to reach successful milliwatt signals are included. This can be used as a quality measure for connect time, and comparisons by originating location (Site) and terminating location (Test Number) are easily retrievable.

The statistics files can be zeroed to begin a new data collection set when necessary. The *Analysis* program provides the ability to extract individual Site and Test Number statistics, as well as totalling categories of sites for average combined results. For example, connect times can be compared after conglomeration over all sites grouped by type of Central Office.

Site statistics are also retained regarding the number of times each site has been accessed by ARONTS, unsuccessful access attempts, and for RTS-1 sites, access information retrieved from the remote unit itself at its last ARONTS access.

4.3 Canned Reports and Custom Analysis

The previous section mentions some types of reports which can be produced with interactive use of the Analysis program. Certain types of reports may be desired on a repetitive basis. These reports differ among ARONTS users, so the software provides a means for each ARONTS user to simply create any desired "canned" report. The canned reports can be created either from the Dos command line or from the *Custom Menu*. After a canned report is created, it can be run from the Custom Menu. A report referred to as *Report #1* can be created from the Dos command line with the following Dos command (from within the \Aronts directory):

```
C:\Aronts> Analysis Create Report.001
```

Any valid Dos filename can be used in place of Report.001. The normal Analysis package runs; the desired report should be created interactively. When the Analysis program is exited, the file Report.001 is created.

To run the newly created report from the Dos command line:

```
C:\Aronts> Analysis Execute Report.001
```

The above procedures assume that a printout was requested by the canned report. It is also possible to "can" an analysis session up to a particular point, and return control to the user. This is done by creating a report as above, up to the point where the desired screen display is achieved, and then typing ^Z. The report file is ended at that point. When the report is executed, it stops at that same point with the desired screen display.

The Main Menu provides an option for a Custom Menu. This is simply a Dos batch file which is easily changed by the end user to serve whatever purposes desired. Single keystroke execution of previously created canned reports is the major intended use. For example, canned reports which create a listing can be run without any screen display at all from within the Custom Menu with the following invocation in the batch file:

```
Analysis Execute Report.001 > Nu1
```

The result is a specialized report automatically coming out of the printer with a single keystroke request.

The batch file makes use of program utilities WriteScr, GetInput, and RemoteOp. These programs provide the ability to write to particular places on the screen, including display attributes; get single-character input; and test whether the system is under remote operation. These programs work whether the system is under local or remote control. Other non-ARONTS programs and utilities may be included inside the custom batch file, but they will not operate via remote control unless they use the *Dos Standard Input and Output*. Creation of custom menus is covered in more detail in section 6.5.

Import of Statistics into Graphics Programs

The Analysis program can create an output file containing the same types of information as is created for visual examination, but formatted for interface with other packages. This report file resides in the Dos directory D:\Report with filename Analyze.Txt, and is a pure ASCII file. This file can be exported to any spreadsheet, database, or graphical analysis package to permit custom graphs, charts, and other report formats to be made. This can be performed manually at the Dos prompt, or incorporated into the Custom Menu. A canned report can command the Analysis program to create the Analyze.Txt file, which can then be followed by appropriate batch commands to import the file into other programs and output a specialized graph without additional user input. Setup parameters specify the exact format of this output file. See sections 6.4.1 and 6.5 for more detail.

4.4 RawData Usage

In addition to the Failure Log and the statistics files, a separate output file can be created containing test call detail. This output file resides in the Dos directory D:\Report with filename RawData.Txt, and is a pure ASCII file. Setup parameters specify the exact format of this output file, and Log Codes which act as a filter for file creation: records are only written for test results which match a user specified list of Log Codes.

RawData.Txt can be used for billing comparison purposes. Billing records extracted from a CO or tandem switch containing the records for the test calls can be compared with another program against the RawData.Txt file created by ARONTS.

Specialized analysis beyond the built-in ARONTS capabilities can be done using any desired database program by importing RawData.Txt. Section 6.4.1 discusses the file formats.

5. UTILITY FUNCTIONS

This section describes several utility functions ARONTS provides to facilitate ease of operation. File maintenance features, import of data from other databases, and remote operation are discussed.

5.1 File Maintenance

The current Test Schedule, Test Definitions, Test Numbers, Dialing Registers, and Module Commands files can be given version numbers and stored in the archives, and previously stored file versions can be retrieved from the archives under the *File Maintenance* Menu option. A notepad is available on-line under *File Notes* which can be used to document the uses of the various versions of each file type. Other File Maintenance options are with regard to backing up and retrieving ARONTS files to and from floppy disks.

Floppy drives A: and B: (if B exists) can be used to format disks from the menu preparatory to usage. Several *Offload* provisions are present to remove files from the ARONTS Control Computer for transfer to another MS-Dos machine for processing. The *Analyze.Txt* and *RawData.Txt* files (sections 4.2, 4.4) can be copied to floppy disk by menu command. A listing file, *Printer.Txt*, also may be offloaded. Many of the ARONTS menus offer a *List* option. All List options create the file *Printer.Txt* (overwriting the last listing). If the printer is placed on-line prior to requesting a listing, the specified output (*Printer.Txt* file) is automatically sent to the printer. The *Printer.Txt* file is created whether the printer is on- or off-line. The File Maintenance option to *Offload Printer.Txt* can be used to extract the most recent print file no matter if it were previously printed or not. This can be used to print the report on another system and printer, or to transfer the report to another location via electronic mail without the necessity of handling paper and using facsimile equipment.

The Offload option places the appropriate files in a directory on the floppy disk, \Aronts, with filenames of *Printer.Exe*, *Analyze.Exe*, and *RawData.Exe*. These are self-extracting compressed files. The printer file can be transferred to the target computer system by issuing the command:

```
A:\Aronts\Printer
```

on the target machine with the current directory set to the location where *Printer.Txt* is to be placed. If the disk drive is not A: it should be replaced with the appropriate drive letter; the other two files are handled in the same manner with *Analyze* or *RawData* replacing the *Printer* command.

Backup/Retrieve options display all ARONTS data files, their size, date of last revision, and whether the file was changed since its last backup. Menu options permit file backup and retrieval, automatically compressing and expanding files. File splitting with multiple disk handling ensures that backups can be made no matter what size the file.

Section 6.5.3 covers these menu options in more detail.

5.2 Other Menu Utilities

Simple Main Menu options are provided to *Terminate Print Job*, which is used to stop a listing mistakenly sent to the printer; *Wipe RawData*, which deletes the *RawData.Txt* output file; *Zero Statistics*, which clears the statistics files; *Revise Date*, *Hour/Minute Change*, and *Exit to Dos*.

5.3 Remote Access

The Control Computer can be accessed with a remote data terminal through an internal modem. Remote access can be initiated when the system is in the Main Menu or is Testing. Once remote control is achieved, all menu options can be utilized. This permits remote control of all ARONTS functions. The modem does not answer the line if the Control Computer is performing any other function (including sitting at the Operating System).

Local Effects

When a remote user dials the modem on the Control Computer (in the Main Menu or Testing Lines), a message pops up on the bottom line of the screen stating that remote access is being attempted. While this message is present, the local user cannot control the computer. If the attempt is unsuccessful, the message disappears, and normal operation resumes.

Once remote access is established, the display screen clears and displays a message stating that remote control is in effect. If the local user wishes to override the remote accessor, the modem telephone line should be disconnected; within a short period of time the console is restored.

Remote Location

The remote user must use an ANSI terminal or communications package operating in the ANSI mode. Asynchronous modem speeds of 300, 1200, and 2400 bits per second may be used, with 8 data bits, no parity, and 1 stop bit. The remote user must dial the modem line, and when prompted, enter a password. Two chances are given to do so successfully. If more than seven seconds elapse between password characters, a timeout occurs, and the communications attempt is aborted.

Once access is validated, all menu options can be accessed. The Main Menu and Test Sites Master Display show an additional option: *Hang Up Modem*. This option is used to return control to the local user. If modem carrier is lost accidentally, the remote user should call back in and hang up through the menu option.

The arrow keys function identically to local use. The special function keys are not available on an ANSI terminal. The following control characters replace the displayed keyboard character instructions:

Key	Remote Replacement
Escape	^A
Insert	^B
Delete	Rubout
Page Up	^R
Page Down	^Y
Home	{Up Arrow}
End	{Down Arrow}

Communications packages may be set to map these keys to the above control codes, making remote operation identical to local operation.

5.4 LoadSite

Much of the ARONTS data entry requirements involve setting up the Site file through the Site Information menu item. If an existing MS-Dos database is available with information on some of these fields, it can be imported into the ARONTS structures with the utility program, LoadSite.Exe. A text file must first be created from the existing database and used as follows.

LoadSite is used to read an input file to modify Sites.Dat and Notes.Dat. It creates an output file which can be used to verify that the input file was syntactically correct and that the appropriate fields have successfully been written. Invocation from Dos is:

```
C:\Aronts> LoadSite < inputfile > outputfile
```

Standard MS-Dos input and output is used, so the program may be exercised with a simple LoadSite. Doing so causes input to be directed from the keyboard, and output verification goes to the screen. When used with files, the input and output files are ASCII text files. Each line in the file specifies one field of one site record to be updated. All parameters on the line are separated by one or more spaces. However, the output file contains only one space separating the fields, so if a simple compare operation is to be performed, the separators in the input file should be one space as well. Each line contains three entries: the site number, the field number, and the field data:

```
123 16 12
```

In this case, field 16 for site #123 is written with value 12 (Lata 12). When complete, the Dos command:

```
C:\Aronts> Comp inputfile outputfile
```

can be used for verification. The sample files LoadSite.In and LoadSite.Out can be examined for illustration.

The fields are as follows:

- 1: Master Site
- 2: LEC #
- 3: Zone
- 4: Access Number
- 5: Access Register
- 6: CO #
- 7: Site Type
- 8: Activated/Deactivated
- 9: Notes Line #1
- 10: Notes Line #2
- 11: Notes Line #3
- 12: Notes Line #4
- 13: Shared/Unshared
- 14: Conforming/NonConforming
- 15: State Name
- 16: Lata
- 17: Site CLLI
- 18: Tandem CLLI
- 19: Originating Number

Fields #4 and #19 are telephone numbers, and must be 12 digits enclosed in double quotes. Domestic numbers should have the first two digits as spaces, followed by the 10-digit telephone number. For example, " 4109361212" represents (410) 936-1212. International numbers must begin at the first spot and be filled with trailing spaces to make up a total of 12 digits. For example, "123456789 ". Originating numbers (field #19) for RTS-1's are stored as line #11.

The Site Type (field #7) consists of the values 1-4, as follows:

- 1: One module RTS-1
- 2: Two module RTS-1
- 3: Simple HotShoe
- 4: Coded HotShoe

Fields #8, #13, and #14 consist of the values 0 and 1. 1 corresponds to True (Activated, Shared, Conforming) and 0 corresponds to False (DeActivated, UnShared, NonConforming).

Fields #9-#12 are 50 characters enclosed in double quotes.

Field #15 is a two-character state name enclosed in double quotes, and fields #17 and #18 are eleven-character CLLI codes enclosed in double quotes. Upper and lower case entry is possible with each of these three fields, but are converted to all upper case in the site file as well as the output check file.

6. MENU OPERATION

The user is shown display screens providing information as to what actions can be performed. In all cases, each valid keystroke is shown on the screen. It either appears as a **Bold** character, or is enclosed in curly brackets, such as {Enter}. Some screens show the option: {Arrows}. The {Up}, {Down}, {Left}, and {Right} arrow keys are used to move the reverse video option on the screen. In some cases, only the Up/Down or Left/Right arrows are used. The {Left Arrow} key is distinct from the {Backspace} key. The two {Enter} keys are treated identically. Upper and lower case characters are indistinguishable. The Num Lock key on the right side of the keyboard controls whether the keys in the right hand keypad function as numbers (if the Num Lock key is illuminated) or as arrow or function keys. It is preferable to leave the Num Lock on, as the special keys are available immediately next to the keypad. Invalid keys generate an alert beep.


If a printer is connected and is on-line, any currently displayed screen can be printed by depressing the **Print Screen** key. Separate menu options are available for printing larger amounts of information at one time. All such **list** options create the file `Printer.Txt`, and print it if the printer is on-line. To prepare a listing for transfer to another computer system, the list option is used with the printer off-line, and the file copied through the *File Maintenance* menu.

The program menus are intended to be succinctly self-explanatory to those generally familiar with ARONTS parameters and structures, covered in earlier sections. A description of the screen options is supplied here as further explanation. The screen displays printed in this manual are samples only; information is representative of the field contents, *not* real data. The reproduction reductions make it more difficult to pick out the **bold** characters depicting valid keys than on the video monitor; these are clearly evident as bright characters when executing the software. The printed screens use black characters on white paper – the actual screens display white characters on a dark background. Reverse fields are black characters on a white background on the video monitor, and the opposite in these reproductions.

6.1 Main Menu

The *Main Menu* (Screen #1) automatically appears after system reset and reappears when the selected option is complete. The upper right corner of the display shows the current date and time. Should the date or time be incorrect, utility options can be used to make corrections. The free space on drives C and D is also shown. If the Control Computer is not used for any purpose other than ARONTS, free space on Drive C should not change significantly except when new file versions are stored in the archives.

The Failure Log and the printer output file are the only variable length files on this drive, and should routinely be cleared. The printer file is cleared on each listing. Drive D contains the ASCII output file, and can grow large if this option is left active and not wiped out periodically.

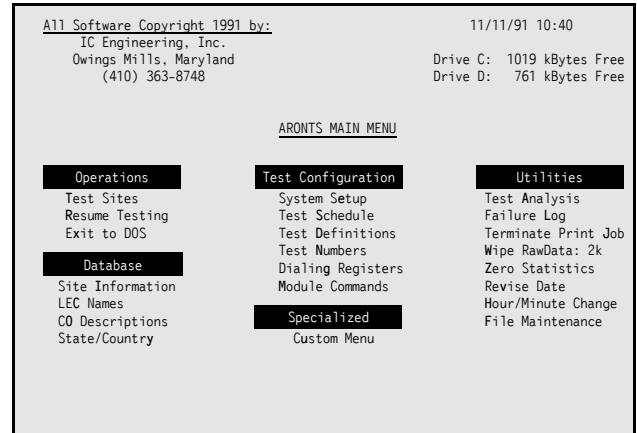

Screen #2

The Main Menu options are grouped into five categories: *Operations*, *Database*, *Test Configuration*, *Specialized*, and *Utilities*. To select an option, the single key displayed in **bold** is entered.

6.2 Operations

The operations section is used to test sites, resume previously interrupted testing, and exit the ARONTS environment.

6.2.1 Test Sites

The testing operation is selected by Main Menu option *Test Sites*. This program communicates with the Test Module, placing commands to access sites and call test numbers; and collects the resulting call disposition information. Upon selection, an initialization screen is displayed, and an option to pause by depressing the {Space} bar is offered. For normal operation, no keystrokes are necessary. If a pause is initiated, an option appears prompting for another keystroke to proceed. The Module Commands are next transmitted to the Test Module. If there is a problem with the commands or the Test Module, execution halts where the problem is detected, and the user is prompted for a keystroke to return to the Main Menu. After successful initialization, if a pause had initially been ordered, another pause is made after sending the Module Commands, with a prompt to begin testing. The Master Display appears.

MASTER DISPLAY															
Cage 1				Cage 2				Cage 3				Cage 4			
Prt	Site	#		Prt	Site	#		Prt	Site	#		Prt	Site	#	
A	1		-Calling--	A	67		-Accessed-	A	--Not Present--			A	--Not Present--		
B	2	10	Tsting	B	9		Hanging Up	B	--Not Present--			B	--Not Present--		
C	3	123	Passed	C			-----Idle-----	C	--Not Present--			C	--Not Present--		
D	12	1000	DTMF	D			-----Idle-----	D	--Not Present--			D	--Not Present--		
E	567	6	SIT	E			---Disabled---	E	--Not Present--			E	--Not Present--		
F	1200	73	Busy	F			---Disabled---	F	--Not Present--			F	--Not Present--		
G	34	11	Reordr	G			---Disabled---	G	--Not Present--			G	--Not Present--		
H	25000	3000	Ring	H			---Failed----	H	--Not Present--			H	--Not Present--		
I	88	345	Voice	I			---Failed----	I	--Not Present--			I	--Not Present--		
J	100	12	Timeout	J			---Failed----	J	--Not Present--			J	--Not Present--		
K	74		--Paused--	K			---Failed----	K	--Not Present--			K	--Not Present--		
L			---Disabled---	L			---Failed----	L	--Not Present--			L	--Not Present--		
<u>Scheduled</u> <u>Completed</u>				<u>Milliwatt</u> <u>DTMF</u>				<u>SIT</u> <u>Busy</u> <u>Reorder</u>				<u>Ring</u> <u>Voice</u> <u>Timeout</u>			
150 31				54 3				5 2 1				0 2 1			
01:12 11/08/91 Friday Zone=All Calls/Site=99 Failure Log Entries: 118															
Display One				Specific Test				Log				Communications			
												Quit Testing			

Screen #3

Master Display

The *Master Display* (Screen #2) shows the current status of the Test Module. Every port is presented. The port letter (A-L) appears in the *Prt* column. If there is more than one partition, the partition number appears to the left of the port letter. If a site is currently being called or accessed, the site number is shown in the *Site* column. If a site has been successfully accessed, and a test is in progress, the Test Number appears in the *#* column. The status of the test call is then shown to the right of the Test Number. This displays *Testing* while a response is awaited. The display briefly flashes *Passed*, *DTMF*, *SIT*, *Busy*, *Reorder*, *Ring*, *Voice*, or *Timed Out* when a test is complete and a result is available. *Hanging Up* briefly appears when a site is released; other displays are *Calling*, *Idle*, *Not Present*, *Disabled*, *Failed*, and *Paused*.

The number of scheduled sites to be tested, multiplied by the number of repetitions ordered for *routined* partitions, is shown. Partitions using Operation Tables are not counted. This scheduled number updates as ARONTS scans all necessary site data, searching for matches according to the selection criteria specified in the Test Schedule. The number of completed sites is also shown. The cumulative count for each test result (from the last time the statistics was cleared) is displayed. These numbers update as test results arrive.

The current time and date are shown at the lower left of the display. The Operation Table for the Test Schedule currently in use is displayed after the date: this is either the day of the week, or *Holiday*. The current zone specified in that Operation Table (or *All*) is displayed, followed by the number of *Calls per Site*. If shared sites are to be skipped, *Skip* appears after the number of calls per site. This information is updated as the time changes. If all partitions are *routining*, this information is not significant. The Failure Log entries are shown on the right, or *None* is displayed. This increases as failures are detected. The bottom line shows all keyboard options.

Once an option is selected and further information is required, a 10 second timeout is in place for the subsequent keystrokes. If a timeout occurs, the Master Display reappears.

Display One Test Line			
{Escape}	{1-4}=Cage	{A-L}=Port	{Enter}=Execute
Cage: 2		Port: A	

Screen #4

Display One

The *Display One* option is used to zoom in on a single port in order to reveal additional information. Screen #3 is displayed. The last cage and port displayed are shown; to change the cage, 1, 2, 3, or 4 is entered; to change the port, a letter in the range A-L is entered. After selection of the cage and port, {Enter} switches to the Display One Screen (Screen #4).

Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description
4	4	2:	Illinois Bell	2	(312) 942-9999	3	2:	DMS-250
RTS-1 Site		Activated	Notes	UnShared	Conforming	State	LATA	
Cage		Port						
2		A	.9876 Center St.					
Out Line								Site CLLI
12		.Sales Office						BGBKILBKCGO
Register: 9								Tandem CLLI
n7 WB W*4545 WD								CHCGILMODS1
Test #10		Milliwatt	DTMF	SIT	Busy	Reorder	Ring	Voice
(410) 363-8888		983	2	9	3	1	0	1
Originating #		Computer	No					
(301) 363-9999		Accesses	Response	Lost Tests	Answers	Fail-ures	Test Mode	Pro-gram
		435	0	0	856	86	132	3
Status: Site Accessed. Test Call Completed: Passed after 0.8 seconds.								
{Escape}			{Enter}=Continue Holding Test				{Space}=Release Test	

Screen #5

The cage and port displayed are shown at the left of the screen. If the port is being used to call or access a site, information about the site is displayed. This includes the information available from the *Site Information* Main Menu option, and the *One Site* option from the *Test Analysis* utility. This data is for all calls which have occurred previously. The information is dynamically updated as test results come in. The access and test status is shown near the bottom of the screen. Once the site has been accessed, and a test number has been assigned to the call, the test number and dialing register data appear.

When the test is completed, the test results flash on the bottom line. Normally, the next test call or site access immediately begins. If it is desired to peruse the test results in real time, prior to the completion of the test, the {Space} key can be used to activate a *freeze* type of operation. This causes the bottom options line to change as shown in Screen #4. After activation, when a test is completed, the results are displayed and an alert beep is generated. The test results are held for 60 seconds. Another {Space} immediately releases the held test results, and testing continues. Entering double {Space}'s releases the held test result, and places the next test into freeze mode as well. If it is desired to hold the test results longer than one minute, the {Enter} key can be depressed periodically to reset the 60 second timer.

{Escape} exits the Display One screen and returns to the Master Display.

Perform a Specific Test

{Escape} {Arrows} {Page Down}=Clear Field {Enter}=Execute

Site: 2 Register: 9 Test Number: 10

All Defined Tests

Screen #6

Specific Test

A *Specific Test* can be selected from the Master Display. Screen #5 is displayed. The last site and test number specifically requested are shown, and the *Site* field is depicted in reverse video. A different site number can be entered ({Page Down} is used to clear the field). To change the test number desired, the reverse video field is swapped to the *Register* and *Test Number* fields with the {Arrow} keys. If *All* tests are to be performed from that site, **A** is used; it is not necessary to enter a register or test number. When the site, register, and test numbers are as desired, the test begins with the depression of {Enter}. To abort and not perform a specific test, {Escape} is used.

When the specific test begins, the Display One screen is automatically called up; if the site requested is already accessed on any ARONTS port, that port is displayed; when the test in progress is completed, the specific test begins. If the site requested is not active on any port, port 4L is displayed. The first port which completes a test: releases its site; is assigned to the test; calls the requested site; and is selected for display. In either situation the Hold Test option is activated.

Failures

Selecting the *Log* option from the Master Display performs the same display of the current Failure Log as described in section 6.6.2, except that the option to restrict display to a particular site is not offered. The log entries are up-to-date. A 10 second keystroke timer is put into place, however; an additional option ({Enter}) is provided to reset the timer periodically to prevent the Failure Log from disappearing, and the Master Display replacing it.

Display Communications

The *Communications* Master Display option is used to monitor transmissions between the Control Computer and the Test Module. This is intended for diagnostic purposes; however, this may be displayed for informational purposes. Because the RTS-1 and Coded Hot Shoe codes, as well as credit card and secret authcode data are shown in this intra-system communication, a password is required to activate the display.

Characters received from the Test Module are shown in reverse video. Upon entry, six lines of previous communications are displayed prior to showing current communications. New communications are augmented with {log-codes} as testing progresses. Further diagnostic ability is available by activating *Direct Communications*. This option should not be utilized, as it halts test call processing and gives the user direct control of the Test Module. Once activated, {Delete} is used to return to the Display Communications screen.

{Escape} exits to the Master Display.

Quit Testing

Immediately

Finish Tests in Progress

{Escape}

Screen #7

Quit Testing

Selecting *Quit Testing* from the Master Display exhibits Screen #6. A choice of quitting *Immediately* or to *Finish Tests in Progress* is available. The latter option is recommended. To abort the quit request, {Escape} is used.

If Finish Tests in Progress is selected, the Master Display appears with a note that tests are being finished up. No *new* tests are issued; and RTS-1's are commanded to disconnect (preferable to simply hanging up, which *Immediately* does). Reselecting Quit Testing and aborting with {Escape} removes the exit request.

When quitting, files are updated and the Main Menu reappears.

6.2.2 Resume Testing

The *Resume Testing* Main Menu option is identical to *Test Sites*, except that the site accesses are not re-computed – data is utilized from the last test run to continue testing with a minimum of repeated tests. Tests completed in the last run for a site which was active are repeated if all scheduled tests for that site were not completed for that repetition number.

6.2.3 Exit to DOS

The Main Menu option *Exit to DOS* leaves the controlled ARONTs environment and places the user directly at the operating system level. Confirmation (Yes/No) is required. This option should be used cautiously.

6.3 Database

Items in this category are not test dependent. Information is related to the site locations themselves.

Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description
5	5	2	Illinois Bell	2	(312) 454-5555	3	1	Step/Step

RTS-1 Site Activated Notes UnShared NonConforming State LATA

IL 358

.324 Lanvale Street . Site CLLI

. . CHCGILAUCCGO

.Contact: George Siemens . Tandem CLLI

@ 555-1212 . CHCGILMODST

----- Originating Numbers -----

11: (312) 454-1234 15: (312) 942-4321

12: (312) 454-1235 16: (312) 942-4320

13: (312) 454-1236 17: (312) 942-4319

14: (312) 454-1237 18: (312) 942-4318

{Arrows} + - {Space}=Modify {Escape}

Codes CClone Write Search List

Screen #8

6.3.1 Site Information

Selecting *Site Information* from the Main Menu displays Screen #7. Sites are numbered in the range 1 through 25,000 (maximum value for the individual system

is shown in the *Setup* menu). Information for consecutive site numbers can be scanned with the + and – keys, or a particular site number selected with the *Site#* field. Initially the reverse video field displayed is *Site#*; the {Arrow} keys are used to move this to the field to be changed. *Master#* is used for sites which cannot be accessed while another member of the Master group is being used.

The *LEC#* is the number of the Local Exchange Carrier (section 6.3.2), and may be entered if known; or the text may be entered into the *LEC Name* field. If the latter option is used, the name must match an LEC definition (upper/lower case not significant). LEC information is optional.

Zone is the time zone (optional). The *Access Number* is the number used to call the site. It may be omitted for testing directly from ARONTs ports. *Reg* is the Dialing Register number used with the Access Number to reach the site; it is mandatory.

The *CO#* is the number of the type of Central Office (section 6.3.3), and may be entered if known; or the text may be entered into the *CO Description* field. If the latter option is used, the name must match a CO definition (upper/lower case not significant). CO information is optional.

Below *Site#* and *Master#* is the type of site: *RTS-1*, *Simple Hot Shoe*, or *Coded Hot Shoe*. {Space} rotates through these three types. The next field is either *Activated* or *DeActivated*; {Space} toggles the field. Textual information can be stored regarding the site under *Notes*. These four lines are not used by ARONTs in any way – they are intended to eliminate the necessity of keeping a separate paper logbook of site contact personnel, addresses, maintenance telephone numbers, etc.

The next field is either *Shared* or *UnShared*; {Space} toggles the field. This is used to bypass sites marked as shared during business hours. The next field is either *Conforming* or *NonConforming*; {Space} toggles the field, which is provided to ease the selection of sites by a basic CO parameter (independent from the CO description).

State is the 2-character state, province, or country name defined under the *State/Country* Main Menu option (section 6.3.4). Upper/lower case is insignificant; this field is optional. *LATA* is a 4-digit Lata number, or any numeric reference number desired (such as might be used for global breakdowns); it is optional.

Site and *Tandem CLLI* codes are 11-character fields which may be used in the conventional sense, or as any text field in which matching is to be performed. Characters are converted and stored as upper case after entry. These fields (and the Originating Number) can be matched on a character-by-character basis for site selection, and are optional.

The *Originating Number(s)* area shows a single number for Hot Shoe sites (Screens #9, #13), or numbers for each of the RTS-1 lines. Single-module RTS-1's (8 lines) permit the last eight digits in each originating number to differ (useful if more than one exchange is served at the CO); two-module RTS-1's (16 lines) permit the last four digits to differ. Should a site be equipped with a larger RTS-1 unit, the site information is split into multiple site numbers, each with the same Master number.

Originating Numbers and the Access Number can be domestic or international types; this is changed by {T}{Enter}. Domestic numbers must contain 10 numeric digits; international numbers can contain 1-12 numeric digits. Screen #11 shows international numbers.

View/Modify Site Information									
Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description	
4	4	2	Illinois Bell	2	(312) 942-9999	3	2	DMS-250	
RTS-1 Site		Activated	Notes	UnShared	Conforming	State	LATA		
						IL	358		
Test Code		.9876 Center St.						Site CLLI	
25895								BGBKILBKCGO	
Program Code		Sales Office						Tandem CLLI	
25987103								CHCGILMODS1	
----- Originating Numbers -----									
11:	(312) 949-0123	15:		21:	(312) 949-1478	25:			
12:	(312) 949-0124	16:		22:		26:	(312) 949-5421		
13:	(312) 949-2201	17:		23:		27:	(312) 949-2103		
14:		18:	(312) 949-9876	24:		28:	(312) 949-9856		
Cursor Positioning Keys: {Left Arrow} {Right Arrow} {Home} {End} Erasing Keys: {Delete} {Backspace} {Page Down}=erase entire field {Page Up}=restore to original {Insert}: Typeover {Escape} {Enter}									

Screen #9

An additional option, 8/16, appears at the bottom of the screen when the Originating Numbers field is displayed in reverse video for RTS-1 sites. This toggles the site between 8- or 16-line RTS-1 units. Screen #8 shows a 16-line site. Originating Numbers are optional; however, for single module RTS-1's, a number must be entered into line #11 if lines #12-#14 are used, and into line #15 if lines #16-#18 are used; and for two module RTS-1's, a number must be entered into line #11 if any of the lines are used.

Data entry for each of the fields which do not simply toggle or rotate between all available values begins with entry of a {Space}. Changing the Site# field *does not* change the site number of a selected site record to another number; it retrieves the record of the newly selected site. This moves to a different site number in the same fashion as the + and - keys increment and decrement the site displayed.

Field Editing

Screen #8 shows data entry for Notes. Initially, the first note line is shown in reverse video; {Enter} advances to lines #2-#4. Three lines of *edit key instructions* are shown at the bottom of the screen. These same instructions

are shown for many of the information entry screen fields. While in edit mode, the {Left Arrow} and {Right Arrow} keys are used to position the cursor beneath a character to be changed. {Home} positions the cursor to the leftmost spot, and {End} places the cursor at the rightmost spot. {Delete} erases the character above the cursor and moves all subsequent characters to the left one position. {Backspace} deletes the character to the left of the cursor position and moves all characters from the cursor position to the end to the left one spot. The {Backspace} and {Left Arrow} keys perform distinctly different operations. {Page Down} erases the entire field, and {Page Up} restores the entire field to what it was prior to making any changes in the line. Any other key (except {Insert}, {Escape}, and {Enter}) adds the new character to the field. Initially the edit line utility is in *Typeover* mode; any new characters entered replace the character above the cursor. To add characters within the line without overwriting existing characters, {Insert} is first depressed. This places the system into *Insert* mode; any new characters typed first move all existing characters from the cursor position to the end (- 1) to the right one position; the new character is placed in the emptied spot; the last character of the field is lost. When in Insert mode, depressing {Insert} changes the system back to Typeover mode; the edit instructions show the current Insert/Typeover mode. A changed field is recorded with the {Enter} key. Aborting with {Escape} automatically restores the field to its original (just as if {Page Up} were entered) and exits the Notes option.

View/Modify Site Information									
Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description	
2	2	1	C&P of Md	1	(301) 321-1234	2	4	#4 ESS	
Coded Hot Shoe		Activated	Notes	UnShared	Conforming	State	LATA		
						MD	132		
Access Code		.5317 Gist Avenue						Site CLLI	
208								BALTMDFRCG2	
Auth.Code								Tandem CLLI	
2548952185								BALTMODMS1	
Originating Number (301) 321-4321									
{Arrows} Codes + Clone - Write {Space}=Modify Search {Escape} List									

Screen #10

RTS-1 and Coded Hot Shoe sites have codes which can be displayed and entered. Initially, these sensitive fields are hidden (Screen #7). Exercising the *Codes* option shown at the bottom of the screen displays those codes after successful entry of a password; this is shown in Screen #8. Once authorized for codes usage, the codes can be instantly hidden or redisplayed with the Codes key (o). RTS-1 sites

show *Test* and *Program Codes*; Coded Hot Shoe sites (Screen #9) show *Access* and *Authorization Codes*.

A *Clone* option is available to copy information from one site number to another. The site containing the source information is first displayed, and Clone is then selected. A *Site Selector Menu* appears:

Clone Site Selector Menu						
Site#	Master#	LEC#	LEC Name	Zone	Originating #	CO# Description
6	54	1:	C&P of Md	1	(301) xxx-xxxx	1: Step/Step
7	32	2:	Illinois Bell	2	(212) 321-xxxx	2: DMS-250
321	56	3:	Pacific Tel	3	(415) xxx-1234	3: #5 XBar
456		4:	US West	4	(xxx) 976-xxxx	4: #4 ESS
32		5:	Bell Atlantic	10	12 34 5xxxxxx	
67						
82						
99						

State	LATA	Site CLLI	Tandem CLLI	RTS-1 Sites: Yes	First Site: 1
MD	234	CHCGILxxxxx		Simple HotShoes: Yes	Last Site: 500
VA	543	BALxxxxxxx		Coded HotShoes: No	
CA	1000	xxxxxxxxxx0		Conforming CO's: Yes	
NH				NonConforming: Yes	
UK				Shared Sites: Yes	
BC				UnShared Sites: Yes	
				Activated Sites: Yes	
				DeActivated Sites: Yes	

{Arrows} {Space}=Modify {Escape}

Screen #11

Site Selector Menu

The Site Selector Menu is used to enter information which matches fields of sites to be chosen for some purpose, in this case to be *cloned to*. Most of the site fields are shown. Each of these ten fields may have up to eight entries. If a field has *no entries*, as is the case for the Tandem CLLI field in Screen #10, that field has no bearing on the matching decision. If a field has *at least one entry*, the matched site *must match at least one of those entries* for selection. The example of Screen #10, although ridiculous, serves as an illustration.

Only site numbers 6, 7, 321, 456, 32, 67, 82, and 99 can possibly be selected. Although the meaning of site selection for the site field is the same as for the other fields, in practice it has a unique difference: it reduces the scan time necessary to locate matches. ARONTS *goes directly* to the records of the listed sites, and checks the remaining fields. If there are no entries in the Site# column, ARONTS searches *all site records* in the indicated range. This is relatively quick for several hundred sites, but may take a minute or two for 25,000 sites. If ARONTS is configured for a large number of sites, and the site numbers are known in advance, it is desirable to place them in the Site# match column for this reason.

The illustration shows Master numbers of 54, 32, and 56. The matching site must have one of these Master values. This field is useful to change or locate all sites of a particular Master number; for instance, to deactivate and reactivate all such sites should the site become inaccessible, and subsequently repaired.

LEC numbers 1-5 are specified in the example; typically only one value is entered. The field may be entered with either the LEC reference number, or the actual name. The Zone must be 1-4, or 10, in this example.

The Originating Number refers to the *first* originating number (11) for RTS-1 sites. This field, and the CLLI fields, function differently from the other match columns. The entry is interpreted as a *mask*: every character other than {Space} used in the match field must match; character positions corresponding to spaces (displayed as x's) are *wildcards*, and need not match. The most common usage of this feature for the Originating Number field is to match all sites with a given set of Area Codes, or Area Code and Exchange (NPA/NXX). The illustration depicts a match for all of area code 301, and the specific exchange (212) 321-xxxx. Another case is matching a given NXX for any area code: (xxx) 976-xxxx. This entry matches *any* 976 originating number. The unusual example (415) xxx-1234 matches any exchange in the 415 area code with the last four digits 1234. The last entry in the example matches any international number beginning with 12 34 5.

CO types 1-4 are specified in the example. The field may be entered with either the CO reference number, or the actual description. This is most useful for selecting types of CO's for testing in the Test Schedule (section 6.4.2).

The *State* field matches states Maryland, Virginia, California, and New Hampshire; the country United Kingdom; and province British Columbia. LATAs 234, 543, and 1000 are required.

The *Site CLLI* field has three sample masks: the first matches any site with Site CLLI beginning with CHCGIL; the second beginning with BAL; and the third with a last character of 0. This feature can be used to match individual cities. The *Tandem CLLI* field is handled in the same way.

There are nine *Yes/No* fields describing site characteristics; if set to Yes, sites with that characteristic are included in the selection process. A single No which matches a potential site causes that site to be *rejected*. Many combinations result in no possible matches: RTS-1, Simple, and Coded Hot Shoe sites all set to No; Conforming and NonConforming both set to No; Shared and UnShared both set to No; and Activated and DeActivated both set to No. Note that *it is important* to include DeActivated sites when cloning site information to site numbers which have not yet been activated; they can be activated in this way if the Activated field itself is cloned.

An overall range of site numbers is specified by *First Site* and *Last Site*. ARONTS restricts its match scan to those records. The default is all valid site numbers. It is

useful when cloning information to new site records. For example, if site #100 is a master site for site numbers 101-109, after site #100 information has been entered, it can be cloned to sites 101-109 by setting the First Site to 101 and the Last Site to 109; making all of the Yes/No options Yes; and leaving the remaining fields empty. Subsequent to the clone operation, individual changes can be made to the newly created records.

The Site Selector Menu provides a mechanism to select sites based on many fields – a match occurs if: each of the ten 8-entry columns matches at least one column entry, or if the column has no entries; none of the No fields match; and the site is in the range defined by First and Last Site. Entries are made by moving the reverse video field to the desired location with the {Arrow} keys, and entering {Space}. A column can be exited (from the edit field mode) with {Escape}; or automatically when the eighth field is entered. When the Site Selector is as desired, {Escape} exits the screen.

Clone From Information									
Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description	
1	1	10	British Telecom	10	44 81 9051234	2	9	Strowger	
RTS-1 Site Activated Notes UnShared NonConforming State LATA									
UK 1000									

Test Code		.21 Downing St.						Site CLLI	
25984								LONDON123	
Program Code		.Rotary office only						Tandem CLLI	
2015845								LONDON123	

----- Originating Numbers -----									
11: 44 81 9050001 15:									
12: 44 81 9050002 16:									
13: 44 81 9050003 17:									
14: 44 81 9050004 18:									

{Arrows} Clone Field Clone All {Escape}									

Screen #12

Screen #11 appears when the Clone to Site Selector Menu is left. At this point, no changes have occurred. Cloning can be aborted with {Escape}. The entire site record can be cloned to all selected sites with the *Clone All* option. Individual fields can be cloned one at a time by using the {Arrows} to move the reverse video field to the desired field, and selecting *Clone Field*. The example shows the *Reg* field ready to be cloned. All fields to be copied can be handled by using the {Arrows} and *Clone Field* repetitively; it is not necessary to exit and reenter the Clone option.

The *Search* option on the main site display (Screen #9) calls up a site selector menu identical to that of Screen #10 (other than the title). When the selection option is completed, Screen #12 appears. *Next Match* retrieves information for the first site that matches; this may be repeated to view all matching locations. A quick count of matches is available with *Fast Count*. The number of matches is

shown at the right, and the site number scanned is shown at the left (not shown in Screen #12). The *Scan and Count* option displays site information for matches as they are found. *Codes* turns codes display on and off. {Escape} exits the Search mode.

Site Search Information									
Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description	
Notes State LATA									
Test Code								Site CLLI	
Program Code								Tandem CLLI	

Next Match Scan & Count Fast Count Codes {Escape}									

Screen #13

The matching information set up in the Site Selector Menu is retained while in the Site Information program. This permits selection criteria to be set up with the Search option and verified with Next Match or Fast Count. Subsequently, the Clone (or List) option may be exercised with the selection criteria remaining the same as that of the immediately previous Search.

List Options									
Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description	
3	3	3	Pacific Tel	4	(415) 555-1212	1	9	Strowger	
Simple Hot Shoe Activated Notes Shared NonConforming State LATA									
IL 358									

.32 East Market St.								Site CLLI	
								SANFRNABCS3	
								Tandem CLLI	
								SANFRNMODSO	

Originating Number									
(415) 555-2121									

List Without Codes List With Codes {Escape}									

Screen #14

The *List* option on the main site display (Screen #9) calls up a site selector menu identical to that of Screen #10 (other than the title). When the selection option is completed, Screen #13 appears. Selecting either *List Without Codes* or *List With Codes* creates a listing file of the matching sites, and prints it if the printer is on-line. {Escape} exits the List mode. Listing #1 provides a sample.

To store changes made in site information, the *Write* command is issued from the main site display (Screen #9). No actual changes are made to the displayed site until the record is explicitly written. Cloned sites are written as part

11:38:59 AM Monday, November 11, 1991

Site Information According to the Following Selection Criteria:

Site#	Master#	LEC#	---LEC Name---	Zone	Originating #	CO#	Description
State	LATA	Site	CLLI	Tandem	CLLI	RTS-1 Sites: Yes Simple HotShoes: Yes Coded HotShoes: Yes Conforming CO's: Yes NonConforming: Yes Shared Sites: Yes UnShared Sites: Yes Activated Sites: Yes DeActivated Sites: No	First Site: 1 Last Site: 500

=====

Site#	Master#	LEC#	---LEC Name---	Zone	Access Number	Reg	CO#	Description
1	1	10	British Telecom	10	44 81 9051234	2	9	Strowger
RTS-1 Site								
				Activated	UnShared	NonConforming	State	LATA
							UK	1000
Test Code	.21 Downing St.							Site CLLI
25984								LONDON123
Program Code	.Rotary office only							Tandem CLLI
2015845								LONDONT123
----- Originating Numbers -----								
11: 44 81 9050001 15:								
12: 44 81 9050002 16:								
13: 44 81 9050003 17:								
14: 44 81 9050004 18:								

=====

Site#	Master#	LEC#	---LEC Name---	Zone	Access Number	Reg	CO#	Description
2	2	1	C&P of Md	1	(301) 321-1234	2	4	#4 ESS
Coded Hot Shoe								
				Activated	UnShared	Conforming	State	LATA
							MD	132
Access Code	.5317 Gist Avenue							Site CLLI
208								BALTMDFRCG2
Auth. Code								Tandem CLLI
2548952185								BALTMODDS1
Originating Number								
(301) 321-4321								

=====

Site#	Master#	LEC#	---LEC Name---	Zone	Access Number	Reg	CO#	Description
3	3	3	Pacific Tel	4	(415) 555-1212	1	9	Strowger
Simple Hot Shoe								
				Activated	Shared	NonConforming	State	LATA
							CA	432
.32 East Market St.								Site CLLI
								SANFRNABCS3
								Tandem CLLI
								SANFRNMODS0
Originating Number								
(415) 555-2121								

=====

Site#	Master#	LEC#	---LEC Name---	Zone	Access Number	Reg	CO#	Description
4	4	2	Illinois Bell	2	(312) 942-9999	3	2	DMS-250
RTS-1 Site								
				Activated	UnShared	Conforming	State	LATA
							IL	358
Test Code	.9876 Center St.							Site CLLI
25895								BGBKILBKCG0
Program Code	.Sales Office							Tandem CLLI
25987103								CHCGILMODS1
----- Originating Numbers -----								
11: (312) 949-0123 15: 21: (312) 949-1478 25:								
12: (312) 949-0124 16: 22: (312) 949-5421								
13: (312) 949-2201 17: 23: (312) 949-2103								
14: (312) 949-9876 24: 28: (312) 949-9856								

=====

Site#	Master#	LEC#	---LEC Name---	Zone	Access Number	Reg	CO#	Description
5	5	2	Illinois Bell	2	(312) 454-5555	3	1	Step/Step
RTS-1 Site								
				Activated	UnShared	NonConforming	State	LATA
							IL	358
Test Code	.324 Lanvale Street							Site CLLI
25963254								CHCGILAUUG0
Program Code	.Contact: George Siemens							Tandem CLLI
2584103697	@ 555-1212							CHCGILMODS1
----- Originating Numbers -----								
11: (312) 454-1234 15: (312) 942-4321								
12: (312) 454-1235 16: (312) 942-4320								
13: (312) 454-1236 17: (312) 942-4319								
14: (312) 454-1237 18: (312) 942-4318								

=====

Listing #1

of that operation. If a change is made to a site field, not written, and an option is requested which would cause the changes to be lost (clone, list, search, +, -, change site number, {Escape}), a warning is presented so indicating: if

Continue Anyway is assented to with a Yes response, the changes are lost.

{Escape} from the main site display (Screen #9) returns to the Main Menu.

LEC Names View/Modify Options		
1: C&P of Md	18:	35:
2: Illinois Bell	19:	36:
3: Pacific Tel	20:	37:
4: US West	21:	38:
5: Bell Atlantic	22:	39:
6:	23: GTE of PA	40:
7:	24:	41:
8:	25: UTS Midwest Grp	42:
9:	26:	43:
10: British Telecom	27:	44:
11:	28:	45:
12:	29:	46:
13:	30:	47:
14:	31:	48:
15:	32:	49:
16:	33:	50:
17:	34:	51:
{Space}=Modify {C}lone {F}ind {L}ist		
{Arrows} {N}ext {P}age {Escape}		

Screen #15

6.3.2 LEC Names

Valid names for Local Exchange Carriers are handled with Main Menu option, LEC Names. Screen #14 is displayed. LEC's are numbered from 1-9999; fewer may be accessible as defined in Setup parameters (section 6.4.1). Fifteen characters are available, and may be entered utilizing upper and lower case. Subsequent reference is case insensitive. The Next option can be used to browse through screens of entries. Page is used to select a particular LEC number (on a different screen) for display; the LEC number is requested, and the display is updated with the screen containing the desired carrier.


The reverse video field is moved with the {Arrows}. When the field to be changed is so marked, {Space} calls up Edit Mode for the specified entry. ARONTS does not permit a duplicate entry to be made (except when cloned). {Enter} records the change, and advances to the next entry; {Escape} exits Edit Mode and aborts any changes made to the current field.

Clone requests starting and ending LEC Numbers to be cloned to; the current LEC is copied to the selected range. This is for use when a set of LEC Names are similar, and several characters need only be changed to distinguish between them.

11:39:42 AM Monday, November 11, 1991		
LEC Names in the Range of 0 to 100		
0: Not Specified	1: C&P of Md	2: Illinois Bell
3: Pacific Tel	4: US West	5: Bell Atlantic
10: British Telecom	23: GTE of PA	25: UTS Midwest Grp


Listing #2

Find searches for an LEC Number, given an LEC Name. List creates a listing over a specified range of LEC Numbers; empty names are automatically skipped. Listing #2 is an example.

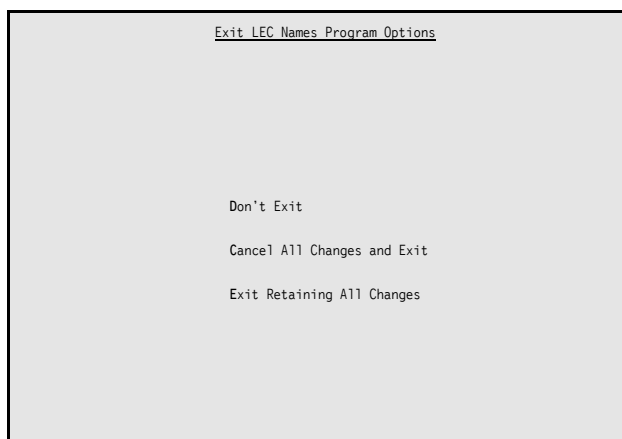

Screen #16


{Escape} returns Screen #15. No changes made in the session are recorded until the *Exit Retaining All Changes* option is requested. The other options are self-explanatory.

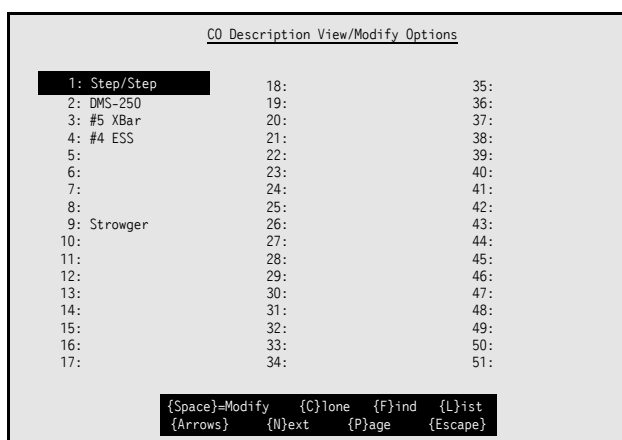

Screen #17

6.3.3 CO Descriptions


Valid descriptions of Central Office types are handled with Main Menu option, *CO Descriptions*. Screen #16 is displayed. CO's are numbered from 1-255. Ten characters are available, and may be entered utilizing upper and lower case. Subsequent reference is case insensitive. Operation is identical to LEC Names (section 6.3.2). Listing #3 is a sample printout.

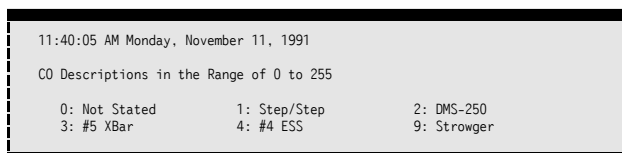

Listing #3

6.3.4 State/Country Names

Valid descriptions of state, province, and country names are handled with Main Menu option, *State/Country*. Screen #17 is displayed. Items are numbered from 1-255. Two characters are available, and may be entered utilizing

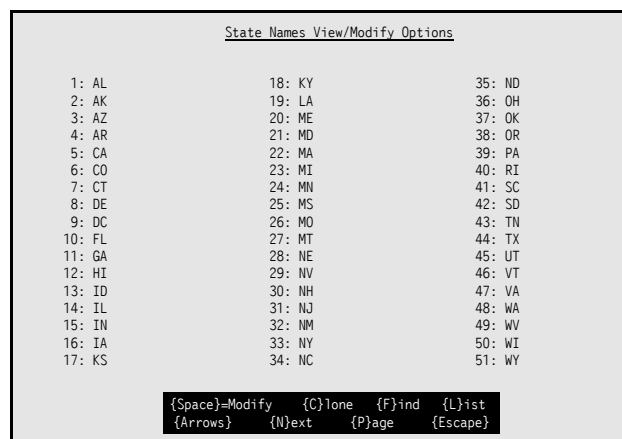

Screen #18

upper and lower case. Subsequent reference is case insensitive. Operation is identical to LEC Names (section 6.3.2). Listing #4 is a sample printout.




Listing #4

6.4 Test Configuration

Items in this category are used to define tests and configure the system. Each of the six menu items address their respective files. There is only one setup file. The rest of this group of menu options operate on the *current* version of the respective file; these can be altered through *File Maintenance* (section 6.6.8).

6.4.1 System Setup

Selecting *System Setup* from the Main Menu displays Screen #18. Current parameters and options

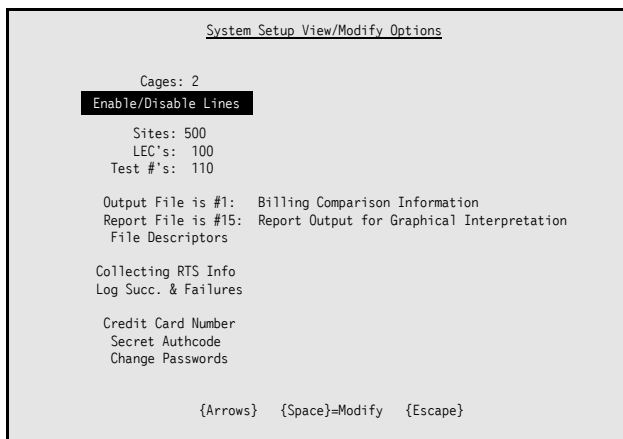

Screen #19

are presented. A reverse video field depicts the field which can be modified with {Space}. The {Arrows} are used to move the field as desired.

Cages is used to change the number of ports the Test Module is equipped for. There may be from 1 to 4 cages of line cards, each housing 12 cards.


The number of Sites is merely displayed; this cannot be altered with the program. The number of LEC's and Test Numbers can be modified; both files always contain their maximum numbers of entries: 9999 and 3000, respectively. However, by limiting the maximum usable number, entry errors are reduced (an error alert beep occurs if an attempted field entry is out of the specified range); and the time required to read and write the files by the various programs is reduced.

A parameter can be set to collect RTS-1 information or to bypass this polling when RTS-1 sites are accessed. If enabled, ARONTS reads: the number of Test Mode accesses; the number of Program Mode accesses; the number of Access Failures; and the number of Access Answers from the remote unit. It is recommended that this be left activated. If turned off, this site information for RTS-1 sites is not updated, and the values extracted from Test Analysis (section 6.6.1) is inaccurate. The only reason to disable the polling is to reduce the access time by 10-15 seconds. {Space} toggles this parameter.

A parameter can be set to log successes *and* failures, or *just* failures when tests are made. The normal setting is to log failures only. Logging successful tests can create a huge (no longer failure) log unless testing is minimal. This has two major purposes: new Test Definitions can be checked the first time run to verify that all intended tests are conducted; and it may be desirable to have a positive test output for every test conducted when switch routining. This also supplies the Wait Time for individual successful Milliwatt tests; the statistics are updated independently from this *Log* option. {Space} toggles this parameter.

A credit card or calling card number can be entered with {Space} when this field is displayed in reverse video. After password entry, a maximum of 30 numeric digits is permitted. This number is accessible from Dialing Registers, which automatically strip out any blanks in the number. A secret authcode used for dialup service access is handled in the same way, except that a maximum of 10 numeric digits is permitted.

ARONTS uses passwords to protect access to the RTS-1 Access and Program codes, Coded Hot Shoe Authorization and Access codes (as knowledge of these permits unlimited call privileges for calls emanating from the remote location), credit card and secret authcode numbers, and remote access permission. Nine different passwords are available – they all serve the same function. Upon delivery, the passwords are: PASS1, PASS2, PASS3, PASS4, PASS5, PASS6, PASS7, PASS8, and PASS9. The *Change Password* option is used to alter these passwords. To do so, the option is selected with {Space} and one of the current passwords entered. A prompt for the new password appears, with a request to repeat the new password. If the two new entries are identical, the change is accepted. Passwords are upper/lower case insensitive, and can be of any length greater than or equal to one character. The {Enter} key is used to terminate a password entry. Corrections (such as using the {Backspace} key) cannot be made when entering a password.

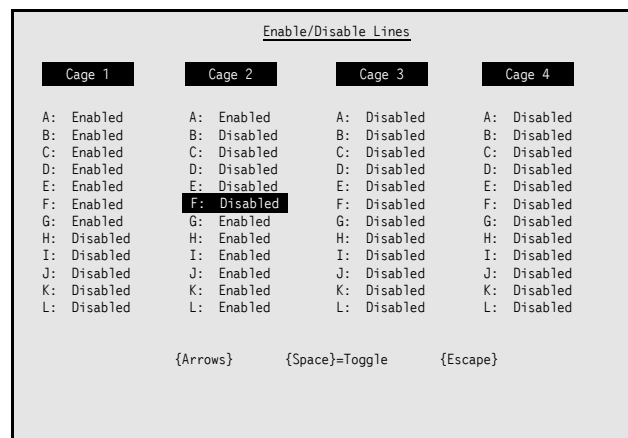

Screen #20

The *Enable/Disable Lines* option displays Screen #19. This is used to enable and disable individual lines on the Test Module. Entries for ports in cages beyond the number of line card cages selected in the previous screen have no effect on system operation. Disabling a line prevents the line from being used for test calls. Ports which do not have functioning telephone test lines attached should be disabled. To change the enable/disable status of a line, the reverse video field is moved to the port desired with the {Arrow} keys, and the {Space} key used to toggle the port status. To finish, {Escape} is depressed.

View/Modify File Description

0: No Output File
 1: Billing Comparison Information
 2:
 3:
 4:
 5:
 6:
 7:
 8:
 9:
 10:
 11:
 12:
 13:
 14:
 15: Report Output for Graphical Interpretation

Select: **1**

Cursor Positioning Keys: {Left Arrow} {Right Arrow} {Home} {End}
 Erasing Keys: {Delete} {Backspace} {Page Down}=erase entire field
 {Page Up}=restore to original {Insert}: Typeover {Escape} {Enter}

Screen #21

The Output file, RawData.Txt, is created or appended if an output file number is specified. {Space} from this field results in Screen #20. All *File Descriptors* previously created are shown, numbered from 1 to 15. The desired File Descriptor number is entered, followed by {Enter} to select that filetype. The Report output file, Analyze.Txt, is selected in the same fashion; an option to have none is not permitted.

File Descriptor Fields

#1: Billing Comparison Information

*Month ~"nn/	*Day ~"nn/	*Year ~"nn"	*Hour ~"nn":
*Minute ~"nn:	*Second ~"nn"	Site Num ~"5n"	Site Type ~"n"
Master # ~"5n"	*Orig Num ~"12"	*LATA ~"4n"	*Site CLLI ~"11"
Tndm CLLI ~"11"	LEC Num ~"4n"	LEC Name ~"15"	*State ~"cc"
Zone ~"3n"	CO Num ~"3n"	CO Descpt ~"10"	Test # ~"4n"
*Test Num ~"12"	Port ~"nc"	Log Code ~"3n"	Wait Time ~"3n"
Data ~"6c"	Dial Reg ~"3n"	*Call Code ~"3c"	Out Line ~"nn"

*RecordEnd CL

{C} = <Carriage Return> {~} = <Space> {L} = <Line Feed>

{Arrows} {Space}=Modify * Log Codes RawData Type {Escape}

Screen #22

Selecting *File Descriptors* from Screen #18 results in Screen #20; after a file number is selected, Screen #21 appears, which is used to define the type of ASCII output file to be created. Each of 29 separate fields can be turned on or off by entry of *; a * to the left of the field name indicates that that information will be recorded. Records are written in the exact order shown in this screen. Each field included in the record can be preceded with two characters, and terminated with two characters. Special character conversions are shown in the Screen. Most of the delimiters in this example place a space followed by " in front of the data, and ", behind the data. This results in records of the form "data", "data", ... "data". The record ends with a carriage return and line feed in this example, which results in a data record as follows:

```
"11/12/91", "15:23:36", " 3013639999", "0345",
"CHCGILCLCG1", "IL", " 8005551234", "105", {c/r}{lf}
```

The screen display shows the number of characters each field contains, such as 5n for the site number, which indicates five numeric digits; or 3c for the call code, indicating three characters. Others appear just with the number of digits, such as 11. The field is reached with the {Arrows}, and changed with {Space}.

Create Out File Data Record for the Following Log Codes

File Descriptor #1

100

Change Number(s): **100** - **100**

Cursor Positioning Keys: {Left Arrow} {Right Arrow} {Home} {End}
 Erasing Keys: {Delete} {Backspace} {Page Down}=erase entire field
 {Page Up}=restore to original {Insert}: Typeover {Escape} {Enter}

Screen #23

Selecting *Log Codes* from Screen #21 produces Screen #22. This specifies which Log Codes will produce a new record in the Output file. Any combination of codes from 1-255 may be chosen. The above example creates records *only* for successful test calls.

File Descriptor Fields

#15: Report Output for Graphical Interpretation

*Rec Type ~"c"	*Number ~"5n"	Test Num ~"14"	*Site Type ~"n"
*Succ N ~"10"	*Succ Avg ~"5n"	Suc StDev ~"5n"	*DTMF ~"5n"
*SIT ~"5n"	*Busy ~"5n"	*Reorder ~"5n"	*Ring ~"5n"
*Voice ~"5n"	*Time Out ~"5n"	*Matches ~"5n"	*Accesses ~"10"
*No Resp ~"10"	Lost Tsts ~"10"	*Answers ~"5n"	*Failures ~"5n"
*Test Mode ~"5n"	*Prgm Mode ~"5n"		

*RecordEnd CL

{C} = <Carriage Return> {~} = <Space> {L} = <Line Feed>


{Arrows} {Space}=Modify * Report Type {Escape}

Screen #24

File Descriptors can be used for Output *or* Report files. The previous descriptor (Screen #21) is for a RawData.Txt file (output). In order to use a file descriptor for a Report file, **R** is utilized from Screen #21 to change to a Report definition; it can be toggled back with another **R**. Screen #23 shows a Report type descriptor. Most fields are the same as those displayed or listed from Test Analysis (section 6.6.1): statistics or data. The Record Type is the character used to create the report in that program. The Number is either the Test Number or the Site Number, depending upon which report option is selected. The Site Type is the same as defined under LoadSite (section 5.4).

Matches shows the number of sites matched in reports which use a Site Selector Menu.


When all data has been changed in the Setup View/Modify program, {Escape} from Screen #18 exits to a screen similar to Screen #15. No Setup changes are recorded unless this screen is exited retaining all changes.

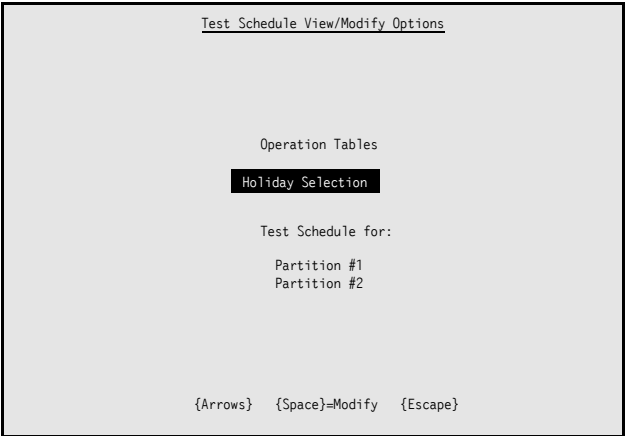

Screen #25

6.4.2 Test Schedule

Selecting *Test Schedule* from the Main Menu goes to Screen #24. The reverse video field can be moved with the {Arrows} between *Holiday Selection*, *Operation Tables*, and each *Partition #*. {Space} activates a new screen for each.

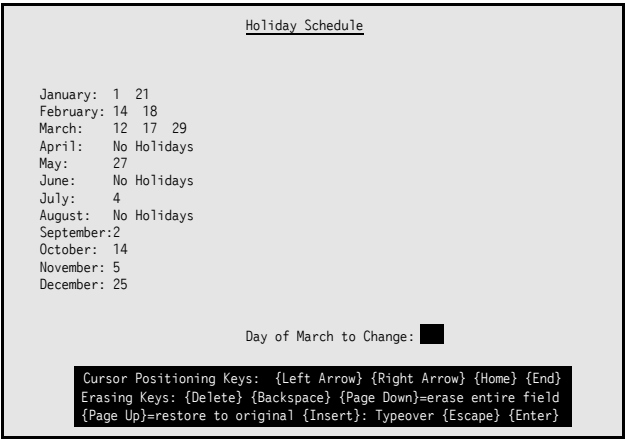

Screen #26


Requesting *Holiday Selection* from Screen #24 displays Screen #25. This permits marking any collection of days of each month as a holiday (activating a separate Operation Table). To add or remove a day of a particular month from that month’s holiday list, the reverse video field is moved to the desired month with the {Up Arrow} and {Down Arrow} keys, and {Space} depressed. A request pops up for the day of that month to change; the desired date is entered, followed by {Enter}. If that day is not in the holiday list, it is

added; if it is already in the list, it is removed. The sub-menu is exited with {Escape}.



Screen #27

Selecting *Operation Tables* from Screen #24 brings up Screen #26. The tables for the desired day of the week or holiday are retrieved by moving the reverse video field to the desired spot with the {Up Arrow} and {Down Arrow} keys and depressing {Enter}, displaying Screen #27.

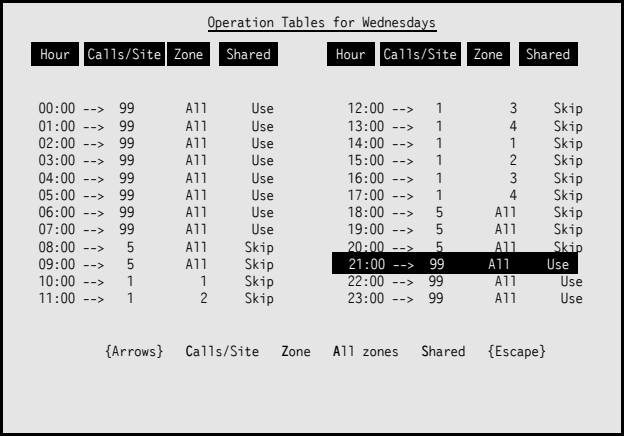

Screen #28

The Calls/Site, Zone, and Shared statuses are shown for each hour of the day. The entry of interest is reached by moving the reverse video field with the {Arrow} keys. The *Calls/Site*, *Zone*, and *Shared* fields are modified by depressing the appropriate bold face character. Zone numbers in the range of 1 through 255 are acceptable. To permit calls to all zones, the *All zones* option is selected. When a field is changed, that same field is copied to all hour entries later than the selected hour. In this fashion, starting at the earliest hour and progressing to the latest hour for changes makes it possible to enter only the hours where changes take place. {Escape} exits to Screen #26, from which other tables may be selected. {Escape} from Screen #26 exits to Screen #24.

Partition #1 Site Selector Menu						
Site#	Master#	LEC#	LEC Name	Zone	Originating #	CO# Description
2						
3						
4						

State	LATA	Site CLLI	Tandem CLLI	RTS-1 Sites: Yes	First Site: 1
				Simple HotShoes: Yes	Last Site: 100
				Coded HotShoes: Yes	
				Conforming CO's: Yes	Use Op Tables: No
				NonConforming: Yes	Repetitions: 3
				Shared Sites: Yes	Test Def File: --
				UnShared Sites: Yes	
				Activated Sites: Yes	First Port: 1A
				DeActivated Sites: No	Last Port: 1A

{Arrows} {Space}=Modify {Escape}

Screen #29

Selecting one of the Partitions from Screen #24 provides Screen #28. This is the Site Selector Menu (section 6.3.1) which determines which sites are to be accessed for the particular Test Module partition. Four alterable fields are present beyond that of the previous discussion.

Use Op Tables can be set to Yes or No. If set to No, the partition is in *Routining* mode, and the *Repetitions* field can be set to 1-255; otherwise, *Continuous* operation is automatic. The *Test Definition File* version number can be specified; if set to all blank, the current Test Definition file is used. The first port in the partition is displayed; it cannot be changed (it is the next port above the last of the prior partition). The *Last Port* can be set to any port not less than the first port. If a greater partition number had previously been defined, and the Last Port of the previous partition is changed past the Last Port of the later partition, exit is not permitted from this screen. The Last Port must temporarily be set to a valid value; the later partition's Last Port set to 4L; and the prior partition's Last Port then set to the desired value. Partitions end when Last Port 4L is reached. {Escape} from this menu returns to Screen #24.

When all data has been changed in the Test Schedule View/Modify program, {Escape} from Screen #24 exits to a screen similar to Screen #15. No Test Schedule changes are recorded unless this screen is exited retaining all changes.

6.4.3 Test Definitions

Selecting *Test Definitions* from the Main Menu yields Screen #29. This shows the same information as Site Information. At this point, the + and - keys may be used to scan through adjacent sites. Any other key provides Screen #30.

Different sites can be selected with +, -, and by {Space} when the Site field is current. *View* returns to Screen #29. The *Continue With* field can be modified to

View/Modify Test Definitions							
Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO# Description
5	5	2	Illinois Bell	2	(312) 454-5555	3	1: Step/Step

RTS-1 Site	Activated	Notes	UnShared	NonConforming	State	LATA
					IL	358

.324 Lanvale Street Site CLLI: CHCGILAUCG0

.Contact: George Siemens Tandem CLLI: CHCGILMODS1

@ 555-1212

----- Originating Numbers -----

11: (312) 454-1234 15: (312) 942-4321

12: (312) 454-1235 16: (312) 942-4320

13: (312) 454-1236 17: (312) 942-4319

14: (312) 454-1237 18: (312) 942-4318

{+} {Any other key to continue} {-}

Screen #30

chain to another Test Definition. The *Test Group* can be rotated through values between 1 and 5 with {Space} when that field is current. The *Consecutive Tests*, *Register*, and *Test Numbers* fields are tied to the Test Group, and can be modified for each Group.

View/Modify Test Definitions							
Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO# Description
5	5	2	Illinois Bell	2	(312) 454-5555	3	1: Step/Step

RTS-1 Site	Activated	Notes	UnShared	NonConforming	State	LATA
					IL	358

Site CLLI: CHCGILAUCG0 Tandem CLLI: CHCGILMODS1

Test Group: 1 Consecutive Tests: 1 Continue with: 6 From: ----

Call Code: 800 Out Line: 12 Register: 11 Expect: Milliwatt Next Reg: No

Q 32 1n*# W010AE WB W*4545 WQ75 ### WE03 WO

----- Test Numbers -----

20-21

{Arrows} + - {Space}=Modify {Escape}

View Numbers Zero Clone Write Search List

Screen #31

A Dialing Register number can be entered, and the information pertinent to that register is displayed for reference purposes. The number of Consecutive Tests can be set; a value of 1 indicates that tests are to be conducted with the listed Dialing Register only. A value greater than 1 causes the tests to be repeated with the next consecutive Dialing Register until the number of Consecutive Tests requested has been performed for each Test Number, all of which are listed.

Selecting *Zero* clears all Test Numbers from the displayed Test Group; nothing else is changed. Entering {Space} when the Test Number field is current results in a screen similar to Screen #22; a range of Test Numbers may be entered for *change*. Only Test Numbers in a range of 100 may be entered for a single Test Group. Selecting *Numbers* displays the actual Test Numbers on a separate screen, as shown in Screen #31:

Test Number View/Modify Options

1: 12 34 56789012	18: (000) 000-0000	35: (201) 456-4321
2: (000) 000-0000	19: (410) 363-9999	36: (415) 789-0123
3: (000) 000-0000	20: (301) 833-0000	37: (000) 000-0000
4: (000) 000-0000	21: (800) 222-9876	38: (000) 000-0000
5: (000) 000-0000	* 22: 34 56 789012	39: (000) 000-0000
6: (000) 000-0000	23: (900) 215-0123	40: (000) 000-0000
7: (000) 000-0000	24: (000) 000-0000	41: (000) 000-0000
8: (000) 000-0000	* 25: 12 34 56789012	42: (000) 000-0000
9: (000) 000-0000	* 26: (000) 000-0000	43: (000) 000-0000
10: (000) 000-0000	27: 1	44: (000) 000-0000
11: (000) 000-0000	28: 12 34 56789012	45: (000) 000-0000
12: (000) 000-0000	29: 12 3	46: (000) 000-0000
13: (000) 000-0000	30: 12 34	47: (000) 000-0000
* 14: (000) 000-0000	31: 12 34 5	48: (000) 000-0000
15: (000) 000-0000	32: (000) 000-0000	49: (000) 000-0000
16: (000) 000-0000	33: (100) 000-0000	50: (000) 000-0000
17: (000) 000-0000	34: (000) 000-0000	51: (000) 000-0000

{Space}=Modify {T}ype {*}=Multiple Calls {L}ist
{Arrows} {N}ext {P}age {C}lone {Escape}

Screen #35

(section 6.3.1). Test Numbers which can be dialed simultaneously from more than one port are marked with *; a * toggles this parameter. *List* produces Listing #6:

11:42:16 AM Monday, November 11, 1991

Test Numbers in the Range of 1 to 110

1: 12 34 56789012	19: (410) 363-9999	20: (301) 833-0000
21: (800) 222-9876	* 22: 34 56 789012	23: (900) 215-0123
* 25: 12 34 56789012	27: 1	28: 12 34 56789012
29: 12 3	30: 12 34	31: 12 34 5
33: (100) 000-0000	35: (201) 456-4321	36: (415) 789-0123
99: 54 32 1	100: (000) 000-0001	110: (302) 432-5678

Listing #6

Dialing Register View/Modify Options

Call Code: SHS	Out Line: 1	Reg: 1	None	Continue with: No
W1 1a* W1 WB WD				

Call Code: CHS	Out Line: 1	Reg: 2	None	Continue with: No
W1 1a* W1 p* W1 P50 t* WB WD				

Call Code: RTS	Out Line: 1	Reg: 3	RTS-1	Continue with: No
W1 1a* W#0160 Q #t* W#0103 Q 0230 W#0103 WB WD				

Call Code: Loc	Out Line: 1	Reg: 4	None	Continue with: No
W1 WB WD				

Call Code: Tim	Out Line: 1	Reg: 5	RTS-1	Continue with: No
Q01 W#0106 Q #p* W#0103 Q 75205 WB W#T0103 WD				

Call Code: 800	Out Line: 12	Reg: 6	Milliwatt	Continue with: No
Q 32 1n* A# WC10AE WB W*4545 WQ75 ### WE03 WO				

{Space}=Modify {C}lone {L}ist
{Arrows} {N}ext {P}age {Escape}

Screen #36

6.4.5 Dialing Registers

Selecting *Dialing Registers* from the Main Menu displays Screen #35. The fields are modified by using the {Arrows} to move the reverse video to the desired spot, and depressing {Space}. The Expected field rotates between Milliwatt, RTS-1, Manual DTMF, and None. The *Call Code* can be set to any three characters; the *Out Line* should be 1 for Hot Shoe tests, and 11-18 for test calls on RTS-1 Module 1, and 21-28 for test calls on RTS-1 Module 2. If the Dialing Register continues, that next Dialing Register number is placed into the *Continue With* field. Entering {Space} while located at the *Reg* field permits the entire

Dialing Register contents to be defined. *Next* advances to the next page of Dialing Registers; *Page* selects the screen for any specified Dialing Register; and *Clone* copies the current Dialing Register to a range of Dialing Registers. *List* requests a range of Dialing Registers; only registers with nonblank entries are listed, as shown in Listing #7. {Escape} returns an exit screen similar to Screen #15. No Dialing Register changes are recorded unless this screen is exited retaining all changes.

11:42:36 AM Monday, November 11, 1991

Dialing Registers in the Range of 1 to 500

Call Code: SHS	Out Line: 1	Reg: 1	None	Continue with: No
W1 1a* W1 WB WD				

Call Code: CHS	Out Line: 1	Reg: 2	None	Continue with: No
W1 1a* W1 p* W1 P50 t* WB WD				

Call Code: RTS	Out Line: 1	Reg: 3	RTS-1	Continue with: No
W1 1a* W#0160 Q #t* W#0103 Q 0230 W#0103 WB WD				

Call Code: Loc	Out Line: 1	Reg: 4	None	Continue with: No
W1 WB WD				

Call Code: Tim	Out Line: 1	Reg: 5	RTS-1	Continue with: No
Q01 W#0106 Q #p* W#0103 Q 75205 WB W#T0103 WD				

Call Code: 800	Out Line: 12	Reg: 6	Milliwatt	Continue with: No
Q 32 1n* A# WC10AE WB W*4545 WQ75 ### WE03 WO				

Listing #7

View/Modify Module Initialization Commands

I*	-R
DELAY 02	-R
IDW1 20	-R
INIG SX 0	-R
IMARKP SX 1	-R
INDC SX X	-R
INDR	-R
QSA WB Q 62 W#0404 Q 63 W#0404 Q 64 W#0404 Q 65 W#0404 Q WD X	-R
QSB Q 00 WD X	-R
QSC MS20 WD X	-R
QSD WQ75###WE05 ###WE05 WQ75###WE15 ###WE15 ###WE15 ###WE15 WO X	-R

{Arrows} {N}=Next Page {P}=Previous Page {Space}=Modify
{T}=Top {B}=Bottom {M}=Move {C}=Copy {D}=Delete {Escape}

Screen #37

6.4.6 Module Commands

Selecting *Module Commands* from the Main Menu displays Screen #36. The *Top*, *Bottom*, *Next Page*, and *Previous Page* options are used to display the desired page of module commands. The line to be edited is selected by moving the reverse video line with the {Up Arrow} and {Down Arrow} keys (after displaying the desired page), and depressing {Space}. The edit field instructions are displayed. After any desired changes are made, {Enter} advances to the next line; {Escape} returns the screen to the original options.


A line can be moved to another position by selecting the line to be moved with the motion options, and selecting *Move*. After so doing, repositioning to the line above the line shown in reverse video, and depressing {Enter}, moves

the line. The *Copy* line option works in the same way. A line is deleted with *Delete*.

New lines are added by positioning to the bottom, where an empty line always appears. After entry, the Move option is used to reposition it.

A {-R} after a command causes ARONTs to expect an acknowledgement from the Test Module; {-1} through {-9} causes a delay of that number of seconds, with no acknowledgement expected.

{Escape} exits to a screen similar to Screen #15.

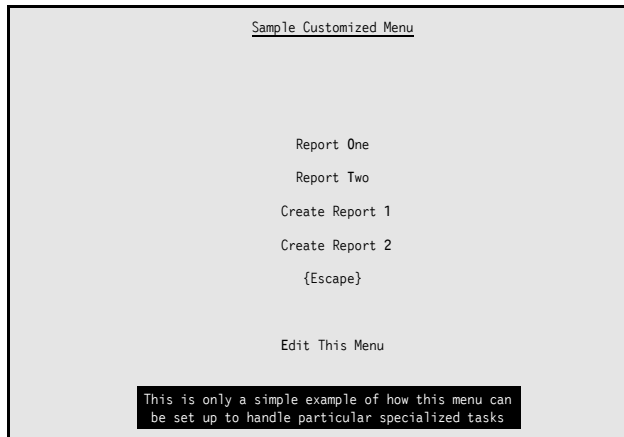

Screen #38

6.5 Custom Menu

The *Custom Menu* can be changed by the end user to personalize ARONTs to the specific environment. A sample display is shown in Screen #37. A *Dos Batch File*, Custom.Bat, defines the menu. Batch programming for this task is relatively simple; if the user is not familiar with this technique, it should not be too difficult to tailor the application as desired by closely following the sample batch file. Any ASCII based text editor can be used to create or modify the batch file; or the command:

```
C:\Aronts> VMFile Custom.Bat
```

can be used to edit the file (section 6.4.6). A sample file is supplied as Listing #8.

Five utility programs are provided: *WriteScr*, *GetInput*, *RemoteOp*, *RestKeys*, and *MapKeys*. *GetInput* and *RemoteOp* return values to the batch file in the *ErrorLevel* variable. *RemoteOp* determines if ARONTs is currently being controlled remotely through the modem. It is important to determine this in the Custom Menu in order to prevent a remote user from unintentionally accessing a program *which cannot work* over the modem. Built-in ARONTs programs automatically operate in the local or remote modes; many other programs will not. Upon arrival in the batch file, the *Dos Standard Input* and *Standard Output* is used; any program which utilizes these I/O channels properly *will* work remotely. Programs which directly access the video display or keyboard cannot function; if control is transferred to such a program, the

```
@Echo Off
:Start
WriteScr 1 1 Clear
WriteScr 1 30 Underline Sample Customized Menu
RemoteOp
If ErrorLevel 1 WriteScr 6 30 Normal Under Remote Operation
WriteScr 8 36 Normal Report
WriteScr 8 43 Bold 0
WriteScr 8 44 Normal ne
WriteScr 10 36 Normal Report
WriteScr 10 43 Bold T
WriteScr 10 44 Normal wo
WriteScr 12 34 Normal Create Report
WriteScr 12 48 Bold 1
WriteScr 14 34 Normal Create Report
WriteScr 14 48 Bold 2
WriteScr 16 37 Normal {Escape}
WriteScr 20 34 Bold E
WriteScr 20 35 Normal dit This Menu
WriteScr 23 15 Reverse ~This is only a simple example of how this menu can~
WriteScr 24 15 Reverse ~be set up to handle particular~
WriteScr 24 48 KBlink
WriteScr 24 48 Reverse specialized
WriteScr 24 59 Normal
WriteScr 24 59 Reverse ~tasks~
GetInput 0T12e
If ErrorLevel 6 GoTo Escape
If ErrorLevel 5 GoTo Edit
If ErrorLevel 4 GoTo Create_2
If ErrorLevel 3 GoTo Create_1
If ErrorLevel 2 GoTo Report_2
If ErrorLevel 1 GoTo Report_1
:Report_1
Analysis Execute Report.001
GoTo Start
:Report_2
Analysis Execute Report.002
GoTo Start
:Create_1
Analysis Create Report.001
GoTo Start
:Create_2
Analysis Create Report.002
GoTo Start
:Edit
VMFile Custom.Bat
GoTo Start
:Escape
WriteScr 24 1 Normal
```

Listing #8

remote user loses control of ARONTs, and a local user must intervene. Directly after a call to *RemoteOp*, if *ErrorLevel* = 1, the system *is* under remote control; if *ErrorLevel* = 0, the system is under local control. All programs or utilities placed into the Custom Menu which cannot be used remotely should be protected from attempted access by testing with *RemoteOp*.

ARONTs maps keys for compatibility with ANSI control sequences. Some programs will not operate with the mapping in place; the program *RestKeys* can be called prior to the usage of such programs, which restores keys to their original function. It is not necessary to map them back prior to exit from the Custom Menu. However, if "canned" reports are to be used (section 4.3), the keys must be mapped when *Analysis* is called; *MapKeys* can be used to do so.

WriteScr provides a convenient method to write messages on the display screen. Syntax is:

```
WriteScr Row Column Attribute Message Message ... Message
```

Row and *Column* specify the starting screen location for the message: 1,1 is the upper left; 24,1 is the bottom left (ANSI terminals have 24, not 25 rows); 1,80 is the upper right; and 24,80 is the bottom right. Attributes are: Clear, clear the screen; Normal; Reverse; Underline; Bold; and KBlink. Any number of spaces between message words are displayed as one space, and leading spaces in front of the first message word and trailing spaces behind the last message

word are not displayed. The special character ~ represents a {Space} to permit accurate display control.

GetInput provides single-character input; the command line includes a list of *valid* entry keys, which may be separated by spaces, or not, as desired. Input is case insensitive. GetInput does not exit until one of the valid keys is depressed; invalid inputs generate an alert tone. On return, ErrorLevel contains the number corresponding to the position of the character input. Special characters refer to certain keys: ~ = {Space}; ' = {Escape} (left single quote, left of 1 on the keyboard); and ' = {Enter} (right single quote, right of ; on the keyboard). It is a quirk of Dos that ErrorLevel must be tested from highest value down to lowest value; the sample listing demonstrates proper testing. Sophisticated menus can present many screens, calling other batch files and programs; however, the intended use is to produce canned reports and automatic import of Analyze.Txt into graphical presentation packages.

6.6 Utilities

Options in this category relate to reports, files, or system maintenance.

Test Analysis Options

Statistics by Test Number	Statistics by Site Number	Site Data
Overall Average	Selected Totals	Selected Totals
One Test Number	One Site	One Site
List Report	List Report	List Report
List Wide	Verbose Report	Verbose Report

{Escape} File Output: Off

Overall Average

Test Number	# of Tests	-Wait-Time- Avg	St	Dv	DTMF	SIT	Busy	Reorder	Ring	Voice	Timeout
Total	27	7.46	1.90		2	1	2	0	0	7	3

{Any key to continue}

Screen #39

6.6.1 Test Analysis

Selecting *Test Analysis* from the Main Menu displays the top half of Screen #38. Information gleaned from the Results Files can be retrieved in a variety of ways.

Statistics by Test Number

The *Overall Average* option (bottom of Screen #38) displays statistical information averaged over all calls. *Successful tests* shows the number of Milliwatt calls, the average Wait Time to achieve Milliwatt, and the standard deviation of the Wait Time. The standard deviation is useful to determine the consistency of the Wait Time. A random variable with a normal distribution is expected to have 68% of its samples fall within the range of one standard deviation above and below the average value. For example, the data for Successful Tests in Screen #38 shows an average Wait Time of 7.46 seconds, with a standard deviation of 1.90 seconds. It is therefore expected that 68%

of all successful test calls had Wait Times fall within the range of 5.56 to 9.36 seconds. The unsuccessful categories show the number of tests of each result type.

Test result statistics for one particular test number are retrieved with the *One Test Number* option; the user is prompted for the desired Test Number. The *List Report* and *List Wide* options (under Statistics by Test Number) print a report for all Test Numbers with non-zero entries, and the totals. List Wide includes the actual dialed Test Numbers, requires a wide printer (or compressed print), and is shown in Listing #9:

12:06:03 PM Monday, November 11, 1991

Statistics Report by Test Number

-Successful Tests-					-----Unsuccessful Tests-----						
Test Number	# of Tests	-Wait-Time- Averg	St	Dv	DTMF	SIT	Busy	Reorder	Ring	Voice	Timeout
Total	27	7.46	5.90		2	1	2	0	0	7	3
(800) 728-1234	1	2 18.75	0.07		0	0	0	0	0	2	0
(800) 881-2345	2	1 5.60			0	0	0	0	0	1	0
(800) 373-2158	3	2 18.35	0.49		0	0	0	0	0	0	0
(410) 363-9999	10	2 0.75	0.07		0	1	0	0	0	0	0
(301) 363-8888	11	8 2.15	1.30		0	0	0	0	0	1	0
(817) 386-4158	18	4 10.28	2.56		0	0	0	0	0	1	2
(700) 555-4141	19	0			0	0	0	0	0	0	1
(301) 363-0123	21	5 6.82	1.87		0	0	0	0	0	0	0
(903) 861-9876	22	3 9.27	1.27		0	0	2	0	0	0	0
(301) 363-0214	24	0			1	0	0	0	0	1	0
(817) 729-8529	25	0			1	0	0	0	0	1	0

Listing #9

Statistics and Data for Site

Site#	Master#	LEC#	LEC Name	Zone	Access Number	Reg	CO#	Description
5	5	2	Illinois Bell	2	(312) 454-5555	3	1	Step/Step

RTS-1 Site Activated Notes UnShared NonConforming State LATA
IL 358

.324 Lanvale Street Site CLLI
CHCGILAUCCGO

.Contact: George Siemens
@ 555-1212 Tandem CLLI
CHCGILMODS1

Site Number	# of Tests	-Wait-Time- Avg	St	Dv	DTMF	SIT	Busy	Reorder	Ring	Voice	Timeout
5	27	31.22	17.67		4	2	3	2	2	2	3

Site Number	Computer Accesses	No Response	Lost Tests	Answers	Failures	Test Mode	Program
5	59	11	1	476	13	160	8

{Any key to continue}

Screen #40

Statistics by Site Number

Statistics by Site Number options produce the same statistical information as Statistics by Test Number for a different group of tests. The *One Site* option requests a single site number, and statistics are displayed for tests originating from that one site, shown in Screen #39. It also shows Site Data.

Selected Totals permits total combined statistics for a selected set of sites to be produced; a Site Selector Menu identical to that of Section 6.3.1 is utilized; after exiting that menu with {Escape}, Screen #40 is displayed. This permits, for example, totalling statistics for East Coast sites (zone #1), or Central Office types.

Test Analysis Options											
Statistics by Test Number				Statistics by Site Number				Site Data			
Overall Average				Selected Totals				Selected Totals			
One Test Number				One Site				One Site			
List Report				List Report				List Report			
List Wide				Verbose Report				Verbose Report			
{Escape}						File Output: Off					
Statistics by Site Number											
Successful Tests				Unsuccessful Tests							
Site Number	# of Tests	-Wait-Time- Aver	-Time- St Dv	DTMF	SIT	Busy	Reorder	Ring	Voice	Timeout	
Total	58	31.54	17.67	10	5	3	3	5	3	9	
500	Scanning for Next Match. . .									{Escape}	10
{Any key to continue}											

Screen #41

The *List Report* option produces a Site Selector Menu which is used to set parameters determining which sites' statistics are to be listed. Listing #10 is the report generated. *Verbose Report* produces a listing which includes Site Information, Site Statistics, and Site Data.

11:43:29 AM Monday, November 11, 1991

Statistics by Site Number List According to the Following Selection Criteria:

Site#	Master#	LEC#	---LEC Name----	Zone	Originating #	CO#	Description
State	LATA	Site CLLI	Tandem CLLI	RTS-1 Sites: Yes		First Site:	1
				Simple HotShoes: Yes		Last Site:	500
				Coded HotShoes: Yes			
				Conforming CO's: Yes			
				NonConforming: Yes			
				Shared Sites: Yes			
				UnShared Sites: Yes			
				Activated Sites: Yes			
				DeActivated Sites: No			

-Successful Tests-				-----Unsuccessful Tests-----						
Site Number	# of Tests	-Wait-Time- Aver	-Time- St	DTMF	SIT	Busy	Reorder	Ring	Voice	Timeout
1	3	37.00	25.63	0	0	0	0	0	0	2
2	2	33.30	15.70	0	0	0	0	0	0	1
3	2	22.20	15.70	0	0	0	0	0	0	1
4	2	22.20	15.70	0	0	0	0	0	0	1
5	27	31.22	17.67	4	2	3	2	2	2	3
73	9	32.60	18.21	2	1	0	0	1	0	0
100	13	32.82	19.35	4	2	0	1	2	1	1
Total	58	31.54	17.67	10	5	3	3	5	3	9

Listing #10

Site Data

The *One Site* option requests a single site number, and data for that site is displayed (along with Statistics, Screen #39). *Computer Accesses* is the number of times the site was successfully accessed by ARONTs. *No Response* is the number of times the site was not successfully accessed after an attempt was made. *Lost Tests* are tests which cannot be read due to various circumstances – not skipped while Routining – these tests are eventually repeated until logged.

RTS-1 sites show additional information retrieved from the RTS-1 during the most recent access (assuming the Setup parameter is set to Collect RTS-1 Information, Section 6.4.1). *Answers* is the number of times the RTS-1 answered an incoming ring; *Failures* is the number of times the RTS-1 answered an incoming ring and timed out waiting

for a Test or Program Code; *Test Mode* is the number of times the RTS-1 was placed into Test Mode; and *Program Mode* is the number of times the RTS-1 was placed into Program Mode. As these last four totals are stored by the RTS-1 with three digit accuracy, and considering the large number of Test Mode accesses by ARONTs, the Answers and Test Mode numbers overflow in practice.

<u>Test Analysis Options</u>											
Statistics by Test Number				Statistics by Site Number				Site Data			
Overall Average				Selected Totals				Selected Totals			
One Test Number				One Site				One Site			
List Report				List Report				List Report			
List Wide				Verbose Report				Verbose Report			
{Escape}						File Output: Off					
<u>Selected Site Data Totals</u>											
Site Number	Computer Accesses	No Response	Lost Tests	Answers	Failures	Test Mode	Program				
Total	140	66	5	456	345	123	234				
500	Scanning for Next Match. . .							{Escape}	10		
{Any key to continue}											

Screen #42

Selected Totals permits this same data to be totalled for a selected set of sites; a Site Selector Menu appears, followed by Screen #41.

The *List Report* option provides a Site Selector Menu; a report is generated for the specified sites, shown in Listing #11. The *Verbose Report* option is the same listing as that under Statistics by Site Number, which includes Site Information, Site Statistics, and Site Data.

1:30:41 AM Wednesday, November 13, 1991											
Selected Site Data List According to the Following Selection Criteria:											
Site#	Master#	LEC#	---LEC Name---	Zone	Originating #	CO# Description					
State	LATA	Site CLLI	Tandem CLLI	RTS-1 Sites: Yes		First Site: 1		Last Site: 500			
				Simple HotShoes: Yes							
				Coded HotShoes: Yes							
				Conforming CO's: Yes							
				NonConforming: Yes							
				Shared Sites: Yes							
				UnShared Sites: Yes							
				Activated Sites: Yes							
				DeActivated Sites: No							
Site Number	Computer Accesses	No Response	Lost Tests	Answers	Failures	Test Mode	Program				
1	15	7	1	0	0	0	0				
2	3	1	0								
3	4	0	1								
4	4	0	1	0	0	0	0				
5	59	11	1	115	1	93	1				
9	7	8	0								
73	24	14	1								
100	24	25	0	456	345	123	234				
Total	140	66	5	571	346	216	235				

Listing #11

File Output

Selecting *File Output* changes the mode of operation to create a Report Output File instead of displaying or listing requested reports. Initially, the Report File Descriptor specified in Setup is selected (section 6.4.1); `{:}` can be

Test Analysis Options

Statistics by Test Number	Statistics by Site Number	Site Data
Overall Average	Selected Totals	Selected Totals
One Test Number	One Site	One Site
List Report	List Report	List Report
List Wide	Verbose Report	Verbose Report

{Escape} File Output: #15 - Report Output for Graphical Interpretation

Creating Statistics Report by Test Number

File Record Created {Any key to continue}

Screen #43

used to scroll through the 15 predefined Report File Descriptors to select a different one. In this mode, any of the Test Analysis options may be exercised – however, records are appended to `Analyze.Txt` instead of making a listing file or displaying information. Screen #42 results. Section 6.4.1 describes the file created. This option is intended to be used in conjunction with "canned" reports (section 4.3), so that the file output is automatically selected, type of data chosen, file created, program exited, and data file fed into a graphical display package automatically from a batch command file. If the `Analyze` program is run with the Create or Execute command line option, the initial File Descriptor is preset to #1 no matter what the Setup parameter is; this permits canned reports to select a File Descriptor independently from the Setup parameter; should that parameter be changed, the canned report continues to use the proper File Descriptor.

{Escape} from the main Test Analysis display (Screen #38) returns to the Main Menu.

Failure Log Selection

Use Entire Log

Restrict to Site

{Escape}

Screen #44

6.6.2 Failure Log

Selecting *Failure Log* (keystroke **L**) from the Main Menu displays Screen #43. The character **L** chooses the

Entire Log for use; two **L**'s from the Main Menu can be used to access the entire log rapidly. The log functions can be restricted to a single site number if desired – permitting separate listings of test failures to be made from a combined multi-site Test Schedule. After the entire log is selected, or the site to be investigated is entered, Screen #44 appears:

Entry: 42
Total: 78

Test	Port	Date	Time	Log	Description
1	1	11/04/91	12:31:16	102	SIT 2#3#5# after 3.2 sec.
3	134	67	3C	11/04/91	15:26:18 104 Local line lost dialtone, Hot Shoe Call
5	12	265	2A	11/04/91	15:26:46 118 Busy after 12.8 sec.
12	20	120	2B	11/04/91	15:27:50 100 Passed after 37.3 sec.
100	876	121	1D	11/04/91	15:28:20 130 Manual DTMF code ### after 11.0 sec.
6	30	141	1F	11/04/91	15:28:20 119 Reorder after 8.9 sec.
8	79	98	2J	11/04/91	15:28:38 122 Invalid Dialing Register
1	2	9	4A	11/04/91	15:29:50 121 Voice after 20.4 sec.
7	33	48	2E	11/04/91	15:29:54 120 Ring after 33.7 sec.
32	57	101	2F	11/04/91	15:30:30 100 Passed after 7.8 sec.
15	22	100	1A	11/04/91	15:30:58 100 Passed after 10.1 sec.
500	21	101	1K	11/04/91	15:31:22 100 Passed after 7.9 sec.
54	22	101	2E	11/04/91	15:31:50 118 Busy after 15.9 sec.
6	24	110	2A	11/04/91	15:32:20 129 Dialtone after 29.3 sec.
88	3000	500	3A	11/04/91	15:32:50 124 Too many Linked Test Definitions
25000	29	110	2J	11/04/91	15:33:22 103 RTS-1 Timed Out
1	24	110	1L	11/04/91	15:34:12 101 DTMF 6 after 16.3 sec.

{Arrows} + Page - Top Bottom Details List Wide Clear {Escape}

Screen #45

The *Top* option is used to return to the start of the log, and + and – scan the log forward and backward by page. *Bottom* goes directly to the last log entry; this is used to check the most recent additions to the log while tests are being performed. The entire Failure log is listed, containing the same information as displayed in Screen #44, with the *List* option. *Wide* creates an expanded listing requiring a 132 column printer, shown in Listing #12. *Details* displays a screen identical to that shown while testing from the Display One option (Screen #4). The log is deleted (after Yes/No verification) with the *Clear* option. The Failure Log is intended to be used as a short term report of problems, to be listed or noted and then cleared. If long term information is desired, the `RawData.Txt` output file option should be used. The Clear option has no practical use if the log is entered restricting the entries to a specific site; this creates a temporary log file for use within the Failure Log program (Clear deletes that temporary file, not the actual log file in that situation).

Each log entry shows the Site; Test Number; Dialing Register; cage and line of the Test Module used for the test call; date and time; a log code; and a description of the failure. DTMF failures report the DTMF digits received.

SIT results show the *Special Information Tones* received in a 6-digit code. SIT tones consist of a sequence of three consecutive tones. The first tone is one of two possible frequencies, and is recorded as tone 1 or 2; the middle tone is one of two different possible frequencies, and is recorded as tone 3 or 4; and the last tone is always a fixed frequency, recorded as tone 5. Each of the three

Failure Log as of 12:09:12 PM Monday, November 11, 1991

Entries: 12

Test Site Nbr	Test Number	Call Reg Code	Expect	Out Line	Originating Num	Port	Date	Time	Log Code	Description
1	20: (700) 555-4141	120	1+	DTMF Code 12	(903) 723-3456	1C	11/04/91	01:33:34	100	Passed after 19.5 sec.
1	20: (700) 555-4141	122	0-	DTMF Code 12	(903) 723-3456	1F	11/04/91	01:34:56	100	Passed after 22.3 sec.
1	20: (700) 555-4141	123	1+	DTMF Code 12	(903) 723-3456	2C	11/04/91	01:36:20	130	Manual DTMF code 111 after 33.7 sec.
1	20: (700) 555-4141	124	0-	DTMF Code 12	(903) 723-3456	2L	11/04/91	01:36:38	100	Passed after 7.2 sec.
1	23: 41 31 163	130	011	DTMF Code 12	(903) 723-3456	1B	11/04/91	01:37:36	130	Manual DTMF code 112 after 33.7 sec.
3	1: (800) 728-1234	11	800	Milliwatt 12	(415) 569-0012	1A	11/04/91	11:47:02	100	Passed after 18.7 sec.
3	1: (800) 728-1234	3	RTS	RTS-1 11	(415) 569-0013	2E	11/04/91	11:49:28	125	RTS-1 response not A, B, or D: 32
1	24: (301) 363-9988	110	0+	Milliwatt 12	(903) 723-3456	4J	11/04/91	15:32:20	101	DTMF 34 after 23.2 sec.
2	1: (800) 728-1234	4	Loc	Nothing 1	(301) 363-8748	1K	11/11/91	12:00:44	127	ARONTS RTS-1 timeout
2	10: (410) 363-9999	9	7dg	Milliwatt 1	(301) 363-8748	2B	11/11/91	12:01:12	100	Passed after 0.7 sec.
2	10: (410) 363-9999	9	7dg	Milliwatt 1	(301) 363-8748	1C	11/11/91	12:01:14	102	SIT 1#4*5# after 1.2 sec.
1	1: (800) 728-1234	3	RTS	RTS-1 12	(903) 723-3456	2A	11/11/91	12:02:22	100	Passed after 3.2 sec.

Listing #12

tones can be of two different durations; this is recorded as * (short) or # (long) after each tone digit. Bellcore *Feature Specification Document*, titled "Special Information Tones (SITs) FSD No. 20-06-0500", details this information. However, the local Telco should be consulted regarding an interpretation of the tone sequences received, as in practice the specifications are not necessarily followed.

Recorded Tone Number	Frequency	Which Tone
1	913.8 Hz	1
2	985.2 Hz	1
3	1370.6 Hz	2
4	1428.5 Hz	2
5	1776.7 Hz	3

Recorded Tone Duration	Length
*	274 milliseconds
#	380 milliseconds

The Failure Log display exits to the Main Menu with {Escape}; it automatically exits after clearing the log as well.

Failure Log options available from the Main Menu are also provided inside the Testing program (section 6.2.1), with the exception of the ability to restrict log entries to a single site. Table I supplies a description of Log Codes; codes 200 and above are reserved for diagnostic purposes.

6.6.3 Terminate Print Job

The *Terminate Print Job* option in the Main Menu is used to kill any printing previously sent to the line printer. Report printing is buffered to permit continued operation of the screen menus while long print jobs are simultaneously handled. This option requests verification (Yes/No) and terminates the job.

Table I: Log Code Descriptions

Log Code	Description
0	System Startup
1	Immediate Shutdown by Operator
2	System Shutdown, Finished Up Tests
97	Recalled Site
98	Calling Site, Specific Test
99	Calling Site
100	Passed
101	DTMF Received
102	SIT received
103	RTS-1 Timed Out
104	Local line lost dialtone, Hot Shoe Call
105	No Response from Hot Shoe, DF 2
106	Hot Shoe Test Timeout
107	Unable to read RTS info
108	Local line lost dialtone, RTS Call
109	No Response from RTS, DF x
110	Improper RTS access response, DF x
111	Unable to read RTS info, DF x
112	Lost RTS test call, DF x
113	Lost loop current calling site
114	Lost loop current during test call
115	Lost loop current while hanging up site
116	RTS call with premature DTMF
117	Improper billing code field
118	Busy
119	Reorder
120	Ring
121	Voice
122	Invalid Dialing Register
123	ARONTS telephone line bad, failed
124	Too many linked Test Definitions
125	RTS-1 response not A, B, or D
126	Unable to access site
127	ARONTS RTS-1 timeout
128	Lost loop current while paused
129	Dialtone
130	Manual DTMF code

6.6.4 Wipe RawData File

The test call detail output file RawData.Txt can be deleted with the Main Menu, *Wipe RawData File* option. The current size of the file is shown on the menu line. Verification of this request is done in two stages: Yes is required for both prompts.

6.6.5 Zero Statistics

The Results files can be initialized with the Main Menu, *Zero Statistics* option. This clears all information; reports extracted using the *Test Analysis* Main Menu option will subsequently be from new test call data. Verification is done in two stages: Yes is required for both prompts.

6.6.6 Revise Date

The Main Menu, *Revise Date* option, is used to change the calendar date. The current date is redisplayed at the bottom of the display screen; if no change is desired, {Enter} can be depressed. A new date must be entered in MM/DD/YY format, followed by {Enter}.

6.6.7 Hour/Minute Change

The Main Menu *Hour/Minute Change* option is used to update the system time. The current time is redisplayed at the bottom of the display screen; if no change is desired, {Enter} can be depressed. A new time is entered in HH:MM:SS format, followed by {Enter}. The seconds need not be entered, by using HH:MM.

Offload			
Printer.Txt			
Analyze.Txt			
RawData.Txt			
Format Floppy A:			
Format Floppy B:			
File Notes			
Backup/Retrieve			
File	Current Version	Modified	Date
Test Schedule	1		10/28/91
Test Definitions	2	Yes	11/10/91
Test Numbers	1	Yes	11/10/91
Dialing Registers	2	Yes	11/10/91
Module Commands	73		11/10/91
{Arrows}	Archive	Retrieve	Directory Zero {Escape}

Screen #46

6.6.8 File Maintenance

Selection of Main Menu option *File Maintenance* produces Screen #45. The reverse video field is moved to the desired action with the {Arrows}. The *Offload* options are used to compress an ARONTS text file from the hard disk, and place it on a floppy disk in self-extracting form. The floppy disk is placed into either drive, and {Space} entered to pull off the appropriate file: Printer.Txt, Analyze.Txt, or RawData.Txt. (Screen #45 shows different options because the Offload item is not selected.) The files are compressed and written to the floppy with an Exe extension in a directory, \Aronts. If the directory is not present, it is created. The printer file is retrieved on another computer by setting the current directory to the

location where the file is to be stored, and entering the command: A:\Aronts\Printer. The other files are handled similarly; if the floppy drive on the recipient machine is B:, the A: in the command is replaced with B:. This option does not disturb other files on the floppy.

More than one file of the same type can be offloaded to the same floppy disk. For example, the printer file can be offloaded to the same floppy repetitively; different reports can be created, and the printer file offloaded after each report creation. ARONTS checks the files on the floppy disk: if there are not any existing printer files, the file is stored (after extraction) as Printer.Txt; if that file is already present, a serial number is created for the new file. In this manner, Printer.001, Printer.002, etc. are automatically created (and all such files are stored in the one self-extracting file, Printer.Exe). When extracted on the recipient computer, each file is created from the one compressed file.

If the offloaded file does not fit on the disk inserted, but *will* fit on an empty disk, the user is prompted to try again with a fresh disk. If the file cannot fit on the size disk used, the file is broken into pieces and stored on multiple disks. The disks need not be formatted other than the first; and all files are destroyed in the floppy's root directory. It is necessary to note the order in which the disks are created. To transfer the large file to another system, the directory \Aronts must be created on the target machine's hard drive; the first disk inserted into floppy drive A:; and the command Restore A: C: given. B: can be substituted for A:, and D: can be substituted for C: if appropriate. The user is prompted for each disk in the set. When complete, the files can be extracted from the compressed form by issuing the command C:\Aronts\RawData from the directory where the RawData file is to be placed. Analyze or Printer can be handled similarly.

Floppy disks must be *formatted* before they are usable. If new disks are to be placed into duty, the Format option can be used to accomplish this. The floppy is placed into the appropriate drive, and {Space} entered after selecting either Format A: or Format B:. The format operation *destroys all information on the floppy disk*. Once a disk is formatted, the Offload or Backup options can be utilized.


Five *archives* are displayed at the bottom of the screen. Each shows: the version number of the current file; if the file has been modified since it was last stored in the archive; and the date of the last change to the file version. The current version may be stored into the archive by selecting *Archive*. A prompt requests the version number to store it under. If the specified version number is already in the archive, a second prompt asks for verification to overwrite

the previous version. If such permission is not given, the Modified attribute may show unmodified even though it was not stored.

A file version is extracted from the archive by selecting *Retrieve*. If the current version has been modified and not archived, a warning is given; the user may abort or continue (and lose the changes to the current version). Choosing *Directory* supplies a list of the versions available of the currently selected filetype. *Zero* initializes the current version of the specified file; this is used to start from scratch when creating a new version. If the current version has been modified and not archived, a warning is given; the user may abort or continue.

File Notes provides an on-line mechanism to keep track of the uses of each file version; ARONTS does not use this internally. A sample usage is shown in Screen #46. Operation is identical to Module Commands (section 6.4.6).

{Escape} from Screen #45 exits and returns to the Main Menu.

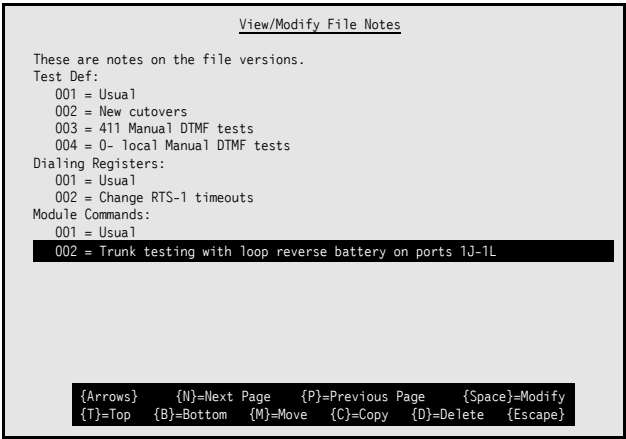

Screen #47

Backup/Retrieve Options

Selecting *Backup/Retrieve* from Screen #45 results in the menu of Screen #47. Data files, archives, and programs are shown. In addition to the modified attribute and date of last change, the file size (in bytes) is displayed. The files in the example screen are for an ARONTS system set up for 500 sites.

In order to *Backup* a system file to a floppy disk, the (formatted) disk is placed into either drive, and *Backup* selected. *Retrieve* performs the same operation in reverse – a previously backed up file is extracted from the floppy disk, and overwrites the existing file on the hard disk. A directory of either floppy disk is available by selection of *Floppy Directory*.

Backups should be performed periodically in order to safeguard the information in the system. It also can be used

File Backup/Retrieve to/from Floppy Disk Options			
Information	Modified	Date	Size
Setup Data	Yes	11/10/91	7710
Site Data	Yes	11/10/91	43000
Site Notes	Yes	11/10/91	100000
Test Number Statistics	Yes	11/10/91	102034
Site Statistics	Yes	11/10/91	28557
Log File	Yes	11/10/91	44506
Test Schedule Archive		10/22/91	796
Test Definitions Archive		10/31/91	1416
Test Numbers Archive		10/20/91	1261
Dialing Registers Archive		10/23/91	2453
Module Commands Archive	Yes	11/10/91	646
LEC Data	Yes	11/10/91	150000
C0 Descriptions	Yes	11/10/91	2560
State Names	Yes	11/10/91	512
File Notes		10/21/91	96
Programs	Yes	11/10/91	
{Arrows} Backup Retrieve Floppy Directory {Escape}			

Screen #48

to save a particularly interesting Failure Log prior to clearing it, if desired. Keeping all files safely copied makes it possible to transfer the data to a different PC, or to retransfer data back to the original system's hard disk should some event cause data loss. The File Maintenance Backup/Retrieve screen prominently displays the files which require backups.

The larger files are automatically compressed prior to performing a backup. A request to back a file up to floppy has several possible outcomes. If a disk is not inserted into a floppy drive, or the disk is not formatted, nothing is done. If there is sufficient remaining room on the floppy for the particular file chosen for backup, it is copied. If insufficient space exists, but the size of the floppy disk is such that a clean disk *can* hold the requested file, the user is prompted to try again with a new disk; no change is made on the first attempt. *Programs* can only be backed up to a high density floppy disk (> 1 mByte). All other files which are larger than the size of the floppy disk used are broken into smaller fragments and stored in multiple disk sets. A prompt informs the user approximately how many disks are necessary. Multiple disk copying does not require disks past the first to previously be formatted; and all files in the root directory are destroyed. Disks must be consecutively marked in this situation so that they can be submitted in the same order when retrieved. If a multiple disk backup is interrupted (by removing the floppy, ^Break, or disk error) the Modified attribute may incorrectly show unmodified.

{Escape} from Screen #47 returns to Screen #45.

7. TEST CONSTRUCTION

There are many possible ways to construct tests with ARONTS. This section gives direction to the process of assembling test schemes, with examples for assistance.

7.1 Versions

File versions permit many different test scenarios to be constructed, archived, and retrieved when needed. It is recommended that the Test Numbers and Dialing Registers files not be given multiple versions except for very special test cases, where it is not likely that multiple partition operation is needed. Although it is possible to construct independent sets of Test Definitions/Test Numbers/Dialing Registers files which operate in trios, doing so effectively limits ARONTS to one partition. If many Test Definitions versions use the same Test Numbers and Dialing Registers files, up to four Test Definitions can be used in test partitions simultaneously.

Test Definitions versions should segregate testing into Milliwatt, Manual DTMF, and RTS-1 Programming groups. Should reprogramming of RTS-1 parameters be needed, the particular parameter can be placed into a Dialing Register which is allocated (always) to the RTS-1 command. The Test Definitions file version archived for RTS-1 control can be made current, a Test Schedule prepared to match all RTS-1 sites (or retrieved from the archive), and the test run performed.

Similarly, Test Definitions using Manual DTMF tests should not contain any other type of test. This has two effects: personnel monitoring test calls need not waste time monitoring completely automatic tests, nor have the possibility of incorrectly intruding on tests (and ruining them) which do not require human assistance; and the Manual DTMF Test Definitions file version can be given its own partition so that personnel can monitor that partition while other test ports are occupied placing test calls that can be handled by machine.

Test Definitions versions directing test calls to Milliwatt tones may be given their own port partition in combination with any other type of test.

Although Test Definitions should be broken down into these minimum three groups, it may be desirable in some cases to further subdivide these categories. A prime example is Manual DTMF tests. These typically are test calls which are intended to terminate to particular operators, long distance networks, or specific voice recordings. If the tests are divided into groups based upon the destination, it makes it much easier for the person monitoring the test call

to make a quick determination as to the success or failure of the particular test. For example, a Test Definition can be created which includes all test calls to AT&T operators; another to MCI operators; another to C&P operators; and another to a recorded voice message in Switzerland. Assume that four people are assigned to the test process. Each of these Test Definitions can be given a *one port* partition, and the four people assigned to those ports.

Person #1 need only be told that if the call reaches AT&T, to say "Testing, Thank you" and enter DTMF digits 000 (recorded as a Success). A list of DTMF codes can be assigned to the other possibilities, and if the wrong operator is reached, the tester can quickly enter the appropriate code according to that list: say 001 if MCI is reached, 002 if Sprint is reached, etc. In this way, the testing personnel need only keep in mind what is expected, and if incorrect termination occurs, enter one of several discriminating codes. The Failure Log then provides a record of *who the incorrect operator was*, in addition to pass or fail.

Similarly, the second and third testers enter the Success code if *their* assigned operators are reached; the same codes for incorrect operators can be used. An alternative method is to have each person simply enter the DTMF code according to the operator reached; this eliminates the necessity of breaking the Test Definitions files down into separate versions according to operators expected. However, there are two drawbacks to doing so: the Failure Log must be inspected and the individual tests classified manually as Success or Fail by checking if the recorded DTMF code corresponds to the expected result; and secondly, it is easier psychologically to make a quick determination while monitoring a test call if it is known in advance what is expected.

Person #4 in the above example enters 000 if the Swiss recording is reached; and perhaps some other predefined DTMF codes breaking the incorrect result down by the type of failure.

Certain files do not have versions; these are not intended to vary by test scenario. However, should a circumstance occur where it is desired to temporarily change one of these files for a particular test set, the file can be *backed up* to floppy disk using the File Maintenance menu; the file changed and used; optionally backed up to a *different* floppy disk for later use; and the file retrieved from the first floppy disk, restoring the file to its original form. This does not take long to execute, and can be done without going to the Dos prompt.

7.2 Test Definitions

Test Definitions can be created in a simplistic sense by assigning each individual test its own Group. One Dialing Register and one Test Number can be specified, with the number of Tests set to one. This method works if the type of testing is fairly limited, but quickly becomes unmanageable for comprehensive test sets. This technique is limited to five *actual tests* per Test Definition, and a large number of Continued Test Definitions is the most likely result. A more efficient scheme organizes the tests into logical sequences.

Test Number Assignment

Each Test Definition Group can refer to Test Numbers in a range of 100. It is therefore desirable to assign Test Numbers in ranges such that numbers most likely to be tested together (with the same dialing pattern) are consecutive. Suppose that a particular Site is to be tested for proper call routing. The (milliwatt) test calls are generally grouped into three categories: 1 + 10 digits; 1 + 7 digits; and 7 digits. The first category is inter Area Code, inter Lata, toll calls. These numbers are essentially reachable from any site in the same fashion, with the only exceptions being the sites where the terminating test number happens to be near the site. These *global* test numbers are going to be called from every site, with some numbers excluded on a site-by-site basis. As an example, assign Test Numbers 1-100 to this category.

The second above category consists of intra Area Code calls. There are probably several Test Numbers to be called from sites within their Area Code, and these numbers are different in every Area Code. Suppose that the sites of interest are located in 12 different Area Codes. Test Numbers 101-110 can be assigned to Area Code wide tests for the first Area Code; 111-120 to the second Area Code; until Test Numbers 211-220 are assigned to the twelfth Area Code.

The third above category consists of local calls. There are probably several Test Numbers to be called from sites within their local calling areas, and these numbers may be different in every calling area. Suppose that the sites of interest are located in 100 different local calling areas. Test Numbers 1001-1010 can be assigned to local calling area tests for the first calling area; 1011-1020 to the second calling area; until Test Numbers 1991-2000 are assigned to the 100th calling area.

Assume that Dialing Register 10 handles 1 + 10-digit calls for RTS-1 sites; Dialing Register 20 handles 1 + 10-digit calls for Hot Shoe sites; Dialing Register 30 handles 1 + 7-digit calls for RTS-1 sites; Dialing Register 40 handles 1 + 7-digit calls for Hot Shoe sites; Dialing Register 50

handles 7-digit calls for RTS-1 sites; and Dialing Register 60 handles 7-digit calls for Hot Shoe sites.

In this example, the Test Definition for all sites allocates Group 1 to the first category, Group 2 to the second category, and Group 3 to the third category. All RTS-1 sites specify Test Numbers 1-100 with Dialing Register 10; this can be entered once, and *cloned* to all RTS-1 sites. Similarly, all Hot Shoe sites specify Test Numbers 1-100 with Dialing Register 20.

The next step is to handle the area code specific changes. For the first area code, the Test Numbers in Group 1 with that area code are removed; and Test Numbers 101-110 are specified in Group 2 with Dialing Register 30 for RTS-1 sites, and Dialing Register 40 for Hot Shoe sites. This Test Definition is then cloned to all sites with the same area code (first for RTS-1 sites, second for Hot Shoe sites). This is repeated for all area codes.

The last step is to handle the local calling area specific changes. For the first calling area, the Test Numbers in Group 2 with that calling area are removed; and Test Numbers 1001-1010 are specified in Group 3 with Dialing Register 40 for RTS-1 sites, and Dialing Register 50 for Hot Shoe sites. This Test Definition is then cloned to all sites with the same calling area (first for RTS-1 sites, second for Hot Shoe sites). This is repeated for all calling areas.

The above process accomplishes the minimum amount of data entry, since the differences are cloned to compatible groups. The resulting Test Definitions file tests all appropriate Test Numbers with only three Groups per definition. It is also helpful to archive the Test Definition at each of the three points above, so that it is possible to go backwards and redo the definitions at later stages (which indeed do overwrite some of the previous entries) without starting at the beginning, should an error be made and cloned to a large number of sites.

Dialing Register Assignment

There are instances where the same Test Number can be dialed in a variety of ways, and testing of each is required. Three examples are: different physical lines; different IXC's; and methods of dialing.

The Test Definition permits consecutive Dialing Registers to be used to repeat test calls for all Test Numbers listed in the Group. By placing appropriate Dialing Registers in numerical order it is possible to greatly enhance the coverage of a Test Definition.

The first example involves testing different test lines connected to RTS-1's. These may be of different classes of service, such as single party, coin, etc., or may be presubscribed to different carriers. The dialing method may differ between them. However, Dialing Registers can be

created which handle the appropriate dialing pattern for each, including the code to select the appropriate RTS-1 outline. It is assumed that the RTS-1's are deployed in a uniform fashion so that the outline numbers correspond to the same classes of service. If outlines 13, 14, 15, and 18 are to be tested, then Dialing Register 10 can be created to place a 1 + 10-digit call on RTS-1 outline 13; Dialing Register 11 can be created to place a 1 + 10-digit call on RTS-1 outline 14; Dialing Register 12 can be created to place a 1 + 10-digit call on RTS-1 outline 15; and Dialing Register 13 can be created to place a 1 + 10-digit call on RTS-1 outline 18. Similarly, Dialing Registers 30-33 can be set for 1 + 7-digit calls, and Dialing Registers 50-53 set for 7-digit calls.

The second example involves testing different 10xxx codes. The same Test Number is to be dialed with a 10288 prefix to verify AT&T connection, and repeated with a 10222 prefix to verify MCI connection. Dialing Register 14 can be created with the 10288 prefix, and Dialing Register 15 with the 10222 prefix. Similarly, Dialing Registers 24 and 25 can be created for Hot Shoe calls. If desired, the same idea can be applied to the 1 + 7-digit registers.

The third example involves testing different methods of dialing. Dialing Register 16 can be created to command RTS-1's to dial at the fast DTMF speed (10 digits per second); Dialing Register 17 can be created to command RTS-1's to dial at the slow DTMF speed (5 digits per second); and Dialing Register 18 can be created to command RTS-1's to rotary pulse dial. Similarly, Hot Shoe Dialing Registers can be programmed to fast DTMF dial and slow DTMF dial (from ARONTS directly); pulse dialing is not possible with these sites.

The above examples assigned consecutive Dialing Registers to various types of tests which can be repeated with the same Test Numbers, varying some parameter on each repetition. With this organization, all that need be done to activate these multiple tests is to specify the number of consecutive tests in the Test Definition. This example, which combines more tests than would most likely be desired in one Test Definition version, could set the number of tests in Group 1 for RTS-1 sites to 9. This would cause Test Numbers 1-100 (with the subsequent exclusions) to be dialed nine different times: the first four with different RTS-1 outlines; the next two forcing AT&T and MCI connection; and the last three dialing fast and slow DTMF, followed by rotary pulse.

Much of the above entries can be handled by cloning, restricting matches to various area codes, area codes + exchanges, and site type. After the Test Definition is prepared in this manner, individual differences in sites (such as lack of certain lines on RTS-1 units) can be entered, customizing the definition to the exact situation.

7.3 Dialing Registers

This section deals with construction of Dialing Registers to handle different types of calls. The complete definition of nonsubstitution Dialing Register commands is in section 9.4; this section is included primarily to describe substitution commands and to present examples of commonly used structures.

Dialing Registers can be as long as 79 actual characters and 100 characters after the substitution commands are expanded. Spaces are transparent, and are placed only to make the information more understandable to the viewer. Upper and lower case is significant.

Dialing Registers are used for two completely separate functions: to access a site, and place test calls. In general, there are a small number necessary to access sites, and potentially a large number required to make actual tests.

7.3.1 Substitution Dialing Register Commands

There are six Dialing Register commands for which the Control Computer substitutes digits prior to sending the command to the Test Module:

```
ax: Access Number
tx: Test Code, Access Code
px: Program Code, Authorization Code
nx: Test Number
c: Credit Card Number
s: Secret Authcode
```

Each of these are *lower case* letters; those followed with an x must be appended with a single numeric digit, or *. If a numeric digit x = 1-9 is used, the last x digits of the specified field are used; for x = 0, the last 10 digits of the specified field are used; and for x = *, all of the digits of the specified field are used. The t and p codes represent the Test Code and Program Code for RTS-1 sites, and the Access Code and Authorization Code for Coded Hot Shoe sites.

7.3.2 Access Registers

Typical Dialing Registers used to access the various types of sites are:

```
1: W1 1a* W1 WB WD
2: W1 1a* W1 p* W1 P50 t* WB WD
3: W1 1a* W#0130 Q #t* W#0103 Q 0245 W#0103
  Q WB WD
4: W1 WB WD
5: W1 1a7 W#0130 Q #t* W#0103 Q 0245 W#0103
  Q WB WD
6: W1 a7 W#0130 Q #t* W#0103 Q 0245 W#0103
  Q WB WD
```

All registers used to access a site must end with WB WD, and leave the site in a mode in which it is prepared to accept a dialing command.

Register 1 above is used for Simple Hot Shoe sites: it waits for local (ARONTS test line) dialtone (W1); dials 1;

dials the entire access number (for domestic 1 + 10-digit calls); waits for the Hot Shoe dialtone (W1); clears the area used to record information later on (WB); and transfers the call from the Test Module to the ARONTS Control Computer (WD).

Register 2 above is used for Coded Hot Shoe sites: it waits for local (ARONTS test line) dialtone (W1); dials 1; dials the entire access number (for domestic 1 + 10-digit calls); waits for the Hot Shoe dialtone (W1); changes the default DTMF dialing speed to one per second (P50); sends the entire Authorization Code (t*); clears the area used to record information later on (WB); and transfers the call from the Test Module to the ARONTS Control Computer (WD).

Register 3 above is used for RTS-1 sites: it waits for local (ARONTS test line) dialtone (W1); dials 1; dials the entire access number (for domestic 1 + 10-digit calls); waits for the RTS-1 Access Prompt (W#0130, wait up to 30 seconds for one DTMF digit); pauses a quarter second (Q); sends DTMF #; sends the entire RTS-1 Test Code (t*); waits for the RTS-1 Test Prompt (W#0103); pauses a quarter second (Q); commands the RTS-1 to utilize a 45 second timeout on all subsequent test calls (0245); waits for another Test Prompt (W#0103); pauses a quarter second (Q); clears the area used to record information later on (WB); and transfers the call from the Test Module to the ARONTS Control Computer (WD).

Registers 5 and 6 are identical to register 3 except that they access RTS-1 sites requiring 1 + 7-digits and 7-digits to reach the site location.

Register 4 above is used to place test calls directly from the ARONTS telephone lines: it waits for local (ARONTS test line) dialtone (W1); clears the area used to record information later on (WB); and transfers the call from the Test Module to the ARONTS Control Computer (WD).

The Access Register for each site is set to the appropriate Dialing Register. Potentially, three different Dialing Registers can be required for each of the three Site Types, in order to access: long distance sites (1 + 10-digits); nearby sites (1 + 7-digits); and local sites (7-digits). These nine access registers plus one required for direct tests from ARONTS lines makes a total of ten access registers for most situations. Dedicated networks may have additional dialing codes in order to reach special circuits; these may be handled with additional access registers. The RTS-1 access registers may require the timeout command to be removed for credit card calls (see below), and if RTS-1 commands are to be issued, the Test Code can be replaced with the Program Code, or as is shown in a later example, left as is.

7.3.3 Test Call Registers

Dialing Registers used to place test calls are configured to permit a smooth progression from the completion of an access register to dialing an actual number. Registers used to place test calls for Hot Shoe sites begin with whatever actual dialing pattern is desired; those used to place calls with RTS-1 sites use a beginning portion to command the RTS-1 to place the test call. Either type then continues with a portion dedicated to detecting the test result, and differs for Expected results of Milliwatt, RTS-1, and Manual DTMF. RTS-1 test registers continue with a portion used to terminate the test call and return to the Test Prompt. Some call types add special instructions after the initial dialing.

Test Register =

[RTS-1 command]
(Dialing Pattern)
[RTS-1 command end]
[Special instructions]
(Detection part)
[RTS-1 call termination]
(Completion part)

Examples of RTS-1 commands are:

- 1: Q 22 (Dialing Pattern) A# WC10AE
- 2: Q 28 (Dialing Pattern) A# WC10AE
- 3: Q 223 (Dialing Pattern) A# WC10AE
- 4: Q 34 (Dialing Pattern) A# WC10AE
- 5: Q 46 (Dialing Pattern) # MS08

The first example pauses a quarter second (Q); sends DTMF 22, the RTS-1 command to DTMF redial a number at 10 digits per second on outline #2; the dialing pattern to be redialed; the DTMF digit A; the command terminator #; and a command to wait up to 10 seconds to receive the DTMF digit A (WC10AE). The A is used as a simple method for ARONTS to be notified when the redialing has been completed; ARONTS does not continue on to the Detection part until the A has been received, which does not affect the line dialing.

The second example is the same except that outline #8 is selected. These two examples are for single module RTS-1's, which do not require a Module digit in order to identify a line. Example 3 is for a 2-module RTS-1, and it places a test call on outline #3 of module #2. Example 4 commands the RTS-1 to slow DTMF dial on outline #4 (single module RTS-1). The last example pulse dials on outline #6. An eight second delay (MS08) is appended as a compromise so that ARONTS timing does not begin too early; some time is required to pulse dial a number, and there is no indication to ARONTS when the number has completed dialing.

The detection part tells ARONTS to begin looking for the call termination, and is of one of the following types:

Milliwatt: WB W*4530
RTS-1: WB W#T0103
DTMF Code: WB W#T0345 MS05

The Milliwatt code indicates to look for Milliwatt, SIT, Busy, Reorder, Ringing, Voice, or 4 DTMF digits, or less than 4 DTMF digits if 5 seconds elapse after the last one; and to look for these tones up to 30 seconds. The RTS-1 code indicates to wait up to 3 seconds (03) to receive 1 (01) DTMF digit, and to time how long it takes to get the response (T). This code comes after an RTS-1 command, so a Test or Program Prompt is expected as an acknowledgment. The DTMF (manual) code is similar, except that it is programmed to wait up to 45 seconds to receive 3 digits. A 5 second delay is placed after the DTMF detection to give the user time to place the monitor telephone on-hook, so that when the test call is complete, ARONTS can control the line without interference from the monitor phone (it may be hanging up the line).

The RTS-1 call termination is WQ35 ###, which waits up to 35 seconds for quiet (the milliwatt tone to interrupt) prior to sending ### to the RTS-1 to release the test call.

The completion part is WD for Hot Shoe calls and WE03 W0 for RTS-1 calls. The former transfers control to the Control Computer, and the latter waits up to 3 seconds for the RTS-1 to exit (and send a DTMF Test or Program Prompt). The W0 generates a failure for the case when the RTS-1 does not respond to the initial call termination command.

It is not usually necessary to change the above pieces of Test Dialing Registers, other than to set the timeout delays and RTS-1 outline numbers as desired. The dialing pattern portion requires matching to the desired type of test call.

Simple Dialing Patterns

The dialing pattern portion of the Dialing Register just states how the call is to be dialed. Examples are:

1 + 10-digits: 1 n*, 1 n0
1 + 7-digits: 1 n7
7-digits: n7
0 + 10-digits: 0 n*, 0n0
0 + 7-digits: 0 n7
0- : 0
International: 011 n*
Service calls: n3

The 0+, 0-, and service calls may require a detection part of Manual DTMF, and the 0+ may be used in conjunction with a special instruction to handle credit card calling; this section is limited to a discussion of the dialing pattern portion. The service call example assumes that the service numbers are placed into the last three digits of the Test

Number, such as: (000) 000-0411 or (000) 000-0611. Two complete Dialing Registers for an RTS-1 are:

Q 32 1 n* A# WC10AE WB W*4530 WQ30 ### WE03 W0
Q 32 n3 A# WC10AE WB W#T0345 MS05 WQ30 ### WE03 W0

The second example uses a Manual DTMF Code. An example for a Hot Shoe:

1 n* WB W*4530 WD

Dial-up Services

Some types of services offer calling after first dialing an access number, receiving a second dialtone, and entering an authorization code. The code is entered into ARONTS from the Setup options as the Secret Authcode. Examples of its use are:

5551234 W3 s S n*
1 800 5551234 W2 s S 1 n*
1 n* W3 s S 1 800 5554321

The first example uses 555-1234 as a local access number; waits for precise dialtone (W3 does not false on ringback tone, while W1 might); sends the Secret Authcode (s); pauses one second (S); and dials the entire (10-digit) Test Number without a leading 1. The second example dials an 800 access number and waits for 400 Hz "ready" tone (W2); sends the authcode; pauses one second; and dials 1 + the 10-digit Test Number. The last example uses the Test Number as the service access number; inserts a leading 1; waits for a second dialtone; sends the authcode; pauses one second; and dials a fixed 10-digit terminating number with a leading 1.

Credit Card Calling

0+ test calls can return a "bong" tone, after which a credit card number is expected. The bong signal may be detected in several ways. In many cases it contains a DTMF #; this can be detected with a WC command. If the DTMF digit is not present, or if the signal loss is too great to reliably detect the #, a general purpose energy detector can be used with the WT command. No matter how the tone is detected, if it has an embedded #, the RTS-1's must not be programmed to time out on test calls (the 02xx) command. When this RTS-1 option is invoked, the test call is terminated with a single # in addition to ###. The result is that the bong commands the RTS-1 to hang up the call. This can be addressed in two ways: the simplest is to remove the 02xx from the RTS-1 access Dialing Register when credit card calling is being performed; the second method is to have the credit card Dialing Register command the RTS-1 to remove the timeout and restore it when the test call has completed. The latter method requires a considerable number of digits and generally requires continued Dialing Registers.

The credit card number is entered into ARONTS from the Setup options. Examples of its use are:

WC30#E SS c MS04
WT302222102 SS c MS04

These codes are placed after the dialing pattern (0+) and before the detection part as the Special Instructions. The first example waits up to 30 seconds to receive a DTMF #; pauses 2 seconds to be sure that the tone is clear; sends the credit card number (c); and pauses 4 seconds. The last pause is necessary because in many credit card calls, before the call is actually placed, the carrier places a short voice message similar to, "Thank you for using carrier X". If the W* command is active at this point, it may detect the voice and stop the test as a voice detection. The last pause must be long enough to ensure that this message is skipped, but not so long that the connect time statistics are skewed, or possibly even a response tone is missed.

The second example uses an energy detector instead of a DTMF detector. An added advantage of this is should the bong go undetected, after several seconds usually a voice message appears prompting the user to enter a credit card number. The energy detect will trip on the voice, and the call successfully placed. The above example is set to look for approximate 800 Hz energy which lasts for a duration of 0.2 seconds.

Call Reorigination

Some services offer a *call reorigination* feature. Dialup services and credit card calls often fall into this category. The reorigination feature itself can be tested by continuing Dialing Registers: the first register places a call as previously discussed, and it is handled as normal; that register is *continued* with another Dialing Register which sends the reorigination command and digits sufficient to place a second call. This process can be repeated if necessary. A dialup service example is:

Q32 18005551234 A# WC10AE WT302222102 SS s SS n* WB W*4530 WD
set to Expect Milliwatt and Continue with:

WQ30 M3#SSMO SSSS n* WB W*4530 WQ30 ### WE03 WO

which is also set to Expect Milliwatt. These are complete Dialing Registers for use with RTS-1's. The first register commands the RTS-1 to slow DTMF dial an 800 service access number; wait up to 30 seconds for a tone or voice prompt (no ringing allowed); pause 2 seconds; enter an authcode; pause 2 seconds; send the Test Number; detect the Milliwatt; log the test result (WD) and continue with the next Dialing Register. The second register waits for the Milliwatt to drop off (WQ30); sends a 2-second DTMF # to cancel the call through the service and reoriginate a second call; a 4 second pause to receive the prompt; send the (same) Test Number; detect the Milliwatt; and the standard RTS-1 call termination exit sequence.

A credit card RTS-1 example is exactly the same, except that the first call is placed as a 0+ number with a credit card code:

Q32 0 n*A# WC10AE WC30#E SS c MS04 WB W*4530 WD
WQ30 M3#SSMO SSSS n* MS04 WB W*4530 WQ30 ### WE03 WO

For Hot Shoe sites, this would be:

0 n* WC30#E SS c MS04 WB W*4530 WD
WQ30 M3#SSMO SSSS n* MS04 WB W*4530 WD

A dial-up service Hot Shoe test pair is:

18005551234 WT302222102 SS s SS n* WB W*4530 WD
WQ30 M3#SSMO SSSS n* WB W*4530 WD

RTS-1 Programming

ARONTS can be used to access RTS-1 units expressly for the purpose of changing parameter settings. If the *Access Register* is modified to use the Program Code instead of the Test Code by:

W1 1a* W#0130 Q #p* W#0103 Q WB WD

then program instructions can replace Test calls:

75215 WB W#T0103 Q WD

and in the above example, the RTS-1 is programmed for an Overall Time per session of 15 minutes.

If the Access Register is not changed (still using the Test, not Program Code), then the Dialing Register used to change parameters (Test call register) can be set to exit Test Mode and enter Program Mode, followed by the intended command:

Q01 W#0106 Q #p* W#0103 Q 75215 WB W#T0103 Q WD

The Test registers are set to expect RTS-1 responses. Additional programming functions can be added by *Continuing* the register to another with more commands, such as:

741 8732# 8732# WB W#T0103 Q WD

which changes the Test Code to 8732. After changing the Test or Program Code this way, the new codes must be placed into the proper fields in *Site Information*.

It is a safer procedure to reserve use of the RTS-1 Program Code to those instances when it is required; erroneous programming is prevented by using the Test Code for normal test calls.

Trunk Testing

ARONTS is oriented towards originating test calls from remote locations, but it also can place test calls directly from its test lines. Section 7.3.2 gives an access register for such use. The site type should be Simple Hot Shoe. These test call Dialing Registers are identical to Hot Shoe equivalents. If ARONTS is connected through a trunk interface rather than a line side interface on a CO or IXC switch, it can be used to test the CO directly. Equipped with a loop reverse battery interface (optional equipment), it can be programmed to generate Feature Group D originating calls directly to an IXC switch:

W5 *00 3015551234# *n0# W5 WB W*4530 WD

ARONTS waits for a Start Wink and initiates MF output mode (W5); sends KP (*); sends 00 as the II code (identified party); sends the ANI as (301) 555-1234; sends ST (#); sends KP (*); sends a 10-digit Test Number (n0); sends ST (#); waits for an Acknowledgement Wink (W5); and waits for the call to be terminated to a Milliwatt signal. When trunk connections are used, the Access Register should simply be WB WD.

In similar fashion, other Feature Group tests can be constructed.

8. COMPUTER CONFIGURATION

The Control Computer hard disk drive is organized into several directories and logical drives. If a change of the Control Computer is desired, or disk reinitialization required, the hard drive must be set up for the ARONTS environment. This can be done as follows:

1. The backup disk labelled *System* should be placed into Drive A:, and the computer reset.
2. When booting has completed, the following commands should be entered if the hard disk requires reformatting:
A:> **Format C: /s /v**
A:> **Format D: /v**
3. The system disk should be copied:
A:> **XCopy *.* C: /s /e**
4. After removing the floppy disk, the computer should be rebooted, and the following commands issued:
C:> **Cd \Aronts**
C:> **Md D:\Report**
5. After inserting the current *Programs* disk into Drive A: (or B:, changing A: below to B:), the following command should be issued:
C:> **XCopy A:\Aronts**
6. Using the current backup disk with the *Setup.Dat* file in Drive A: (or B:, changing A: below to B:), the following command should be given:
C:> **Copy A:\Aronts\Setup.Dat**
7. These commands should be entered:
C:> **Copy AutoExec.Bat **
C:> **Copy Config.Sys **
C:> **InitLog**
8. The Test Module must be connected to a serial port at COM1:.
9. A modem must be present at COM2:.. If not, the line in *Menu.Bat*
Set MODEM=COM2
should be changed to:
Set MODEM=COMX
The simple text editor VMFile can be used to do so by:
C:> **MapKeys**
C:> **VMFile Menu.Bat**
10. The computer should be rebooted without a disk inserted.
11. After going directly to *File Maintenance*, all files should be Retrieved from the most recent backup disks.

(This step-by-step procedure is given rather than using an installation batch file to permit omission of selected steps if the situation so dictates.)

9. TEST MODULE

The Test Module can be configured in sizes from 1 to 48 ports. The module consists of three subsystems: telephone line couplers; Tone Controllers; and a control system. The line couplers interface the telephone lines with the tone units. The Tone Controllers handle all tone generation and reception. The control system is actually a distributed network of microprocessors, performing the following functions: interfacing with the control signals from the couplers to carry out the supervisory activities of ring and hangup detection and control of on- and off-hook conditions; provision of DTMF and SIT tone encoders and decoders, dial tone, ready tone, and milliwatt tone detectors and generators; preprocessing of test generation sequences (access number, test code, line identification, and test numbers) and postprocessing of test results (success/failure, release connection, log off); and interfacing with the Control Computer through a serial line. It is the function of the controller to perform all duties of ARONTS with the exception of actual test sequencing and result logging – these are the functions of the Control Computer. This section describes how the Test Module operates; commands and options included here are not necessarily exercised by the Control Computer in the ARONTS environment.

9.1 Typical Operation

The Control Computer preloads the Test Module with *dialing registers* which do not change from test to test (QS commands). For each site access and ARONTS line, the Control Computer assembles a dialing register specifying how that site is to be called, from the *access register* in the Site Information record. The Computer then stores this expanded access register as *dialing register Z* (temporarily) and commands the Test Module to place the call, specifying the outgoing telephone line, related Tone Controller, and dialing register Z (XTQ command). The Test Module then takes the line off-hook (seizes the line). The Tone Controller is

allocated to the call; register Z is transferred to the Tone Controller's internal memory; and it executes the commands contained in that dialing register.

When the operation is complete, the Tone Controller notifies the Master Controller, and the Master Controller notifies the Control Computer by sending a \$. The Computer reads all information collected regarding this call, and determines the next test which is to be made. A test dialing register is constructed for that particular call from the register contained in the Test Definitions file; the Computer then stores this expanded test register as dialing register Z (temporarily) and commands the Test Module to make the test call (XC command). Register Z is transferred to the Tone Controller's internal memory, and it executes the commands contained in that dialing register. The Tone Controller dials the test call, and then monitors the call.

When complete, the Tone Controller commands the RTS-1 to terminate the test call, and the Control Computer is notified with another \$. The Control Computer reads all of the pertinent information on the test call, and continues with all test calls scheduled for that location. When all calls are finished, a dialing register is specified which terminates the session with the RTS-1 (hangup command, 00), and the session is ended (with an XK command) by hanging up the outgoing line. Hot Shoe calls are similar, but are hung up after each test call with an XK command. The above actions take place for all lines simultaneously, each Tone Controller handling its own tasks independently.

9.2 Communications Protocols

The Test Module communicates with the Control Computer with serial asynchronous characters. This consists of the standard start bit, eight data bits, and one stop bit. The speed is switch selectable, nominally set to 9600 baud. For ease of diagnosis and simple monitoring,

communication is through printing ASCII characters, available from a standard keyboard. Lower and upper case letters are distinct. Two forms of communication take place: notification, and interaction.

Notification symbols can be transmitted from the Test Module to the Computer when an appropriate condition occurs, without being requested by the Computer. These provide notification of some condition which requires action. These conditions, and the corresponding characters, are:

- \$ call action complete, requires next command
- @ Hangup: a line has lost loop current
- D Dialing failure: an expected tone has not been received
- * An incoming call has been answered (only if enabled)

For each of the four notification symbols, if the proper response is not received from the Computer, they are indefinitely repeated at twenty second intervals. Other than for notification of these four conditions, no communications are ever initiated by the Test Module.

The Computer initiates *interactive* communications. A sequence of characters of variable length, sent by the Computer, commands the Test Module. These commands produce a response from the Test Module; however, no more than a single character is sent by the Test Module to the Computer for each request. The controller responds with ? if an undefined command is received from the Computer (syntax error). Receipt of notification symbols by the Computer must be handled by certain required interactive commands. These are as follows:

- \$, D – any X command
- @, * – G, P, and r

These commands must be used to cancel the twenty second repetition of the associated notification symbol. It is expected that prior to these

commands for the \$ and D, additional commands will be issued by the Computer. These are:

- \$ – W, G and P, and either R or B
- D – G, P, and DF

Upon transmission of \$, D, @, and *, the *current call status* is set; this is cleared after the required command is received. The current call group and port are set to the port affected.

Twenty-six dialing sequence registers, labeled A-Z, are available for outgoing calls. These dialing registers are loaded from the Computer, and can be read back. In addition to the standard DTMF, MF, and SIT tones, special codes may be embedded within the dialing sequences for such purposes as wait for dial tone.

The telephone ports are organized into *sides, groups, and ports*. There are two sides, *side 1* and *side 2*. The telephone lines are broken down into groups of 12 ports; there can be a maximum of 2 groups on each side. Side 1 groups are labelled as a-b, and Side 2 groups are labelled as A-B. There are 12 telephone ports per group, labelled A-L.

Should the Test Module detect a command syntax error, it waits until no characters have been received from the Computer for a half second interval, then sends ?, and waits for a new command. The maximum length of time between characters in one command sequence is five seconds; if this limit is exceeded, it is treated as a syntax error. Notification characters are not sent until a half second has elapsed from the last Test Module response without any further requests from the Computer (the r command is used to defeat this delay).

9.3 External Communications Protocols

The interactive commands listed in this section are protocols which have use outside of the Test Module. They are used between the Test Module and Computer, and directly with a terminal for diagnostic action.

9.3.1 Summary of Interactive Command Protocols

Initialization Commands

I*—Initialize all
IL—Initialize Lines
IRNG—Initialize RiNG status
ISY—Initialize \$\$\$\$\$\$ to Yes
ISN—Initialize \$\$\$\$\$\$ to No
ITxxxxxxx—Initialize Time
INDAxyz—Initialize Don't Answer line xy to z
INIGxyz—Initialize IGnore disconnect on line xy to z
IMARKPxyz—Initialize MARK Port xy to type z
INDCxyz...zX—Initialize Direct Connection port xy
INLTIMxyz...z—Initialize Line TIME x for linetype y to zzz
INACxyz—Initialize Area Code to xyz
IN10XXX#x—Initialize 10XXX# option to x
INDR—Initialize Dialing Registers
INMODULEx—Initialize MODULE name to x
IHxyz—Initialize Holding length of register x to yz
IEWxyz—Initialize Enter Wait type x to yz seconds
IDWxyz—Initialize Dialing Wait type x to yz seconds
IBPxyz—Initialize BeeP type x to yz beeps
IP—Initialize all Pointers
IN0+x—Initialize 0+ dialing to collect authcode
INTCFailxyz—Initialize Tone Controller xy FAIL to z
IDLETCt—IDLE Tone Controller t

Fast Commands

R—Read auth./travel code, telephone number, billing code
B—read Billing code
T—read Time
G—read Group of current call
P—read Port of current call
W—determine Which Tone Controller is assigned current call

Continue (Xfer) Call Commands

XK—Xfer current call to Kill
XH—Xfer current call to Hold
XW—Xfer current call to Wait for billing code
XCz—Xfer current call to dialing register z
XD—Xfer of current call is Done
XMQxy—Xfer current call for xy More digits Quietly
XMDxy—Xfer current call for xy more digits with Dialtone
XFGDW—Xfer current call to Wait for billing code, Feature Group D

(The above X commands cancel "\$" or "D")

XOCxy—Xfer Old Call on group x, port y, to Current status
XQxyz—Xmt (transmit) to group x, port y, seQuence z
XTQxyz—Xmt seQuence using specific Tone Controller

Dialing Sequence Commands

QSxyy...yX—seQuence Store x as yy...y
Q#xx...xX—seQuence store telephone # (number) as xx...x
QAUTHex...xX—seQuence store Authorization code as xx...x
QT#txx...xX—Q#, specific Tone Controller
QTAtxx...xX—QAUTHe, specific Tone Controller
QRx—seQuence x Read

Special Commands

LMxy—Line Make group x, port y
LBxy—Line Break group x, port y
LHxyz—Line Hook group x, port y to state z
LWxy—Line Wink group x, port y
AC—determine AC power line status
DF—determine which Dial tone wait Failed
r—ready for notification character

Control Commands

SIZE—obtain Test Module system SIZE
MODULE—obtain MODULE name
QTONE—obtain number of Tone Controllers in system
LOCK—LOCK out controller from serial line
UNLOCK—UNLOCK controller from lock command
DELAYxy—DELAY 2xy ms after output for multiple characters
STATUS, status—print current system STATUS
SAVE—SAVE parameters
LOAD—LOAD parameters
DRDISP—Dialing Register DISPLAY
SAFE—place the switch into a SAFE mode
UNSAFE—place the switch into an UNSAFE mode
DEBUG, debug—enter DEBUG monitor program
MCRDaaaa—ReaD Master Controller address aaaa
SLFTST—have the Master Controller test itself
LOKCM—LOcK access to restricted CoMmands
UNLCM—UNLock access to restricted CoMmands

Restricted Commands

INTOTALS—Initialize TOTALS to 0
INPORTSTATS—Initialize all PORT STATisticS
DISPSTATSxy—DISPlay port STATisticS
DISPDCxy—DISPlay Direct Connect authorization codes
INIT—INITialize entire system
CALL—CALL a subroutine previously written into memory
MCWRaaaadd—Write data dd at Master Controller address aaaa
COMMBbndd...dd—COMMunicate with board bb (n dd bytes)
MBUFC—Clear input BUFFers on 16 Tone Controllers (Matrix Test)

9.3.2 Interactive Command Protocols

Initialization Commands

Command: Initialize all

Code: **I***

Response: R

Function: Effectively the same as performing all of the following commands: IL; IRNG; ISN; IH106; IH210; IH305; IEW115; IEW250; IEW305; IEW410; IEW563; IEW663; IDW104; IDW230; IDW330; IBP101; IBP202; IBP303; IP; IN10XXX#2; DELAY00; IN0+0, INLTIM6, LOKCM. Also kills all current processes.

Command: Initialize Lines

Code: **IL**

Response: R

Function: Hang up all lines.

Command: Initialize RiNG status

Code: **IRNG**

Response: R

Function: Dump the record of all pending unanswered calls.

Command: Initialize \$\$\$\$\$\$\$\$ to YES

Code: **ISY**

Response: R

Function: Answer incoming calls.

Command: Initialize \$\$\$\$\$\$\$\$ to No

Code: **ISN**

Response: R

Function: Stop answering incoming calls.

Command: Initialize Time

Code: **ITxxxxxxx** (x=0-9)

Response: R

Function: Set clock to xxxxxxxx seconds.

Command: INitialize Don't Answer

Code: **INDAxyz** (x = a-p, A-P; y = A-L, X; z = 0, 1)
(or xy = S1, S2, SX)

Response: R

Function: Don't answer incoming calls on specified ports if z=1, or resume answering incoming calls if z=0. The group is x and the port is y; if y=X, then all ports (A-L) of the specified group are affected. If xy=S1 or S2 then an entire side (1 or 2) is affected. If xy=SX then all ports are affected.

Command: INitialize IGnore disconnects

Code: **INIGxyz**

Response: R

Function: Syntax identical to INDA. If z=1 then ignore disconnect signals, and if z=0 resume looking for disconnects.

Command: Initialize MARK Ports

Code: **IMARKPxyz** (x, y as INDA; z = 0-6)

Response: R

Function: Mark the affected port(s) with linetype z. Linetype 0, station loop; 1, Feature Group A Loop Start; 2, Feature Group A Ground Start/Ring Detect; 3, Feature Group A Ground Start/Tip Ground Detect; 4, Feature Group B No ANI; 5, Feature Group B ANI; 6, Feature Group D.

Command: INitialize Direct Connection

Code: **INDCX** or **INDCxyzz...zX** (x=a-p, A-P, z = 0-9)

Response: R

Function: Predefine incoming ports with specific authorization codes. Port xy will not request an authorization code from the user, but will assume the code zz...z is to be used. One to eight digits may be entered. The command INDCX clears all previously stored INDC commands.

Command: INitialize Line TIMes

Code: **INLTIMxyzzz** (x=0-5; y=0-6, 8; zzz = 000-255)
or **INLTIM6**

Response: R

Function: Initialize time x for linetype y to zzz/10 seconds. Time 0 is Ringing Detect Time; 1, Ring Loss Time; 2, Disconnect Time; 3, On-Hook Guard Time; 4, Disconnect Ignore Time on Origination; 5, Disconnect Ignore Time on Answer. INLTIM6 sets all linetype times to the default values shown below.

Upon reset in the switch mode, the following times are pre-loaded:

Time	Linetype						
	0	1	2	3	4	5	6
0	0.1	0.5	0.5	0.5	0.3	0.3	0.3
1	0.2	6.0	6.0	0.2	0.2	0.2	0.2
2	0.5	0.2	0.5	0.5	0.2	0.2	0.2
3	0.0	2.0	2.0	2.0	0.4	0.4	0.4
4	25.5	20.0	20.0	20.0	20.0	20.0	20.0
5	0.3	0.3	0.3	0.3	0.3	0.3	0.3

Table entries are in seconds. Setting Time 0 to 000 corresponds to 25.6 seconds.

Command: INitialize Area Code

Code: **INACxyz** (x, z = 0-9; y = 0, 1)

Response: R

Function: Set the default area code to xyz. Used when 7 digits are received in an MF field in the Tone Controllers. The 7 digit field is changed to a 10 digit field.

Command: INitalize 10XXX# option
Code: **IN10XXX#x** (x = 0-3)
Response: R
Function: Set the mode of operation for Feature Group D 10XXX# (cut-through). If x=0, exit immediately with the telephone number field empty; x=1, go to first ready tone and look for an authorization code and telephone number; x=2, provide ready tone and look for a telephone number, retaining the MF ANI information as the authorization code field (unless ** is used to dump the ANI); x=3, hang up the call and handle with an @ (if in switch mode).

Command: INitalize Dialing Registers
Code: **INDR**
Response: R
Function: Clear all Dialing Registers.

Command: INitalize MODULE name
Code: **INMODULEx** (x = any character)
Response: R
Function: Name the module with character x. Read back by the MODULE command.

Command: Initialize Holding lengths
Code: **IHxyz** (x = 1-3; yz = 00-63)
Response: R
Function: Initialize the number of digits to hold in each entry field. The authorization code field is set by x = 1; the telephone number field is set by x = 2; the billing code field is set by x = 3.

Command: Initialize Enter Wait
Code: **IEWxyz** (x = 1-6; yz = 00-63)
Response: R
Function: set TIME_x to yz seconds. TIME1 sets the maximum time permitted between digits to enter the travel code, authorization code, and telephone number. TIME2 sets the maximum total allotted time for the same. TIME3 sets the maximum time permitted between digits to enter the billing code. TIME4 sets the maximum total allotted time for the same. TIME5 sets the maximum time permitted between digits to enter digits requested by XMQ or XMD. TIME6 sets the maximum total allotted time for the same.

Command: Initialize Dialing Wait time
Code: **IDWxyz** (x = 1-3; yz = 00-63)
Response: R
Function: Initialize waiting time for W_x in dialing sequence register to yz seconds.

Command: Initialize Beep
Code: **IBPxyz** (x = 1-3; yz = 00-63)
Response: R
Function: Set the number of acknowledgement beeps to yz after authorization code for x = 1; after telephone number for x = 2; after billing code for x = 3.

Command: Initialize Pointers
Code: **IP**
Response: R
Function: Initialize R, B, T, and QR read pointers.

Command: INitalize 0+ dialing
Code: **IN0+x** (x = 0,1)
Response: R
Function: For x=1, dump the ANI information for 0+ calls, supply a ready tone, accept an authorization code, and exit (retaining the called number). For x=0, exit normally.

Command: INitalize Tone Controller FAIL status
Code: **INTCFAILxyz** (xy = 01-63, z = 0,1)
Response: R X if not available
Function: Fail (z=1) or unfail (z=0) Tone Controller xy. The first Tone Controller is 01.

Command: IDLE Tone Controller
Code: **IDLETCt** (t = ! - ~)
Response: R X if not present
Function: Abort any activity for Tone Controller t and release from table.

Fast Commands

Command: Read user entry digit
Code: **R**
Response: 0-9,A-D, *, #, T, N, M, X
Function: Read a digit entered by the user marked as the current call. Receipt of "\$" initializes the read pointer to the first digit, and each consecutive read advances to the next entry. The first digits read are the authorization code; optionally followed by a "T" and the travel code; followed by an "N" and the telephone number; optionally followed by an "M" and the billing code (a "T" at the end of the billing code signifies that a time-out occurred); ended with "X", after which the entire sequence may be repeated. For MF receiving operations, "#" stands for the ST pulse; "A" for the ST' pulse; "B" for the ST2' pulse; and "C" for the ST3' pulse. Summarized as:
aa...a(Ttt...t)Nnn...n(Mbb...b(T))X, where aa...a is the authorization code of length specified by the IH1 command; tt...t is the travel code of maximum length one less than the authorization code length; nn...n is the requested telephone number of maximum length specified by the IH2 command; bb...b is the billing code of maximum length specified by the IH3 command. The fields enclosed within () are optional. The "M" at the start of the billing code stands for "More". If there is no current call, just an "X" is sent.

Command: read Billing code

Code: **B**

Response: 0-9, A-D, T, X

Function: Functions identically to the "R" command, except that reads start at the billing code field. A "T" at the end of the billing code prior to the "X" signifies that a time-out occurred. The command will cycle back to the start of the billing code after the "X" is received. Summarized as: bb...b (T)X. If no billing code has yet been entered, but a time-out has not yet occurred, only an "X" is sent. If there is no current call, just an "X" is sent.

Command: read Time

Code: **T**

Response: 0-9, X

Function: Read a digit from the real-time clock. Consecutive reads will send consecutive digits, from the most significant digit to the least significant digit. When all eight digits have been read, "X" is sent, after which the next "T" command starts at the first digit.

Command: read Group of current call

Code: **G**

Response: a-p, A-P, X

Function: The group of the current call is sent: a-p for SIDE1, A-P for SIDE2, and "X" if there is no current call.

Command: read Port of current call

Code: **P**

Response: A-L, X

Function: The port of the current call is sent; "X" if there is no current call.

Command: determine Which Tone Controller used for current call

Code: **W**

Response: !- _ x if no current call

Function: One of the possible 63 Tone Controllers is identified. See Tone Controller chart.

Continue (Xfer) Call Commands

Command: Xfer current call to Kill

Code: **XK**

Response: R X if there is no current call

Function: Abort the current call by hanging it up.

Command: Xfer current call to Busy

Code: **XB**

Response: R X if there is no current call

Function: Place the current call on busy tone.

Command: Xfer current call to Hold for better outlet

Code: **XH**

Response: R X if there is no current call

Function: Postpone processing of this call, and remove it from the current call status. Used to delay transferring the call in the hope that a better outlet becomes available shortly.

Command: Xfer current call to Wait for billing code

Code: **XW**

Response: R X if there is no current call

Function: Postpone processing of this call, and remove it from the current call status. Used to wait for a billing code for authorization codes requiring them.

Command: Xfer Feature Group D to Wait for billing code

Code: **XFGDW**

Response: R X if no current call

Function: Provide BEEP2 beeps followed by a ready tone to the user, wait for billing code, and provide BEEP3 beeps if maximum digits or * received.

Command: Xfer Current call

Code: **XCz** (z = A-Z)

Response: R X if there is no current call

Function: Continue the current call using dialing sequence z.

Command: Xfer current call to Done status

Code: **XD**

Response: R X if there is no current call

Function: Stop the "\$" repetition, and remove from the current call status. This is to be used when the LM and CM commands are directly used to handle the current call.

Command: Xfer current call for More digits Quietly

Code: **XMQxy** (xy = 01-20)

Response: R X if no current call

Function: Wait for xy more digits to be entered, and then notify with a "\$"; less digits appended with a "*" will force the "\$". These digits overwrite the billing code, and the "B" command should be used to read the xy digits upon notification. Timeout according to IEW5 and IEW6 will also force the "\$", and a "T" prior to the "X" will indicate the time-out.

Command: Xfer current call for More digits with Dial tone

Code: **XMDxy** (xy = 01-20)

Response: R X if no current call

Function: Identical to XMQ except that a new dial (400 Hz ready) tone is supplied until the first digit is entered.

(The above "X" commands cancel "\$" or "D")

Command: Xfer Old call to Current status
 Code: **XOCxy** (x = a-p, A-P; y = A-L)
 Response: \$ if completed
 N if no call holding on specified port
 X if there is already a current call
 Function: The call previously put on hold via XH on group x, port y is made the current call.

Command: Xmit seQuence
 Code: **XQxyz** (x = a-p, A-P; y = A-L; z = A-Z)
 Response: R X if no Tone Controller is available
 Function: Transmit dialing sequence z to group x, port y.

Command: Xmit seQuence using specific Tone Controller
 Code: **XTQtxyz** (t = !~; x = a-p, A-P, y = A-L; z = A-Z)
 Response: R
 X if that Tone Controller is not present and idle
 Function: Transmit dialing sequence z using Tone Controller t. See Tone Controller chart. Take group x, port y off-hook.

Dialing Sequence Commands

Command: seQuence Store
 Code: **QSxyy...yX** (x = A-Z; y = command)
 Response: R
 Function: Store yy...y as dialing sequence x. For registers A-Y, maximum sequence length is 54 characters; for Z, 100 characters. See section 9.4 for command syntax.

Command: seQuence store telephone #
 Code: **Q#xxx...xX** (x = 0-9)
 Response: R X if no current call
 Function: Replace the telephone number holding register with the specified sequence. Used to replace shortened speed dial requests with actual telephone numbers; acts on the current call.

Command: seQuence store AUTHorization code
 Code: **QAUTHxx...xX** (x = 0-9, *, #, A-D)
 Response: R X if no current call
 Function: Replace the authorization code holding register with the specified sequence.

Command: seQuence store telephone #, specific Tone Controller
 Code: **QT#txxx...xX** (x = 0-9, t = !~)
 Response: R
 X if Tone Controller not (present and idle)
 Function: Replace the telephone number holding register with the specified sequence in the specified Tone Controller.

Command: seQuence store Authorization code, specific Tone Controller
 Code: **QTAtxx...xX** (x = 0-9, *, #, A-D, t = !~)
 Response: R
 X if Tone Controller not (present and idle)
 Function: Replace the authorization code holding register with the specified sequence in the specified Tone Controller.

Command: seQuence Read
 Code: **QRx** (x = A-Z)
 Response: y (y as in QS) X after last character read
 Function: Read back dialing sequence x. A read command issued after the last character has already been read will result in an "X" response, after which the next read will start at the beginning of the sequence.

Special Commands

Command: Line Make connection
 Code: **LMxy** (x = a-p, A-P; y = A-L)
 Response: R
 Function: Place group x, port y off-hook.

Command: Line Break connection
 Code: **LBxy** (x = a-p, A-P; y = A-L)
 Response: R
 Function: Place group x, port y on-hook.

Command: Line Hook
 Code: **LHxyz** (x = a-p, A-P; y = A-L; z = 0, 1)
 Response: R
 Function: Place group x, port y off-hook for z=1, or on-hook for z=0. xy can take on any of the values specified in INDA.

Command: Line Wink
 Code: **LWxy** (x = a-p, A-P; y = A-L)
 Response: R
 Function: Wink port xy. The port must be of linetype 4, 5, or 6, and must be in Ring Detect or Done Wink status.

Command: determine AC power line status
 Code: **AC**
 Response: P if power is Present
 F if power is Failed
 Function: Check on power status.

Command: Dialing Failure
 Code: **DF**
 Response: 0-9, R X if no current call
 Function: Return the number of the W command which failed in a dialing register. If a reject tone was encountered, the response is R.

Command: ready for notification character
Code: **r**
Response: none
Function: Cancel the 0.5 second requirement between the last command and the next notification character.

Control Commands

Command: obtain Test Module system SIZE
Code: **SIZE**
Response: A-P, X
Function: Determine the highest group letter which can be used on SIDE1 or SIDE2. "X" indicates system failure.

Command: determine MODULE identifier
Code: **MODULE**
Response: Character prestored via INMODULE command
Function: Read back module character.

Command: obtain number of Tone Controllers in system
Code: **QTONE**
Response: !- _ x if none
Function: The number of Tone Controllers is supplied, where ! is one and _ is 63. See Tone Controller chart.

Command: LOCK out controller from serial line
Code: **LOCK**
Response: R if no current call
X if there is a current call
Place the controller into a standby condition – it will ignore all inputs except the UNLOCK command, and will initiate no outputs. Intended to be used to control other RS-232 devices paralleled with controller. Can only be executed when there is no pending current call.

Command: UNLOCK controller from lock command
Code: **UNLOCK**
Response: R
Function: Exit from LOCK command.

Command: DELAY after output for multiple characters
Code: **DELAYxy** (xy = 00-99)
Response: R
Function: Wait 2xy milliseconds after outputting characters for any command which sends more than one character between requests.

Command: Print current system STATUS
Code: **STATUS**
Response: Detailed display of current status
Function: Status report for debugging. Gives the SC size, CC size, TIME, last DF, current group, port, and TC, and for each active TC its RST line, current operating mode, input and output ports. Also shows accumulated XC, XB, and XK commands.

Command: SAVE parameters
Code: **SAVE**
Response: R
Function: Parameters stored in the coupler and Tone Controllers are stored in the Master Controller. Tone Controller parameters are taken from the first available Tone Controller, while Coupler Controller information is individually stored. Saves parameters associated with: INDA, INIG, IH, IEW, IDW, IBP, INAC, IN10XXX#, and IMARKP commands.

Command: LOAD parameters
Code: **LOAD**
Response: R
Function: Parameters previously stored in the Master Controller from all Coupler Controllers and the first Tone Controller are loaded back into all coupler and Tone Controllers. Overwrites all parameters associated with: INDA, INIG, IH, IEW, IDW, IBP, INAC, IN10XXX#, and IMARKP commands.

Command: Dialing Register DISPlay
Code: **DRDISP**
Response: Display of all nonempty Dialing Registers
Function: Produce a convenient display of all registers

Command: place the switch into a SAFE mode
Code: **SAFE**
Response: R
Function: Overrides the ability to execute any command, except for the following: DISPSTATS, DISPDC, STATUS, DRDISP, MODULE, SLFTST, SAFE, UNSAFE. Any other command will give a response of "X" if attempted after issuing the SAFE command. System reset clears this condition (by an automatic execution of the UNSAFE command).

Command: place the switch into an UNSAFE mode
Code: **UNSAFE**
Response: R
Function: Cancel a previously issued SAFE command.

Command: enter DEBUG monitor program
Code: **DEBUG**
Response: DEBUG Monitor Program
Function: Enter the debugger.
* B XY xy (xy = 00-FF or x = <cr>)
Select the board to be accessed via the A and C commands. The board address is xy.
* A addr RD wr (RD)
Read [and write] address *addr*; instead of wr, space or . will advance one address; - will back up one address; any other nonhex character will return to the *. After writing, the data will be displayed if read back differently from written.
* C addr AF=af BC=bc DE=de HL=hl
Call the address as a subroutine after loading the registers. If <CR> is given for af, register requests are omitted.

Command: ReaD Master Controller address aaaa
Code: **MCRDaaaa** (aaaa = 0000-FFFF)
Response: 00-FF
Function: Read the Master Controller's internal memory.

Command: have the Master Controller perform a SeLFTeST
Code: **SLFTST**
Response: 00 if all OK
 FF if ROM error
 dd = 01-FE if RAM error in block ddOO-ddFF
Function: Perform a checksum test on ROM and exercise all RAM locations in Master Controller.

Command: LOck access to restricted CoMmands
Code: **LOKCM**
Response: R
Function: Prohibit access to restricted commands.

Command: UNLock access to restricted CoMmands
Code: **UNLCM**
Response: R
Function: Enable access to restricted commands. Extend the parameter timeout from 5 to 30 seconds.

Restricted Commands

All Restricted Commands will give Response: X if UNLCM has not previously been executed.

Command: INitialize TOTALS
Code: **INTOTALS**
Response: R X if in locked mode
Function: Clear the Calls Connected, Calls Busied, and Calls Killed totals (displayed with STATUS) to 0. Totals incremented by the XC, XB, and XK commands, respectively.

Command: INitialize PORT STATistics
Code: **INPORTSTATS**
Response: R X if in locked mode
Function: Initializes all port statistics: number of calls, cumulative seconds, and most recent call duration.

Command: DISPlay port STATisticS
Code: **DISPSTATSxy**, xy as in INDA
Response: X if in locked mode
Function: Show the number of calls, cumulative seconds, and most recent call duration for each specified port.

Command: DISPlay Direct Connect authorization codes

Code: **DISPDCxy**, xy as in INDA command
Response: X if in locked mode
Function: Displays internally stored direct connect authorization codes over the range of specified ports. Ports without any codes are not displayed. Example: DISPDCSX will display all such codes on the entire switch. Control S and control Q can be used to stop/start the display.

Command: INITialize entire system
Code: **INIT**
Response: R
Function: Attempt to do everything a hardware reset does.

Command: CALL a subroutine at A700H
Code: **CALL**
Response: none
Function: A simple call to a subroutine previously loaded into RAM in the Master Controller.

Command: WRite data in Master Controller
Code: **MCWRaaaaadd** (aaaa = 0000-FFFF, dd = 00-FF)
Response: dd = 00-FF
Function: Modify Master Controller RAM memory contents and read back data.

Command: COMMUnicate with boards other than the Master Controller
Code: **COMMbbnadd...dd** (bb = board address, n = 1-F, dd = 00-FF)
Response: 00-FF X if no response from board.
Function: Send n data bytes dd to board address bb, and give returned response.

Command: Clear input BUffers on Tone Controllers
Code: **MBUFC**
Response: R
Function: Clear the input buffers on Tone Controllers BM through EP. Used prior to the MT or MNT command.

9.4 Dialing Register Syntax

Dialing registers A-Y may contain up to 54 digits; register Z may contain up to 100 digits. The default transmit mode is DTMF output.

Dialing Register = (Action)(Action)...(Action)

Action = **0-9**, *****, **#**, **A**, **B**, **C**, **D**

Transmit a tone or tone pair. The tone(s) sent are dependent upon the present Mode. If in M0 (DTMF) or M1 (MF) transmit modes, send dual tones for the prescribed on and off durations. If in M3 (DTMF) or M4 (MF) transmit modes, send dual tones, leave tones on, and proceed to the next action in the dialing register with no delay (add delay commands and an M command to turn tone off). If in SIT transmit mode (M2), send a single tone for digits 1-6, and immediately progress to the next action in the dialing register. Codes * and # appended to one of the preceding digits delays the specified amount of time, then turns the tone off. A turns the tone off with no delay. For example, **1*3#5*** sends 913.8 Hz for 274 ms, 1370.6 Hz for 380 ms, and 1776.7 Hz for 274 ms. There are no pauses between the three tones. Any of the delay parameters (Q, S, MD, MS) can be used in conjunction with A to construct nonstandard sequences.

Transmit Mode

DTMF (M0)	MF (M1)	SIT (M2)
1	1	913.8 Hz
2	2	985.2 Hz
3	3	1370.6 Hz
4	4	1428.5 Hz
5	5	1776.7 Hz
6	6	1003 Hz
7	7	---
8	8	---
9	9	---
0	0	---
*	KP	274 ms & off
#	ST	380 ms & off
A	ST'	Off
B	ST2'	---
C	ST3'	---
D	---	---

Action = **T**

Send the last Ten digits of the telephone number field.

Action = **V**

Send the last seVen digits of the telephone number field.

Action = **Q**

Pause a quarter second.

Action = **S**

Pause one second.

Action = **M0**

Turn off any tones being transmitted and set transmit mode to standard DTMF output.

Action = **M1**

Turn off any tones being transmitted and set transmit mode to standard MF output.

Action = **M2**

Turn off any tones being transmitted and set transmit mode to SIT tone output.

Action = **M3**

Turn off any tones being transmitted and set transmit mode to DTMF output with no delay. For example, **M3#SSM0S5551212** sends a 2-second DTMF #, pauses one second, and sends 555-1212 at the standard DTMF rate.

Action = **M4**

Turn off any tones being transmitted and set transmit mode to MF output with no delay.

Action = **MDdd**

Delay dd milliseconds, dd=01-99. If dd=00, delay 100 milliseconds.

Action = **MSdd**

Delay dd seconds, dd=00-99.

Action = **M*wwwxyyyyz**

Send one or two programmable tone(s). Tone 1 frequency parameter is wwwwww, tone 2 frequency parameter is yyyz. Frequency of tone = 1789772/(tone parameter). Tone 1 level is x, tone 2 level is z. If level = 0, tone is off; 1, transmit at approximately -15 dBm; 2, transmit at approximately -3 dBm.

Action = **Pxx**

Set on and off times for DTMF tones to xx0 milliseconds, xx=01-99 (example: P12 sets the on and off time to 120 milliseconds, taking 240 milliseconds to send the digit). Also set DTMF transmit mode.

Action = **W0**

Force a dialing failure.

Action = **W1**

Wait up to IDW1 seconds to receive a constant precise dialtone for one second; set DTMF transmit mode M0.

Action = **W2**

Wait up to IDW2 seconds to receive a constant 400 Hz ready tone for three seconds; set DTMF transmit mode M0.

Action = **W3**

Wait up to IDW3 seconds to receive a constant precise dialtone for three seconds; set DTMF transmit mode M0.

Action = **W4**

Wait up to IDW1 seconds to receive a constant 400 Hz ready tone for one second; set DTMF transmit mode M0.

Action = **W5**

Wait up to 10 seconds to receive a wink; set MF transmit mode M1.

Action = **WSdxy**, d=0-9, *, #, A-D, Q

Wait for DTMF splashback tone d; wait up to y seconds to receive a precise dialtone or d; if time elapses, reject (fail); when the dialtone terminates, wait up to y seconds to receive d; if d is received, reject; if not, accept (go on to next action); if 4x seconds elapse overall, reject. If x=Q, then simply wait y seconds to receive d; if received, reject; if not, accept.

Action = **WB**

Clear the billing code field and reset the "B" pointer.

Action = **WD**

Exit the dialing register and generate a \$.

Action = WQdd

Wait up to dd seconds for quiet at 1000 Hz; if energy remains, generates a dialing failure.

Action = WEdd

Wait up to dd seconds to exit. If no DTMF digit is received by timeout, continue in the dialing register. If a digit is received, add to the billing code field, exit the dialing register, and generate a \$. In both cases, add a T to the billing code field at exit.

Action = W#Ttdd

Wait up to dd seconds to receive tt DTMF digits. Digits collected are added to the billing code field, followed with a T. Generate a dialing failure on timeout.

Action = W#Ttdd

Wait up to dd seconds to receive tt DTMF digits and measure elapsed time. Digits collected are added to the billing code field, followed with a Tddd, where ddd is the number of tenth seconds elapsed. Clear input buffer when * received. Generate a dialing failure on timeout.

Action = WCddtt...tE

Wait up to dd seconds to receive DTMF code tt...t. An unmatching digit restarts the search. Generate a dialing failure on timeout.

Action = W*ntdd

Wait up to dd seconds for something to happen. Clear the *Wait Timer* at the start. Generate a dialing failure on a timeout. Continue in the dialing register when either:

- (1) n DTMF digits are received
- (2) at least one, but less than n DTMF digits are received, with a lapse of t seconds after the last digit
- (3) SIT tone received.
- (4) 1004 Hz tone received.
- (5) busy signal is received
- (6) reorder signal is received
- (7) ringback signal is received
- (8) voice signal is received
- or (9) dialtone is received

In all cases, add the following to the billing code field:

(rx)Tddd, where

rx = Mxx...x, x = DTMF digit (case 1 or 2) or

rx = xx[x], for SIT tones received (case 3), where

x = tl, with

t = tone 1-5 and

l = length * (short) or # (long), or

rx = 6# for 1004 Hz tone received (case 4)

rx = 7# for busy signal received (case 5)

rx = 7* for reorder signal received (case 6)

rx = 71 for ringback signal received (case 7)

rx = 72 for voice signal received (case 8)

rx = 73 for dialtone received (case 9)

ddd = the Wait Timer, in tenth seconds.

Action = WTttxyyzdd

Wait up to tt seconds to receive one or two tone(s) lasting d.d seconds. Generate a dialing failure on timeout. Filter 1 frequency parameter is xx, filter 2 frequency parameter is yy. Tone detection center frequency = $17898 / (\text{tone parameter})$. Detection filters have a Q of 10 (*not narrowband*); detection threshold is approximately -48 dBm. For z = 1 or 2, look for energy output from filter z; if z = B, look for simultaneous energy output from filter 1 and 2. If successful, add 6#Tddd to the billing code field, ddd = tenth seconds elapsed.

Action = E0 Send the entire authorization code field.

Action = E1 Send the first two digits in the authorization code field (II code for Feature Group D).

Action = E2 Send the tenth through the eighth from the last digits in the authorization code field, not counting any ST digits at the end (area code for normal dialing).

Action = E3 Send the seventh through the fifth from the last digits in the authorization code field, not counting any ST digits at the end (exchange for normal dialing).

Action = E4 Send the last four digits in the authorization code field, not counting any ST digits at the end (station f o r normal dialing).

Action = E5 Send the entire billing code field.

Tone Controller Table

Address	Number	Character
41	01	!
42	02	"
43	03	#
44	04	\$
45	05	%
46	06	&
47	07	'
48	08	(
49	09)
4A	10	*
4B	11	+
4C	12	,
4D	13	-
4E	14	.
4F	15	/
50	16	0
51	17	1
52	18	2
53	19	3
54	20	4
55	21	5
56	22	6
57	23	7
58	24	8
59	25	9
5A	26	:
5B	27	;
5C	28	<
5D	29	=
5E	30	>
5F	31	?
60	32	@
61	33	A
62	34	B
63	35	C
64	36	D
65	37	E
66	38	F
67	39	G
68	40	H
69	41	I
6A	42	J
6B	43	K
6C	44	L
6D	45	M
6E	46	N
6F	47	O
70	48	P

9.5 Internal Functional Description

This section describes the function of each subsystem in the Test Module, and the order in which operations are performed to achieve traffic placement.

9.5.1 System Architecture

The Test Module can be configured in sizes from 1 to 48 ports (telephone lines). There are three types of controllers: *Master Controller*, *Coupler Controller*, and *Tone Controller*. There is a single Master Controller. There is a Coupler Controller for every 24 telephone lines. There are the same number of Tone Controllers as telephone lines.

9.5.2 Master Controller

The Master Controller supervises the entire system's operation. It communicates with each of the two types of slave controllers (Coupler and Tone Controllers). It is master of the communications bus and is sensitive to eight interrupt lines on the main backplane which are driven by slave controllers. Its function is to allocate the slaves and coordinate all operations required to perform any desired task. It is the sole link between the Test Module and the Computer, communicating via a single serial RS-232 line. The Master Controller also provides a low impedance busy tone signal.

Dipswitches 1-3 set the baud rate. Binary values 0-7 correspond to 110, 300, 600, 1200, 2400, 4800, 9600, and 19200 bits per second, respectively. Switch ON = 0, OFF = 1. Switch 3 is the most significant bit.

Dipswitch 4 sets the startup Tone Controller scan option. If ON, it stops scanning at the first Tone Controller not located. If OFF, the scan continues up to 24 Tone Controllers if there is one Coupler Controller present, or 48 if two are present.

The normal setting is:
switches 7-1 = ON-ON-ON-ON-OFF-OFF-ON.

9.5.3 Coupler Controller

One Coupler Controller is used for each pair of coupler cages. Each Controller monitors the ringing-in and line current statuses and controls the on-/off-hook status of the 12 couplers on Side 1 and the 12 couplers on Side 2.

A coupler cage consists of 12 line cards; each line card has two dedicated connections to the control port on the Coupler Controller. An output lead (OH) controls whether the telephone line is on- or off-hook: an open circuit corresponds to on-hook, and a ground corresponds to off-hook. An input lead (DT) determines the status of the telephone line. If the line is on-hook, an open on this detect line indicates an idle condition; a ground indicates an incoming ring. If the line is off-hook, a ground on the detect line indicates

the presence of line current; an open indicates the lack of line current (possibly due to a hangup from the other end of the line).

The Coupler Controllers continuously monitor the DT leads of all 24 line cards. When commanded, they activate the OH leads. Each of the 24 cards is independent from one another. The Coupler Controllers also supply +12 volts to the coupler cages. Each coupler cage connector carries 26 leads: 12 OH, 12 DT, +12 volts, and ground.

When ringing-in is detected, the Coupler Controller notifies the Master Controller and answers the line if so commanded. When a disconnect signal is detected, it hangs up the line and notifies the Master Controller.

The Coupler Controller forms a queue of incoming and disconnected calls, and processes them when the Master Controller is ready to handle the information. Lists of lines for which ringing or disconnects are to be ignored can be created for various purposes. All lines can be taken on- or off-hook on command, and timing constraints can be set: the minimum duration of time for line breaks acceptable as a disconnect signal, the minimum time for acceptance of a ringing-in, the length of time that disconnect signals are to be ignored after taking a line off-hook to ride through the click-over when dialing out, for example; and line breaks are guaranteed to last at least two seconds to insure against accidental reseizure of a line just released.

An LED lamp on the Coupler Controller illuminates when the Master Controller communicates with the Coupler Controller. The first Coupler Controller has all dipswitches set ON; the second has all ON except #1. These determine the identity of the board.

9.5.4 Tone Controller

The Tone Controller independently receives information from the test call; no other board in the system need be tied up while a test is in progress. Likewise, when dialing a number, processing time is not required for any other board while waiting for dial tone or actually dialing a number.

Each Tone Controller contains a DTMF receiver to accept information; a dial tone generator to produce a "ready" tone; a dial tone detector to permit recognition of local telephone line readiness; a DTMF generator to place outgoing calls and access to other equipment; a "ready" tone detector to enable use with OCC's; an MF generator to dial into trunk lines; and (optionally) an MF receiver to receive ANI and dialed digit information from the local operating company. All of these hardware functions are software controllable, permitting flexibility in creating new dialing patterns and detection/generation facilities.

An LED lamp on the Tone Controller illuminates steadily when it is either waiting for incoming digits or is

engaged in dialing an outgoing number. The lamp flashes when an action is completed and awaiting servicing by the Master Controller (whenever its interrupt line is lowered).

The dipswitch is set to the binary value of the Tone Controller, in the range 1-48. Switch 7 is the most significant bit. Tone Controller 1 has switches 7-1 set to ON-ON-ON-ON-ON-OFF; Tone Controller 48 is set to ON-OFF-OFF-ON-ON-ON-ON. These determine the identity of the board.

9.5.5 Coupler Cage

Twelve line cards are housed in each coupler cage. The cage consists of a physical mounting arrangement, and two backplanes: a front backplane, and a rear backplane. The line cards are powered by the associated Coupler Controller (+12 volts).

9.5.5.1 Front Coupler Backplane

The front backplane contains 12 edge sockets, into which the line cards are inserted. Common leads across all line cards are paralleled on the front backplane (power and ground). All other leads, which are isolated to one line circuit, are brought to the top of the backplane, either to solder pads or connectors, to be forwarded to the rear backplane. The front backplane is constructed from 1/8 inch board material to support pressures resulting from plugging in, and removing line cards.

9.5.5.2 Rear Coupler Backplane

The rear coupler backplane mounts behind the front coupler backplane. All connections to the front coupler backplane are via solder pads or connectors at the top of the backplane. The two backplanes are connected to one another either through mating connectors, or feedthrough jumpers at the top of the boards.

Individual pairs of leads originating from the line cards are rerouted to four 26-pin header sockets in the middle of the backplane. These are: coupler audio (CA); center tap (CT); coupler control (CCON); and expansion 1 (EXP 1). The CCON leads connect to the Coupler Controller. The telephone line connections are to both EXP 1 and to the first 12 circuit pairs of a 50-pin telephone connector at the bottom of the backplane. The second 12 circuit pairs of the socket are connected to a 26-pin EXP 2 header. Telephone line connections are either through the 50-pin connector (for the first 12 pair), or through EXP 1, which is then connected to EXP 2 of another coupler cage (to pick up the second 12 pair of the 50-pin connector on that cage).

9.5.5.3 UVC-1 (Universal Voice Coupler)

The UVC-1 is an interface between ARONTS and the telephone lines. It is a 2-wire loop start coupler. The card is all solid-state, and includes overvoltage and overcurrent protection.

The coupler connects to a Coupler Controller with a DETECT output and an ON/OFF-HOOK input. The input is used simply to draw loop current or go open circuited; the output is a combination of several signals. The UVC-1 detects ringing, forward, and reverse line current. These three outputs are paralleled together to form the DETECT output. If the coupler is in the on-hook mode, and the DETECT line goes low, then it must be ringing, and the Coupler Controller detects it as such. If the coupler is off-hook, then DETECT goes low if telephone line current is present. When this signal disappears, there has been a break in line current, and depending upon the length of this signal, the Coupler Controller may interpret this as a disconnect indication.

The audio connections from the coupler are made to the Tone Controllers via a split secondary output transformer in the UVC-1, which is used strictly as a single winding.

There are three LED lamps on the front of the UVC-1 visible from the front of the cabinet. A red indicator illuminates during the presence of ringing voltage, a green lamp lights when forward loop current is present, and a yellow LED indicates the presence of reverse loop current.

The UVC-1 card is used as an interface to loop start telephone lines for outgoing purposes, and to loop or ground start lines for incoming purposes. The card is also used as a telephone lookalike interface for connection to other switches. In such instances, a station interface must be used on the receiving switch.

Options

A ground start option is available for the UVC-1 permitting its use on outgoing ground start lines. An external earth (Telco) ground is required.

The UVC-1 can be used as the dry side (originating end) of 2-wire loop reverse battery trunks. The reverse loop current detection must be disabled. A jumper on the card side of the front coupler backplane can be cut to dedicate the card slot as loop reverse battery, or the UVC-1 itself can be modified.

Loop reverse battery interfaces work as follows. Signaling from the trunk equipment towards ARONTS is through the polarity of the source talk battery. When the UVC-1 goes off-hook, the trunk circuit detects the loop current and may return a *wink* signal, which is a momentary polarity *reversal*; the UVC-1 reports the reverse current as

a loop current loss to the Coupler Controller, permitting it to measure the duration and detect it. Trunk circuits can also send acknowledgement winks in addition to startwinks, dependent on the trunk type.

In order to program a wait for wink signal in a dialing register (W5), the Tone Controller must be optioned for such usage.

9.5.6 Main Cage

The main cage houses all controller boards. The main backplane is attached to the rear of the main cage and contains 100-pin edge sockets into which the cards plug. The backplane provides a straight parallel connection between all pins. Two expansion connectors are provided for paralleling several main cages. A power connector provides all required voltages to the cards.

9.5.7 System Power Supply

The system power supply provides power for the Test Module. Voltages provided are: +7 volts; +15 volts; and -15 volts. The +7, +15, and -15 volt supplies have a common system ground. Circuit cards which utilize these supplies provide on-card voltage regulators for isolation and decentralization.

9.5.8 Internal Communications Prioritization

All Controllers communicate with the Master Controller through a parallel bidirectional communications bus on the main backplane. This consists of seven address lines, CA6-CA0; eight data lines, CD7-CD0; a parity line, CPAR; and a strobe line, CSTR. The Master Controller commands a slave via the following sequence: the Master Controller outputs the slave address and the command; after a bus settling time, the Master Controller lowers the strobe line; all slaves read the address/data information on the falling edge of the strobe line, and the addressed slave accepts the command; after a fixed period of time, the Master Controller raises the strobe line; if the command requires data parameters, they are sent after the command in sequence in the same fashion; when complete, the Master Controller then places the address and data bus into a high impedance receiving state; the slave controller places the Master Controller's address (00) on the address bus, and the acknowledgement on the data bus; after a settling time, the slave controller lowers the strobe line; the Master Controller receives the response; after a fixed period of time the slave releases all bus lines; and the Master Controller is again in control of the bus.

The board communications bus addresses are set as follows: Master Controller, 00; Coupler Controllers, 10-1F; Tone Controllers, 41-7F (all hexadecimal notation).

Since all transactions on the communications bus are initiated by the Master Controller, the bus does not provide a means for slave controllers to alert the Master Controller to conditions requiring servicing. These service requests are instead handled by a set of eight interrupt inputs to the Master Controller, INT7-INT0, which are present on the main backplane. Slave controllers share these interrupt input lines; a slave controller requests service by lowering an interrupt line. If more than one device is on one interrupt line, the Master Controller polls those boards to determine which is the source of the interrupt. When the conditions causing the interrupt are removed through proper servicing by the Master Controller, the interrupt request is removed.

Tone Controllers share INT6, and INT5-INT1. Upon power-up, the Master Controller polls all Tone Controllers to determine to which interrupt line they are attached, and stores the information in a table. When an interrupt is detected on one of these five lines, the Master Controller then checks each Tone Controller recorded as being associated with that interrupt. Tone Controllers provide an interrupt when: all information has been received from the test call; a timeout has occurred; an outgoing call has successfully been completed; or an outgoing call has failed.

In addition to the general purpose interrupt output, which is one of the five INT5-INT1 lines, each Tone Controller also uses INT6 (when optioned for such usage). This interrupt is activated when an MF sequence has been received, or when it must wait for a wink to be received before continuing dialing.

Each Coupler Controller uses both INT7 and INT0. When a line rings in, is not blocked, and calls are not inhibited, the associated Coupler Controller lowers the INT0 line. When a disconnect has been detected, INT7 is lowered. The Master Controller always polls the Coupler Controllers to determine the interrupt source; they all share the same pair of interrupt inputs.

The INT7-INT0 lines are level sensitive interrupt inputs to the Master Controller, prioritized in the following order, from highest to lowest: INT6, INT0, INT7, INT5, INT4, INT3, INT2, INT1. This means that any interrupt input is processed only if there is no higher level interrupt pending. The firmware is set up so that during processing of any of these external interrupts, no further interrupts can occur. This prevents any new interrupt – either higher or lower – to be recognized after processing of a prior one begins until that processing is complete (and therefore that interrupt has been released). The interrupt priorities govern to a large extent the operation of the Test Module itself.

9.5.9 Internal Communications Protocols

This section describes the commands which the Master Controller issues the Coupler and Tone Controllers. These instructions are sent over the parallel communications bus, with the destination controller address on the CA6-CA0 lines. The first data byte is always the command instruction, which is optionally followed by data parameters.

The syntax used in this description of the interprocessor protocols is as follows: command numbers are given in hexadecimal; () is a data byte sent over the communications bus; and ACK is the address of the slave controller. Use of (xx) indicates that "x" is a hexadecimal nibble; use of (xxxxxxx) indicates that "x" is a binary digit, 0 or 1.

9.5.9.1 Coupler Controller (addresses 10-1F)

Mnemonic: RD
Command: Read Memory Location
Code: (00)(ah)(al)
Response: (dd)
Function: Read the contents of memory location (ah)(al) (ah is address high and al is address low) as (dd).

Mnemonic: WR
Command: Write Memory Location
Code: (01)(ah)(al)(dd)
Response: (rr)
Function: Write (dd) to memory location (ah)(al) and read back as (rr).

Mnemonic: CALL
Command: Call a Subroutine
Code: (02)(ff)(aa)(cc)(bb)(ee)(dd)(ll)(hh)(ah)(al)
Response: (ACK)
Function: Preload the flag register with (ff); A with (aa); BC with (bbcc); DE with (ddee); HL with (hlll), and call address (ah)(al) as a subroutine.

Mnemonic: INIT
Command: Initialize Controller
Code: (03)
Response: (ACK)
Function: Attempt to reset the controller the same as a hardware reset would do.

Mnemonic: SELF-TEST
Command: Have the Controller Test Itself
Code: (04)
Response: (00) if all okay
 (FF) if a ROM checksum error
 (ah) otherwise
Function: Perform internal tests. If other than (00) or (FF) is returned, there is a RAM error in the block (ah)(00)-(ah)(FF).

Mnemonic: SPARE
Command: Reserve for Future
Code: (05)
Response: none
Function: No effect.

Mnemonic: IDENT
Command: Identify as Coupler Controller and Give Status
Code: (06)
Response: (szdh1110)
Function: If this Coupler Controller is activating INT7 then s=1; if it is activating INT0 then z=1; if calls are inhibited then h=1; if d=0, then an analog switch; if d=1, then a digital switch.

Mnemonic: IL
Command: Initialize Lines
Code: (07)
Response: (ACK)
Function: Place all SIDE1 and SIDE2 lines in this Coupler Controller's group on-hook (hang them up).

Mnemonic: IRNG
Command: Initialize Ringing Status
Code: (08)
Response: (ACK)
Function: Clear the queue of incoming rings.

Mnemonic: IDY
Command: Initialize Dollar Yes
Code: (09)
Response: (ACK)
Function: Begin answering calls.

Mnemonic: IDN
Command: Initialize Dollar No
Code: (0A)
Response: (ACK)
Function: Stop answering calls.

Mnemonic: INDA
Command: INititalize Don't Answer
Code: (0B)(ya0spppp)
Response: (ACK)
Function: If y=1, set the specified port to don't answer mode; if y=0, set to answer mode. If a=0, then specified port is (pppp)=0-B of side (s)=0,1 (s=0 for SIDE1; s=1 for SIDE2). If a=1, then all ports of specified side are affected.

Mnemonic: INIG
Command: INititalize IIgnore disconnects
Code: (0C)(ya0spppp)
Response: (ACK)
Function: Specify port to ignore/look for disconnects. Syntax as INDA.

Mnemonic: LM
Command: Line Make
Code: (0D)(000spppp)
Response: (ACK)
Function: Take port (pppp), side (s) off-hook. Syntax as INDA.

Mnemonic: LB
Command: Line Break
Code: (0E)(000spppp)
Response: (ACK)
Function: Place port (pppp), side (s) on-hook. Syntax as INDA.

Mnemonic: RING
Command: Answer Incoming Ring
Code: (0F)
Response: (111lxxxx) if no ports ringing
(d00spppp) if at least one port is ringing
Function: Answer the first port ringing in the queue and report which port it is as side (s), port (pppp), and delete from queue. Syntax as INDA. If the port has been initialized with the INDC command as containing an authorization code, then d = 1; if not, then d = 0.

Mnemonic: HUP
Command: Find out which port disconnected and was hung up
Code: (10)
Response: (111lxxxx) if no ports disconnected
(000spppp) if at least one port has hung up
Function: Report which port was first in the disconnected queue as side (s), port (pppp), and delete from queue. Syntax as INDA.

Mnemonic: IO
Command: Go into I/O mode
Code: (11)
Response: (ACK)
Function: Stop processing rings and disconnects in main program. Used to access input/output ports without interference from the foreground program.

Mnemonic: RUN
Command: Resume normal operation
Code: (12)
Response: (ACK)
Function: Process rings and disconnects in main program.

Mnemonic: INDC
Command: INDC Clear
Code: (13)
Response: (ACK)
Function: Clear direct connection authorization codes for all ports.

Mnemonic: INDC
Command: Initialize Direct Connection
Code: (14)(000spppp)(dig)(dig)...(dig)(FF)
Response: (ACK)
Function: Load authorization code (dig)(dig)...(dig) to port spppp, (dig) from 01 to 10. Up to eight digits can be stored for each port.

Mnemonic: RDC
Command: Read Direct Connection
Code: (15)(000spppp)
Response: (dig)(dig)...(dig)(FF)
or (FF)
Function: Read back the prestored authorization code (dig)(dig)...(dig) for port spppp, (dig) from 01 to 10. If no code has been stored, simply (FF) will be the response.

Mnemonic: SERCOM
Command: SERIAL COMMunication
Code: (16)(aa)(tt)
Response: (rr)
Function: Transmit (tt) serially to line card (aa) and read back serially (rr). Used for communicating with digital line cards only.

Mnemonic: MARK
Command: Mark line with a linetype
Code: (17)(ttspppp)
Response: (ACK)
Function: Mark port spppp with linetype ttt. If pppp=1111 then mark entire side s with linetype ttt.

Mnemonic: WINK
Command: Wink a line
Code: (18)(h00spppp)
Response: (ACK)
Function: Wink port spppp, then if h=1 take the port off-hook. The port must be of type 4, 5, or 6 and must be in Ring Detect or Done Wink status.

Mnemonic: RINGMF
Command: Answer incoming call requiring an MF decoder
Code: (19)
Response: (ttspppp) if such a call pending
(11111111) if none
Function: Answer the first port requiring service of an MF decoder, and report the linetype as ttt, the side as s, and the port as pppp.

Mnemonic: STATUS
Command: Determine status of INT 0
Code: (1A)
Response: (s0uvwxyz)
Function: Find out if INT 0 is asserted, and if so, what pending types of actions are pending. If INT 0 is active, s=1; if Wink Detect, u=1; if Wink Fail, v=1; if Feature Group A, w=1; if Feature Group B, no ANI, x=1; if Feature Group B, ANI, y=1; if Feature Group D, z=1. INT 0 is removed, although if there are pending actions it will automatically be reasserted.

Mnemonic: WAIT0M
Command: Remove INT 0 for 1 second if require MF decoder
Code: (1B)
Response: (ACK)
Function: If INT 0 is asserted only for calls requiring MF decoders, it is removed for one second; if other calls are pending, it is not removed. Any calls requiring an MF decoder in the ensuing second do not assert INT 0.

Mnemonic: STIME
Command: Set Time
Code: (1C)(0wwwattt)(dd)
Response: (ACK)
Function: If a=0, then set time www for linetype ttt to value dd; if a=1, set time www for all linetypes to value dd.

Mnemonic: WWINK
Command: Wait for Wink
Code: (1D)(000spppp)
Response: (ACK)
Function: Wait for a wink from port spppp. When either received or timed out (10 seconds), assert INT 0.

Mnemonic: DWINK
Command: Done Wait for Wink
Code: (1E)
Response: (r00spppp) if port done or failed WWINK (11111111) if none
Function: Report the result of a WWINK command after INT 0 has been asserted. If r=1, then the wink was detected; if r=0, the wink was not detected within 10 seconds.

Mnemonic: PSTAT
 Command: Port Status
 Code: (1F)(000spppp)
 Response: (fadiXIII)(ls)(tt)
 Function: Report the Line Mark (fadiXIII), the Line Status (ls), and the Line Timer (tt) for port spppp. Line Mark: f=Failed; a=Direct Access; d=Don't Answer; i=Ignore Disconnects; III=Linetype. Line Status: 0=Idle; 1=Ring Start; 2=Ring Detect; 3=Wait to Go Off-hook; 4=Off-hook Ignore Disconnect; 5=Off-hook Look for Disconnect; 6=Disconnect Detected; 7=Wait for On-hook; 8=Start Wink; 9=Guard Wink; 10=Done Wink; 11=Wait for Wait for Wink; 12=Wait for Wink; 13=Wait for Wink End; 14=Guard Wait for Wink; 15=Wink Fail; 16=Wink Detect; 17=Wait to Answer.

Mnemonic: WAIT0
 Command: Kill INT 0 and wait 1 second
 Code: (20)
 Response: (ACK)
 Function: Remove INT 0 and wait one second before letting any requests reassert it.

Mnemonic: RTIME
 Command: Read Time Parameters Out
 Code: (21)(00000ttt)
 Response: (Linetype 0)...(Linetype 6)
 Function: Read out seven timing values for each Linetype for timing parameter ttt.

Mnemonic: INFALL
 Command: Initialize FAILED status
 Code: (22)(ya0spppp)
 Response: (ACK)
 Function: Fail/unfail a port. Syntax as INDA.

Mnemonic: SETGAIN
 Command: Set gain for digital switch
 Code: (23)(0a0spppp)(TttRrrr)
 Response: (ACK)
 Function: If a=0, then set gain for individual port to ttt dB, + for T=0, - for T=1, and set receive gain to rrr dB, + for R=0, - for R=1. If a=1, then set gains for all ports on side s.

Mnemonic: SETINHLIM
 Command: Set inhibit limit for digital switch
 Code: (24)(0a0spppp)(xxxxxxxi)
 Response: (ACK)
 Function: If a=0, then inhibit limiting for individual port if i=1, do not inhibit limiting if i=0. If a=1, then set or clear limiting for all ports on side s.

Mnemonic: LH
 Command: Line Hook
 Code: (25)(ha0spppp)
 Response: (ACK)
 Function: If h=1 then take port spppp off-hook; if h=0 then place port spppp on-hook. If a=1 then do for all ports on side s.

Mnemonic: ZSTATS
 Command: Zero port STATisticS
 Code: (26)
 Response: (ACK)
 Function: zero the port statistics for all of the ports

Mnemonic: RDSTAT
 Command: Read port STATistics
 Code: (27)(xxxspppp)
 Response: (Byte 1)...(Byte 10)
 Function: Read the statistics for port spppp:
 Bytes 1-3 = current or last call duration, seconds
 Bytes 4-7 = accumulated duration, seconds
 Bytes 8-10 = accumulated number of calls
 Each field is in BCD format, least to highest byte

9.5.9.2 Tone Controller (addresses 41-7F)

Instructions (00) through (05) are the same as for the Coupler Controller.

Mnemonic: IDENT
 Command: Identify as Tone Controller and Supply Status
 Code: (06)
 Response: (wxyz1011)
 Function: If this Tone Controller is activating its INT lead then w=1; if idle, then (xyz)=0; if the Travel Code/Authorization Code/Telephone Number entry is done, then (xyz)=1; if that entry has timed out, then (xyz)=2; if the Billing Code entry is done, then (xyz)=3; if that entry has timed out, then (xyz)=4; if outgoing dialing is done, then (xyz)=5; if outgoing dialing has caused a dialing failure, then (xyz)=6; if a task is in progress, then (xyz)=7.

Mnemonic: IH
 Command: Initialize Hold
 Code: (07)(rrnnnnnn)
 Response: (ACK)
 Function: Load Hold register (rr)=0, 1, or 2 with value (nnnnnn).

Mnemonic: IEW1
 Command: Initialize Enter Wait 1
 Code: (08)(rrnnnnnn)
 Response: (ACK)
 Function: Load Enter Wait register 0, 1, or 2 with (rr)=0, 1, or 2 with value (nnnnnn).

Mnemonic: IEW2
 Command: Initialize Enter Wait 2
 Code: (09)(rrnnnnnn)
 Response: (ACK)
 Function: Load Enter Wait register 3, 4, or 5 with (rr)=0, 1, or 2 with value (nnnnnn).

Mnemonic: IDW
 Command: Initialize Dialing Wait
 Code: (0A)(rrnnnnnn)
 Response: (ACK)
 Function: Load Dialing Wait register (rr)=0, 1, or 2 with value (nnnnnn).

Mnemonic: IBP
 Command: Initialize BeePs
 Code: (0B)(rrnnnnnn)
 Response: (ACK)
 Function: Load Beep register (rr)=0, 1, or 2 with value (nnnnnn).

Mnemonic: IP
 Command: Initialize Pointers
 Code: (0C)
 Response: (ACK)
 Function: Set all read pointers to the beginning of each field.

Mnemonic: DF
Command: get Dialing Failure
Code: (0D)
Response: (nn)
Function: Read back the which W command failed in a dialing register.

Mnemonic: INT
Command: Activate Interrupt Line
Code: (0E)
Response: (ACK)
Function: Used by the Master Controller to determine to which INT line this Tone Controller is connected.

Mnemonic: SB
Command: Send Beeps
Code: (0F)(nn)
Response: (ACK)
Function: Send (nn) beeps.

Mnemonic: RX
Command: Go into Receive Mode
Code: (10)
Response: (ACK)
Function: Receive incoming information from user.

Mnemonic: TX
Command: Go into Transmit Mode
Code: (11)
Response: (ACK)
Function: Place an outgoing call using the internal dialing register.

Mnemonic: IDLE
Command: Go into the Idle Mode
Code: (12)
Response: (ACK)
Function: Kill any process.

Mnemonic: XW
Command: Xfer to Wait
Code: (13)
Response: (ACK)
Function: Remove interrupt and wait for billing code; then activate interrupt once again.

Mnemonic: R
Command: Read User Digit
Code: (14)
Response: (dd)
Function: Permit LCRC to read the incoming user digits. Touchtone 1-9, 0, *, #, A, B, C, D set (dd)=01-10; "T" sets (dd)=(11); "N" sets (dd)=(12); "M" sets (dd)=(13); "X" sets (dd)=(14).

Mnemonic: B
Command: Read User Billing Code
Code: (15)
Response: (dd)
Function: Permit LCRC to read the incoming user billing code. (dd)=(01)-(10), (14) as above.

Mnemonic: QS
Command: Store Sequence
Code: (16)(dd)...(dd)(00)
Response: (ACK)
Function: Store a sequence for outgoing dialing. (dd)=(01)-(11) as for "R". "Q" sets (dd)=(15); "S" sets (dd)=(16); "W" sets (dd)=(17); "V" sets (dd)=(18).

Mnemonic: Q#
Command: Store User Number
Code: (17)(dd)...(dd)(00)
Response: (ACK)
Function: Overwrite the user's telephone number entry. (dd)=(01)-(10) as for "R".

Mnemonic: XMD
Command: Xfer call for More digits with Dialtone
Code: (18)(nn)
Response: (ACK)
Function: Remove interrupt. Provide dialtone until first digit received. Overwrite billing code field and wait for (nn) digits unless shortened with "*".

Mnemonic: XMQ
Command: Xfer call for More digits Quietly
Code: (19)(nn)
Response: (ACK)
Function: As XMD, but without generating dialtone.

Mnemonic: TRTN
Command: Call Transmit Tone Subroutine
Code: (1A)(nn)
Response: (ACK)
Function: Call the TRTN Subroutine with register A=(nn)

Mnemonic: CLR TTBUF
Command: Clear Incoming Digit Buffer
Code: (1B)
Response: (ACK)
Function: Zero the input buffer; only useful prior to using the TXRX command.

Mnemonic: TXRX
Command: Transmit and Receive
Code: (1C)
Response: (ACK)
Function: Transmit the internal dialing register, then go into receive mode without clearing the input buffer. Used for Switch Card testing.

Mnemonic: STAC
Command: STore Authorization Code
Code: (1D)(dig)(dig)...(dig)(FF)
Response: (ACK)
Function: The authorization code (dig)(dig)...(dig) is used instead of requesting it from the user, (dig) from 01 to 0A.

Mnemonic: RXA
Command: Go into Receive mode with Authorization code
Code: (1E)
Response: (ACK)
Function: As RX, Except do not accept an authorization code from the user; use the preloaded code.

Mnemonic: RXFGD
Command: Go into Receive mode for Feature Group D call
Code: (1F)
Response: (ACK)
Function: As RX, except receive two MF fields: II + ANI, and called number.

Mnemonic: KILL6
Command: Kill INT 6
Code: (20)
Response: (ACK)
Function: Remove INT 6 if asserted.

Mnemonic: RXFGB

Command: Go into Receive mode for Feature Group B with ANI

Code: (21)

Response: (ACK)

Function: As RX, except receive one MF field (ANI) and one DTMF field (called number).

Mnemonic: CUTHRU

Command: Specify Cuthrough option for Feature Group D call

Code: (22)(000000tt)

Response: (ACK)

Function: Handle Feature Group D cuthrough (10XXX#) call as follows: tt=0, exit with telephone number field empty; tt=1, go to RX (treat as Feature Group A or Feature Group B without ANI); tt=2, go to RXA to get called telephone number (treat as Feature Group B with ANI); tt=3, treat as a timeout (call will be hung up).

Mnemonic: RUMF

Command: aRe yoU an MF decoding Tone Controller?

Code: (23)

Response: (00) if not equipped for MF decoding
(FF) if equipped for MF decoding

Function: Determine if the Tone Controller can be used for MF decoding.

Mnemonic: INAC0

Command: INititalize Area Code 0

Code: (24)(xxxxxyyy)

Response: (ACK)

Function: Set the default area code to X0Y. If an MF field retrieves seven digits, or 0 + seven digits, insert the default area code in front of the seven digits.

Mnemonic: INAC1

Command: INititalize Area Code 1

Code: (25)(xxxxxyyy)

Response: (ACK)

Function: As INAC0, except set the default area code to X1Y.

Mnemonic: DPARAM

Command: Dump PARAMeters

Code: (26)

Response: (TIME1)...(TIME6)(BEEPS1)...(BEEPS4)
(HOLD1)...(HOLD4)(DWT1)...(DWT4)
(CUTHRU)(AREACD1)...(AREACD3)

Function: Dump 22 bytes of information.

Mnemonic: LPARAM

Command: Load PARAMeters

Code: (27)(TIME1)...(TIME6)(BEEPS1)...(BEEPS4)
(HOLD1)...(HOLD4)(DWT1)...(DWT4)
(CUTHRU)(AREACD1)...(AREACD3)

Response: (ACK)

Function: Load 22 bytes of information.

Mnemonic: STATUS

Command: determine STATUS of INT 6

Code: (28)

Response: (iccccccc)

Function: Determine status of interrupt 6; if set, i=1. If c=0, send wink; c=1, receive wink. Kill INT 6 after execution of command.

Mnemonic: WINK

Command: indicate if WINK has been received or not

Code: (29)(ww)

Response: (ACK)

Function: Tell the Tone Controller if a wink has been received or not. If ww=FF, then a wink has been received; if ww=0, then a timeout has occurred and a wink has not been received.

Mnemonic: TRTNMF

Command: TRAnsmit ToNe with MF pairs

Code: (2A)(tt)

Response: (ACK)

Function: As TRTN, except that the tones correspond to MF pairs: 01-09=1-9; 0A=0; 0B=KP; 0C=ST; 0D=ST'; 0E=ST2'; 0F=ST3'.

Mnemonic: RDFIL

Command: ReaD FILter output

Code: (2B)

Response: (0 0 700 900 1100 1300 1500 1700)

Function: Read the outputs of the MF filters; a bit is set if energy in that frequency band has been detected. The RXFGD command must first have been executed.

Mnemonic: XFGDW

Command: Xfer Feature Group D call to Wait for billing code

Code: (2C)

Response: (ACK)

Function: Provide BEEP2 beeps, provide ready tone, then wait up to TIME1 seconds for the first billing code digit; when received, kill ready tone; if timeout, exit; after first digit received, wait up to TIME3 seconds for subsequent digits. Overall timeout is TIME2 seconds.

Mnemonic: IN0+

Command: Initialize Feature Group D 0+ call handling

Code: (2D)(0000000c)

Response: (ACK)

Function: Handle normally for c=0; for c=1, dump the ANI and get the authorization code via DTMF input.

10. SOFTWARE REVISIONS

This chapter describes the differences between the ARONTS software of 11/91 as described in the prior sections of this manual, and the release dated 5/96. Most of the user interface is identical; only the changes are noted.

10.1 Main Menu

There are two new menu options: *Run Job Queue*, and *Set Job Queue*. These are discussed in section 10.11 (Job Queue).

10.2 Resume Testing

There are two aspects related to resumption of testing: site selection, and test application within a site which is accessed. The previous software addressed only site selection. During a test run, sites are picked from the selection criteria of the Test Schedule. When a test session is quit prior to test completion, there remain three sets of sites: (1) those which have been completely tested; (2) those partially tested; and (3) those which have not yet been accessed. Resume Testing previously skipped the first set, and treated the second and third groups identically. Any tests already performed from the second set were repeated; whenever a site was called, the test suite began in a fresh state as specified in the Test Definition.

This release retains the state of testing on each ARONTS port. Upon resumption, the site which was accessed on each individual port is recalled from that same port, and if the site is successfully reached, testing continues from where it was in the previous test run. If the site cannot be accessed after resumption, it is either dropped (after logging), or re-attempted later (section 10.6, Retry Site Access). In the latter case, if the site is subsequently accessed, testing starts from the beginning for that Test Definition.

For proper resume operation, the Site Information and Test Definitions should not be changed between the original test run and test resumption; the sites for which testing was in progress upon exit use the Site Information and Test Definition as loaded during the first run. Subsequent site access uses the current (possibly modified) Site Information and Test Definition. The Test Schedule should not be changed. The Test Numbers and Dialing Registers can be changed, however. When changes are made between quitting and resuming, and prior to printing the Log, care should be given to proper interpretation of the results. The Log printout always shows the information as it exists at the time of printing, not necessarily what it was at the time the test was conducted. (The log file contains the index of the Test Number and Dialing Register, as well as the Outline of the remote site for retrieval of Originating numbers, not the actual data value for these parameters.) The RawData.Txt

file contains the data values as they existed at the time the record was created.

The resume operation overrides any changes made regarding port status under System Setup (enable/disable lines), and retains any Failed ports.

10.3 Site Information

The characters A, B, C, and D can be used in the Test and Program fields for the RTS-1 sites. These fourth column DTMF digits augment the standard 0-9 digits. Naturally, the RTS-1's must be programmed with these codes to match this information. ARONTS can be used to reprogram these codes, as described in section 7.3.3. The purpose is to make it more difficult for would-be hackers to break into the RTS-1 sites.

10.4 Common Features

The LEC Names, CO Descriptions, State/Country, Test Numbers, and Dialing Registers menu options have common new features. The displayed page can be scanned forward and backward with the + and – keys, as displayed on the options line. The Page Up and Page Down keys can also be used for the same purpose. The option *Page* is relabeled according to the appropriate information; for example, with Dialing Registers, the *Register* option permits the user to go directly to any specified register.

A *Block Move/Copy* option is added. A starting point, an endpoint, and a new beginning point are entered. The block of information between the starting point and endpoint is copied to a block starting at the new beginning point. Existing information at the destination spots is overwritten. No warning is given (the files are not written until the Exit Retaining All Changes option is selected). If the original block and ending block overlap, the effect is to move, or shift, the block up or down in index. This can be used to duplicate sequences of Dialing Registers, for example, in order to make minor changes in a related group. It can also be used simply to rearrange the Test Numbers for various grouping purposes.

10.5 Test Numbers

Blank domestic numbers may be entered without interference by the general requirement of entry of ten numeric digits. The purpose primarily is to create holes, or delete Test Numbers used with the Long Range feature (section 10.7).

Test Number file sizes are variable (rather than as previously fixed at 3000 numbers). Test Numbers are read until either the file end or the number of Test #'s as set in

System Setup is reached. If the file contains less than the specified amount of numbers, the remainder are automatically filled with blank numbers. Upon exiting, the file is written according to the maximum number in System Setup. This can increase the file size, but not decrease it.

10.6 System Setup

Several additional features are available under System Setup.

Maximum Test Number

Up to 65000 Test Numbers can be specified — the previous maximum was 3000. It is generally advantageous to keep this number no larger than required in order to reduce file access times. This revision also keeps the Test Number files only as large as this number dictates.

If the maximum Test Number is increased, Main Menu option *Zero Statistics* must immediately be executed to increase the test number statistics file. If the maximum Test Number is greater than 3000, the Test Numbers program (section 6.4.4) operates directly on the Test Numbers file; the Exit screen is eliminated, and all session changes are irrevocable.

Credit Card Numbers and Secret Authcodes

The previous single Credit (calling) Card Number and Secret Authcode are expanded to ten each. Upon entry, and after password validation, an index from 0-9 is entered; the appropriate contents are then stored for that particular entry. The information is referenced in Dialing Registers as **c0-c9** and **s0-s9**. If **c** or **s** is used without a numeric specifier following, it is interpreted as **c0** and **s0**, respectively, to maintain compatibility with earlier Dialing Registers.

More Options

The System Setup option line provides a new screen reached with the **More** option. This provides three additional parameters.

The **Manual DTMF Code** field permits the 000 default code recorded as Passed to be set to any sequence from 1-4 digits in length.

The **Access Tries** field permits the default 3 successive attempts to access a site to be altered. This is the number of times a site is sequentially called attempting access; it is also the number of times local dialtone is attempted to be drawn from the ARONTS port before the port is Failed. The value also determines the number of successive secondary dialing failures for RTS-1 sites before abandoning a test (see log code 133, section 10.13).

Retry Site Access changes the way sites are abandoned when access is not achieved. Previous operation was always according to this parameter being set to *No*: when

a site is called according to the selection criteria of the Test Schedule, and access is not accomplished, the site is recalled until a total of Access Tries is reached. At this point, code 126 (Unable to Access Site) is logged, and the site is abandoned.

If **Retry Site Access** is set to *Yes*, the same process occurs, except that the site is not abandoned. As long as an active site is being tested in a Partition, and idle ports are found in that Partition, the unreached sites are reattempted. Testing stops when a complete cycle searching for a scheduled, untested site does not access a new location. On each cyclical attempt, Access Tries calls are made, and code 126 logged. When no more sites can be reached, code 132 (Gave Up on Site) is logged. The Test Number field shows the Partition number (1-4).

The purpose of Retrying Site Access is twofold. If a list of sites is scheduled for testing, and by happenstance someone is manually testing through one of the scheduled remote sites, ARONTS keeps trying to reach that site in the hope that before the test session is over, the manual user will have relinquished control, and permitted ARONTS to perform its scheduled task. The other situation is for multiple ARONTS installations. If separate groups have their own ARONTS unit, but share a common set of remote sites, it may occur that separate ARONTS units are scheduled to access an overlapping set of sites at the same time. By Retrying Site Access, each ARONTS tests whichever sites it can reach, and keeps trying to get to the other sites; hopefully each ARONTS can access the sites initially used by the other ARONTS at a later point in the test session. This provides for automatic interleaving of site usage.

If a large percentage of scheduled sites are expected to be unavailable, it is probably better to set **Retry Site Access** to *No*; otherwise, the test session may last much longer than required to test the active sites. Of course, the operator can always Quit Testing manually. Another reason to inhibit this feature is to limit the test run duration for the case when a new site is finally reached towards the end of testing, and a large Test Definition is used for the sites; this could double the overall session duration if there are more ARONTS ports than remote sites scheduled.

10.7 Test Definitions

The Dialing Register and Consecutive Tests can be set to blank (or zero) for a Test Group. If so, the entire Group is not used. This is equivalent to Zeroing the Test Numbers for that Group; it can be a simple way to temporarily inhibit testing of a Group without losing the information of the Test Numbers. If any of the three fields are blank, the Group remains untested.

The display Numbers option provides an {Escape} option if more than one screen of Test Numbers is being displayed; this is primarily useful when displaying the large quantities of numbers available under the Long Range mode.

Long Range Group

If the new **Range** option is not used, the standard arrangement is retained: all numbers within a single Group must be within a range of 103. Any set of numbers within that range can be accommodated. However, the Group can be placed into a new mode of operation: Long Range. The **Range** option toggles the Group between standard and Long Range. Test Numbers in the Group are zeroed when the type of Range is changed.

Long Range Groups have no limitation based upon the upper and lower Test Number values; the largest possible range of 1-65000 is acceptable. There is a limitation on the selection of those numbers: at most three ranges within the Group is permitted. For example, 1-500, 502-999, 2000-3000 is acceptable; and 234-345, 400, 500 is acceptable. If a change is made which causes more than three ranges to result, the first three are retained, and a warning beep is generated.

Additionally, *for Long Ranges only*, Test Numbers specified which are either blank or (000) 000-0000 are *automatically skipped* during testing. This permits individual numbers to be deleted from the test list (from the Main Menu *Test Numbers* option) without breaking the Long Range up into more ranges.

Long Ranges are particularly useful when a bulk quantity of numbers is to be tested from various sites; each Test Definition can be set to the maximum of 1-65000. All actual Test Numbers found in the Test Number file are then tested from each site. The feature can also be used to test bulk quantities of authorization codes. In this case, the authcodes to be tested are entered as international Test Numbers, which permits a variable length code up to 12 digits in length to be accommodated. The Dialing Register specified uses the **n*** field as the authcode, and embeds the dialed number in the Dialing Register.

10.8 Reconfirmation

The Main Menu asks for reconfirmation for the *Wipe RawData* and *Zero Statistics* options. A sequence of Yes/No is now required instead of the previous Yes/Yes response.

10.9 File Maintenance

The *Format B:* option is not available if there is no physical disk drive B:. If there are two floppy drives, the *Format A:* option changes to *Format B:* as the cursor moves through the field.

Archive options are added for the Job Queue (section 10.11), and Backup/Retrieve options are provided for the Job Queue Archive.

10.10 Test Analysis

The Analyze.Txt file generated when file output is selected has been moved from the D:\Report directory to the current directory (C:\ARONTS).

Test Analysis Options

Statistics by Test Number	Statistics by Site Number	Site Data
Overall Average	Selected Totals	Selected Totals
One Test Number	One Site	One Site
List Conditions	List Report Wide	List Reprt Wide
List Report Wide	Verbose Report	Verbose Report
{Escape}	File Output: Off	

The main Analysis screen is altered to provide several wide listing options, and a Test Number Conditions option is supplied.

Criteria for Printing Test Number Statistics

Successful Tests				Unsuccessful Tests							
Minimum:	1			DTMF:	999						
Maximum:	2147483647			SIT:	3						
				Busy:	999						
				Reorder:	2						
				Ring:	3						
				Voice:	999						
				Timeout:	1000						
				Total Failures:	5						
Scan {Escape}											
Test Number	# of Tests	-Wait-Time-	Averg St Dv	DTMF	SIT	Busy	Reorder	Ring	Voice	Timeout	
Total	11	0.62	0.10	2	10	11	3	2	10	4	
Sum	11	0.62	0.10	0	5	7	3	0	5	4	
65000 numbers scanned.				Found: 8							

Test Number Conditions

The Statistics by Test Number listings permit the provisions of conditions in order to inhibit the printing of statistics for Test Numbers which are not of interest. The default criteria print data for any Test Number which is nonzero. The Criteria screen enables the entry of constraints.

A line is included in the listing if the successful tests are within the minimum and maximum range specified, inclusive; any of the individual unsuccessful tests is greater than or equal to its respective threshold; or the total number of unsuccessful tests reaches or exceeds the Total Failures threshold. Once entered, the conditions remain in place until the Test Analysis program is exited, afterwhich the defaults are reinstated. The Custom Menu, with the canned

report option, can be used to easily run repetitive reports on an ongoing basis (sections 4.3 and 6.5).

If File Output is activated, the conditions are not used; any Test Number with nonzero data is automatically included in the output file. In this situation, the file is exported into a spreadsheet or database package, which can perform test criteria itself.

The wide listing for Test Number statistics includes a Total Failures column, along with a leading column displaying the actual Test Number in front of its index. Both the standard and wide Test Number statistics reports show a *Total* and a *Sum* line. The Total line shows all statistics collected for all Test Numbers. The Sum line shows the numerical sum over all Test Numbers which meet the list conditions, which in general is less than the Total line. The criteria screen *Scan* option provides a method to display the Total and Sum values prior to creating a listing.

10.11 Job Queue

A Job Queue is provided which operates at a level above the Tester program. The purpose of the Job Queue is to set up in advance a list of jobs to be run at specified times, and to have ARONTS execute each job in turn automatically. The current Job Queue is stored in a Queue.Dat file. Various versions can be archived in the Queue.Zip file (section 10.10).

View/Modify Job Queue					
Job Number	1	2	3	4	5
Wait Until: Day	Friday	Saturday	Sunday	Anyday	No Job
Time	23:00	00:00	14:30	06:15	00:00
Started: Day	---	---	---	---	---
Time	---	---	---	---	---
Completed: Day	---	---	---	---	---
Time	---	---	---	---	---
File Versions:					
Test Schedule	5	45	46	23	---
Test Definitions	5	5	8	345	---
Test Numbers	---	---	---	---	---
Dialing Registers	---	---	---	---	---
Module Commands	---	---	---	---	---
Automatic Restart: No					
Next Queue Version: 35					
{Arrows} {Space}=Modify Delete Job Reset {Escape}					

Set Job Queue

The current Job Queue is viewed and modified via Main Menu option *Set Job Queue*. Five jobs are shown. The following fields may be entered for each job:

Wait Until Day. The day of the week the job is to commence: the field cycles from *Sunday* to *Saturday*, *AnyDay*, and back to *Sunday*.

Wait Until Time. The hour and minute on the Start Day the job is to begin. Twenty-four hour time is used; valid entries are from 00:00 through 23:59.

File Versions. The *Test Schedule*, *Test Definitions*, *Test Numbers*, *Dialing Registers*, and *Module Commands* files version numbers may be entered for each job. If the current file version is to be used, a blank (or zero) entry is made. Nonblank file versions *change* the current file to that specified, and leave them behind as the current version.

When the Job Queue is run, the *Started* and *Completed* day and time are recorded for each job. *Reset* clears these fields and permits the job to be rerun. *Delete Job* deletes the job number at which the cursor is resting, and shifts all higher job numbers down one job.

If all jobs within the current Job Queue are to be endlessly repeated, the *Automatic Restart* option is set to *Yes*. Upon completion of the last job, all five jobs are automatically reset and the process starts over.

If more than five jobs need to be scheduled, a list of Job Queues can be created and archived with appropriate version numbers. Each Job Queue should have its *Next Queue* entry set to the version of the continuation of the job list. The first should be made current prior to running the Job Queue. A circular list is permitted.

{Escape} provides a menu with *Don't Exit*, *Cancel All Changes and Exit*, and *Exit Retaining All Changes* options. The actual (current) Job Queue file is not written unless explicitly commanded.

Job Queue					
Job Number	1	2	3	4	5
Wait Until: Day	Friday	Saturday	Sunday	Anyday	No Job
Time	23:00	00:00	14:30	06:15	00:00
Started: Day	Friday	Saturday	Monday	---	---
Time	23:00	02:45	01:52	---	---
Completed: Day	Saturday	Monday	Monday	---	---
Time	02:43	01:49	03:25	---	---
File Versions:					
Test Schedule	5	45	46	23	---
Test Definitions	5	5	8	345	---
Test Numbers	---	---	---	---	---
Dialing Registers	---	---	---	---	---
Module Commands	---	---	---	---	---
Automatic Restart: No					
Next Queue Version: 35				Monday	
				10/18/93 05:21	
{Escape} --- Waiting for Job #4 ---					

Run Job Queue

Main Menu option *Run Job Queue* is used to activate the Job Queue. If file versions are contained in the Job Queue, they are retrieved and made current prior to running the assigned jobs. **The current file versions are overwritten without inquiry at the time.** A single warning message is provided prior to starting the Job Queue. If the current versions are not archived first they may be lost.

Upon activating the Job Queue, ARONTS waits for the first job's listed start day of week and time. If the day of week is the same as the Wait Until Day, but the start time is

prior to the current time, the job immediately commences. There is a built-in delay requiring the minute to change twice before the job is started, to permit the operator to view the Job Queue status before the screen disappears. Depression of {Space} starts the job immediately if its start time has passed.

While the exact day of week is required for the first job listed to begin, it is not necessarily required to match for subsequent jobs. The system looks at the seven day window beginning on the day the first job actually began; if within that week, the next job was supposed to have run before the current day, it is immediately executed (irrespective of the Wait Until Time). This is for the situation, for example, when Job #1 begins on Monday, and Job #2 is scheduled for a Tuesday start, but Job #1 does not finish until Wednesday. Job #2 is immediately started. If Job #2 is scheduled for Sunday, it waits.

If a Wait Until Day is set to *AnyDay*, the system always waits until the start time has been reached. If a set of tests is to be run without concern for start times and days, each job can be set to Wait Until *AnyDay* at 00:00. In this situation, the Job Queue is used merely as a sequencer to bring in file versions and execute the Tester.

Upon completion of all jobs, if the *Next Queue* is not blank, the designated Job Queue version is automatically retrieved from the Job Queue Archive; all five jobs (of the new, now current Job Queue) are automatically *Reset*; and operations begin as for the first Job Queue. The seven day window is reset upon each Job Queue brought in from the archive.

The Job Queue does not check that specified file versions exist in the various archives until they are actually retrieved. If a file is missing, execution continues with the last current version for the affected file.

Executing the Job Queue automatically runs the Tester program, commanding it to exit when the Test Schedule is complete. *If any Partitions in a Test Schedule are set to Use Operation Tables, the job does not exit.* The completed day and time is not entered in the Job Queue, and no other jobs are run. Operation Tables indicate that continuous testing is requested, and are not compatible with using the Job Queue, other than delaying its start. For example, a list of Routining Test Schedules can be placed into the Job Queue, and the last entry set to use Operation Tables; once the Routining is complete, ARONTS conducts continuous testing according to the last job entry.

During test operations which are started via the Job Queue, if the operator Quits Testing (prior to automatic exit), the Job Queue is aborted and control returns to the Main Menu. The Job Queue contains the Started day and time for the last job, but no Completed entries. If the Job

Queue is not explicitly altered or reset (via *Set Job Queue*), the next time the Job Queue is run, the fact that the last job was not completed is detected, and that job is automatically resumed. If data files are altered, or testing subsequently begun directly and not via *Run Job Queue*, the resumption will be incorrect (section 10.2); the operator must *Reset* the incomplete job in the Job Queue prior to running it.

While the Job Queue is pending, waiting for the scheduled start of the next job, the operator may exit with {Escape}. The Job Queue can be restarted at a later time without penalty.

Interface with Other Systems

Two optional files may be used to interface with other computing facilities: *PreProc.Bat*, and *PostProc.Bat*. If the first file exists, after retrieving any specified files from the archives, and before the tester program is executed, the *PreProc.Bat* Dos batch file is executed. It is called with seven parameters: the current job number (1-5); and the current version numbers of the Job Queue, the Test Schedule, the Test Definitions, the Test Numbers, the Dialing Registers, and the Module Commands. A value of 0 represents a current file without an attached version number. The batch file can interpret this information with the %1 - %7 replaceable parameters and make decisions based upon them. The preprocessing command file can be used to signal another system that testing is about to commence; possibly import Test Numbers into the current Test Numbers file; or to delete *RawData.Txt*. Another useful possibility is to read the time from some other system and synchronize the Dos clock.

Upon completion of a job, if the batch file *PostProc.Bat* exists, it is executed with the same parameters as described above for *PreProc.Bat*. It can be used, for example, to copy the *RawData.Txt* file to a network directory, begin billing comparison, or execute the *VPCLog.Exe* program to provide for automatic printout of the Log file, or creation of *Printer.Txt* for copying to another directory. If the latter option is desired, the appropriate keystrokes would be required to be stored in an ASCII file, and input redirected from it.

Remote Access can be initiated from within the *Run Job Queue* program as well as the *Main Menu* and *Tester*.

10.12 RawData Path

The default path for the output file *RawData.Txt* is D:\Report. It is possible to change the drive and path by placing a Dos Set command in the file *Menu.Bat*: Set *RawData=Path*, where *Path* is the desired drive and path. If *Path* is .\, the file is written into the current directory (C:\ARONTS); if *Path* is X:\Data\, the file is written onto

drive *X* in directory *Data*. The stated path must end with a backslash. This feature can be used to have Tester directly deposit the output file onto a network drive for interface with other software. Main Menu displays free space for drive *X*, unless *x:* is specified (lower case drive letter). Display of free space on a network drive can prove slow, and for that reason the inhibit option is provided.

Main Menu option *Wipe RawData* refers to the chosen path. The File Maintenance *Offload* option for *RawData.Txt* also refers to the chosen path.

10.13 Tester Program

The Tester program is ordinarily activated from the Main Menu. If it is desired to call it from a Dos batch file, two command line parameters may be utilized: *Tester [Exit] [Resume]*. If the resume parameter is passed, the program resumes testing (the same as if called from the Main Menu). If the exit parameter is passed, upon completion of all testing, the program automatically Quits, and the program terminates.

The *Quit* menu shows the status of the automatic exit parameter, and can be toggled on and off by operator input. The *Alert Tone* option is moved from within the Log display to the Master Display. In this way, the alert tone can be turned on if the log is empty. This option generates a beep tone whenever an entry is written to the log. When activated, *Alert Tone* blinks. The blinking number of Log Entries has been made nonblinking. *Scheduled* (sites) blinks until all site selection criteria have been loaded. Operation Table information is only displayed after the date and time if one of the Partitions is using Operation Tables.

A *Freeze Failures* option is added. When activated, it blinks. A password is required for activation. If turned on, the next failure on any port is frozen; Display One for the affected port is automatically performed; and all test processing stops until the operator releases the test with a {Space}. While a test call is frozen, a beep tone is generated every 10 seconds. This option permits the user to catch all failures in real time if at the console. Another use is to actually hold the telephone circuit up until a call trace can be performed to ascertain the cause of the trouble. In order for this to be done, the test Dialing Registers must be split into a main and a Next Register so that upon departure from the test register, the circuit is not knocked down prior to the failure display. It is also necessary to address the call timer (02dd command) and session timeouts for RTS-1 sites.

Log Times

Time is recorded in the Log file to one second resolution (previously it was two second resolution). The time recorded is that of the clock at the time the test register is exited. Times logged are that of the Dos clock by default.

An option is provided to use the hardware real-time clock as the source of the date and time fields in the log file. To enable this option, use the Dos Set command in the file *Menu.Bat*, by including: *Set Clock=HW*; any setting other than HW logs time according to the software Dos clock. The hardware option can only be activated on 286 and higher processors. This hardware clock setting affects the date/time stored in the log file; all other timing activity is driven from the Dos clock.

The hardware clock option is provided for the situation where the Dos clock drifts from the actual time. Upon booting, Dos reads the hardware clock and initializes its internal (software) clock. Multi-tasking and other environments can cause the Dos clock to lose time after boots.

New Log Codes

Three new log codes are provided: 131-133. Log code 132 *Gave Up on Site* is discussed in section 10.6. Code 131 *RTS-1 Session Timed Out* can only be generated with RTS-1 firmware version 2.2. If the RTS-1 session times out while *ARONTS is listening for the milliwatt (W*) or Manual DTMF code (W#T)*, ARONTS detects the DTMF D sent by the RTS-1 prior to hanging up, and logs the call accordingly. The site is automatically recalled, and the test call repeated. If the session timeout occurs at any other time, a communications problem between ARONTS and the RTS-1 is detected, ARONTS attempts to regain control of the RTS-1, and when unsuccessful, recalls the site, and the test call is repeated. This situation creates Logcode 112, not 131.

RTS-1 sites which have defective outgoing test lines can cause tests to fail in various ways. If the W# or WC commands are used in the test register to cause ARONTS to listen for the RTS-1 redialing the Test Number, and there is no telephone line or dialtone on the specified line, the RTS-1 sends back the error digit and cancels the test. This causes a secondary dialing failure because the W# or WC command is not satisfied, and log code 112 is generated. ARONTS tries the test again. When *Access Tries* (section 10.6) successive failures of this type occur, the test call is abandoned, and log code 133 *Gave Up on Test* is recorded.

Log Code Clarification

The *Test Number* field for Logcodes 97 *Recalled Site*, 98 *Calling Site, Specific Test*, 99 *Calling Site*, 105 *No Response from HotShoe*, and 109 *No Response from RTS* show the successive number of access attempts. A Test Number itself has no meaning for these codes. If *Access Tries* is set to 3 (section 10.6), the typical sequence is Logcode 109 with 1 Access Attempt, Logcode 109 with 2 Access Attempts, Logcode 109 with 3 Access Attempts, and finally Logcode 126 *Unable to Access Site*.

Logcodes which provide a *DF x* number indicate that the x^{th} *W* command in the Dialing Register failed (timed out). For Access Registers, if the first *W* command fails, it is assumed that there is no local ARONTS dialtone, and leads to Logcodes 104 *Local line lost dialtone, Hot Shoe Call*, and 108 *Local line lost dialtone, RTS Call*.

Logcodes 107 and 111 *Unable to read RTS info* refer to ARONTS polling the RTS's internal Test Mode and Program accesses, Failures, and Answers. This is performed when *Collecting RTS Info* is selected from System Setup (section 6.4.1). The second code appears if a timeout occurs. If a timeout (dialing failure) occurs while accessing an RTS, Logcode 110 *Improper RTS access response* results. If garbled information is received, but no timeout occurs, Logcode 117 *Improper billing code field* is recorded.

Logcode 122 *Invalid Dialing Register* is obvious except for the case when the register itself is apparently not invalid. This most commonly occurs in Access Registers when the Test or Program code is specified, but the Site Information does not have the Test or Program code stored.

Logcodes 113-115, and 128 refer to a disconnect being received at the ARONTS telephone line at various stages in the test process. This should not occur unless the remote site hangs up on ARONTS.

If transmission quality between ARONTS and RTS sites is imperfect, it is possible to obtain Logcode 116 *RTS call with premature DTMF*. This indicates that DTMF digits were received while listening for milliwatt, but the digits were received less than one second after dialing. The cause of this is that while ARONTS is counting DTMF digits which the RTS is redialing (with the *W#* command), a single DTMF digit is broken up into two or more by a momentary dropout in transmission, excessive distortion, or an excessive noise hit. The result is that the *W#* command exits prior to actual completion of RTS redialing; and the *W** command encounters the last few digits of the RTS redial sequence, recording the DTMF being received prematurely. If this is more than a rare occurrence, an *S* one second pause after the *W#* and before the *W** should provide sufficient dead time to mask several DTMF digits. If this is done, the wait time measurements will artificially be one second shorter than the actual value.

During an RTS test call, a dialing failure (timeout) other than the third *W* command (nominally the one used to detect test call progress) results in Logcode 112 *Lost RTS test call*. Depending upon where the timeout occurred, the actual test completion may or may not have been recorded. For example, the first *W* command is generally used for ARONTS to listen to the RTS redial the test number. If a line transmission dropout occurs (a similar, but opposite

problem to Logcode 116 described above), an insufficient number of digits may be detected by ARONTS if the *W#* command is used for such monitoring. In this case, it is not known if the test call was placed properly but not received correctly by ARONTS, or if there was a dropout during the ARONTS command to the RTS providing the test number. Logcode 112 is recorded and the test call repeated. If this occurs more than rarely, two methods can be used to limit its occurrence. Commanding the RTS to dial the actual desired telephone number appended with DTMF *A*, and having ARONTS listen for a single DTMF *A* reduces the probability to that of a dropout during the one digit *A*, which is much less than a dropout during any of the digits. For situations where the fourth column DTMF digit confuses the CO, an alternate correction is to listen for fewer than the number of digits expected, and placing an *S* one second pause after it to prevent Logcode 116 resulting (see above).

It is also possible for a timeout to occur during an RTS test call *after the actual test has been completed*, during the process when ARONTS is communicating with the RTS. In this situation, the test call has already been logged correctly, and Logcode 112 follows. ARONTS automatically goes into a recovery mode to regain control of the RTS, which is transparent to the user. In general, Logcode 112 simply points out that there has been some difficulty, but the test call is repeated if it is not properly recorded. Other than monitoring to improve test efficiency, the code can be ignored.

10.14 Test Number Import

The program LoadNums.Exe is provided to permit an external database to be used as a source of Test Numbers. LoadNums is used to read an input file to modify TestNums.Dat and its versions. It creates an output error file which can be used to check valid inputs. Usage is as follows:

```
LoadNums < inputfile > errorfile
```

Standard MS-Dos input and output is used, so the program may be exercised with a simple LoadNums invocation. Doing so causes input to be directed from the keyboard, and the output errors go to the screen. When used with files, the input and error files are ASCII text files. Each line in the inputfile specifies one test number to be updated, a range of numbers to change multiple access status, change to a different file version, go into AutoFile mode, go into Auto-Numbering mode, or store the next Test Number in sequence. All parameters on the line are separated by one or more spaces.

```
TestNumber "New Number"
```

The TestNumber must be in the range 1 through the maximum number of test numbers specified in System Setup. The New Number must be 12 digits enclosed in double quotes. Domestic numbers have the first two digits as spaces, followed by the 10-digit telephone number. For example, " 4109361212" represents (410) 936-1212. International numbers must begin at the first spot and be filled with trailing spaces to make up a total of 12 digits. For example, "123456789 ".

```
0 1 FirstNumber LastNumber Multiple
```

The multiple-call status of the range of numbers specified by FirstNumber and LastNumber are modified by this command. Multiple access is permitted (a *) with Multiple=1, and Multiple access is not permitted (no *) with Multiple=0.

```
0 0 Version
```

This command changes the file acted upon from the default TestNums.Dat to TestNums.vvv, where vvv is a three-digit version number specified by Version. All subsequent commands take effect on that file unless AutoFile mode is activated. The file must first exist. Empty files can be created by exercising the *Zero* option for TestNums from the File Maintenance menu, going into Main Menu *Test Numbers* and exiting saving all changes, and copying TestNums.Dat to various TestNums.vvv files. After updating by LoadNums, these files are not archived and can be lost unless they are actively archived with the PAK command. Complete syntax for it is available by entering PAK /H from the command line. However, the command

```
Pak a TestNums TestNums.123 TestNums.129 ... TestNums.999
```

illustrates the way several new file versions can be placed into the archive.

```
0 2 Version
```

This command places LoadNums into *AutoFile* mode, starting with the stated version number. In this mode, *new* files are automatically created and archived. If more than the maximum number of Test Numbers are added, the starting file version is closed, and the next sequential version number is automatically created. Note: AutoFile mode *overwrites* any existing versions in the Test Numbers Archive!

```
0 3 FirstNumber Multiple
```

This command places LoadNums into *AutoNumbering* mode, starting with FirstNumber. Subsequent numbers loaded with the 0 4 command autoincrement the Test Number, and are stored with Multiple (1) or not (0) attributes. If Auto-File mode is already turned on, FirstNumber is ignored, and the command is used simply to set the multiple call status of subsequent 0 4 inputs.

```
0 4 "New Number"
```

This command stores the next Test Number when in AutoNumbering or AutoFile modes. The Test Number index is automatically incremented.

Example


The most automated procedure for Test Number import is to use AutoFile mode. This example creates three Test Number files, versions 101, 102, and 103, and places them into the Test Number Archive. Assume that the maximum Test Number is set to 9999, and that 25,000 Test Numbers are to be imported in a single operation. The input file is:

```
0 2 101                               Start AutoFile with ver. 101
0 3 1 1                               Store subsequent input with Multiple attribute
0 4 " 3012000001"                      Store Test Number 1 in ver. 101
0 4 " 3012000002"                      Store Test Number 2 in ver. 101
... ..
0 4 " 3012009999"                      Store Test Number 9999 in ver. 101
0 4 " 3012010001"                      Store Test Number 1 in ver. 102
0 4 " 3012010002"                      Store Test Number 2 in ver. 102
... ..
0 4 " 3012019999"                      Store Test Number 9999 in ver. 102
0 4 " 3012020001"                      Store Test Number 1 in ver. 103
0 4 " 3012020002"                      Store Test Number 2 in ver. 103
... ..
0 4 " 3012025002"                      Store Test Number 5002 in ver. 103
<End of File>
```


The second line is not needed unless the Multiple call attribute is to be set. The 0 4 command automatically assigns the next Test Number available in sequence and stores the specified number. When the file version is full (with the maximum Test Number stored), the next version number is created. This example creates two 9999 entry files, and one 5002 entry file.

10.15 [Failure] Log

Selecting *[Failure] Log* from the Main Menu (section 6.6.2) displays the following screen:

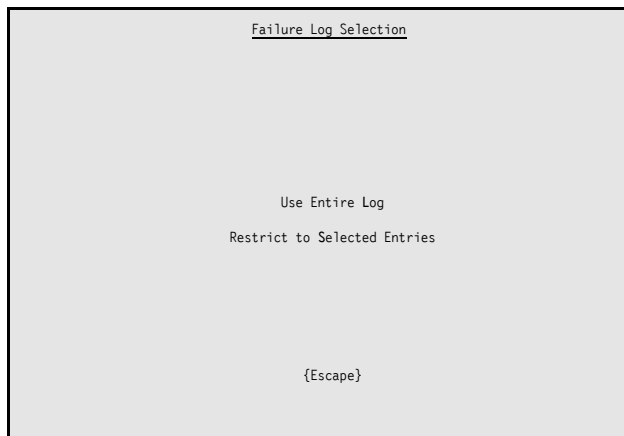

In addition to restricting the log by site types, other parameters may be used. Choosing *Restrict to Selected Entries* displays the following screen:

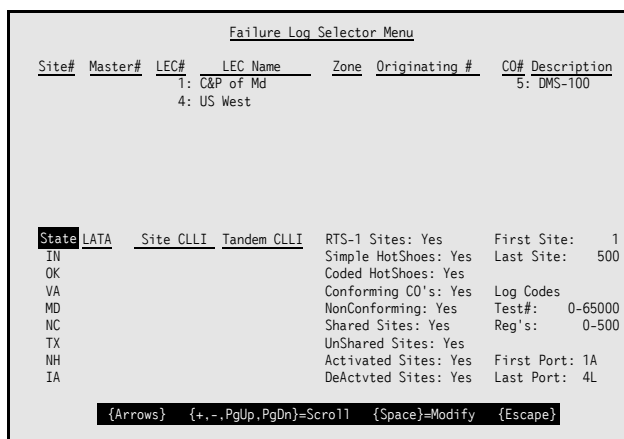

The bottom right of the screen offers log restrictions unrelated to the site types. Log codes are not displayed on this screen; modifying them (with the {Space} key) provides an entire screen, similar to Screen #22, showing which log codes are to be included in the log display.

Ranges of Test Numbers and Dialing Registers may be entered. Only log entries using these parameters are selected for display. Parameters for First and Last Port refer to the lines on ARONTS. This selection can be useful if Partitions are used (section 3.3) — upon completion of testing, separate log printouts can be made for each of the test Partitions.

The default setting for each of the selection fields is the most permissive; if nothing is entered, the result is the same as if the *Use Entire Log* option from the previous screen were utilized. After the desired fields are specified, {Escape} produces the log display. While displaying the log,

the *Clear* option has no effect if the *Restrict to Selected Entries* option was used to display the log; in order to clear the log, the *Use Entire Log* option must be used.

Escaping from the log display returns to the first screen if the *Restrict to Selected Entries* option was used to view the log. This permits an interactive log examination session.

10.16 Site Selector Menus

Various program options provide a common Site Selector Menu (screen #10, section 6.3.1). The maximum number of entries for each field is increased from eight to 24. Eight entries are displayed at a time; if any of the fields contain more than eight values, four additional keystroke options are provided. These scroll options are illustrated in the previous Failure Log Selector Menu example screen.

{+} scrolls the screen displays up to show higher numbered entries, one-by-one; {Page Down} scrolls the screen displays to show higher numbered entries "below" those currently displayed, in groups of eight; {-} scrolls the screen displays down to show lower numbered entries, one-by-one; and {Page Up} scrolls the screen displays to show lower numbered entries "above" those currently displayed, in groups of eight. These scroll options affect all of the fields which contain more than eight entries. The position of the highlighted field is irrelevant.

The presence of the scroll options indicates that there are "hidden" entries on the screen.

10.17 Conversion of Test Schedule Files

The Test Schedule file format of 5/96 is not compatible with previous software versions. Upon software installation, the Test Schedule must be initialized (Zero in File Maintenance), or converted. If it is not necessary to retain old Test Schedules, from the Dos prompt, enter:

```
Del TestSkd.Zip
```

To convert existing Test Schedules into the revised format, individually make each current, and from the Dos prompt, enter CvTstSkd. This changes the file TestSkd.Dat into the required form. The (converted) current Test Schedule can then be placed into the Test Schedule Archive under File Maintenance, overwriting if necessary. Repeat this process for all Test Schedules in the archive.

10.18 Computing Environment

Additional issues arise when ARONTS software is loaded onto non-supplied computers. This software revision is compatible with Ms-Dos 3.3, 5.0, and 6.0. Earlier releases were not directly compatible with the Dos Print command in versions later than 3.3. If Ms-Dos 6.0 is used, SetVer must be loaded, and the Backup50.Exe file copied or renamed to Backup.Exe. It should be verified that SetVer assigns Dos version 5.0 to Backup.Exe. This is the default as shipped by Microsoft. A sample Config.Sys and Autoexec.Bat are stored as Config.60 and AutoExec.60 in the \ARONTS directory. Similar versions are provided for Ms-Dos 3.3; a combination of the two should be used for Ms-Dos 5.0, depending upon individual configurations.

The AutoExec.Bat files included assume a standard 2400 bps modem present at Com2:. If the modem is not present, the Com2 parameter must be changed to ComX in Menu.Bat. It may be necessary to modify Speed.Bat if the result codes for the modem differ from the values included in that file. Additionally, the first line should be modified to go to the highest baud rate for the particular modem. If any special commands need to be issued upon initialization for a high speed modem, they should be inserted in AutoExec.Bat; a representative sample is supplied in the AutoExec.Hi file.

Memory

ARONTS software assumes a clean environment; if too many TSR's or drivers are loaded in low (conventional) memory, the software may not run, or be unable to execute the *List* menu options (which executes *Print* as a sub-process). The first choice is to free up conventional memory by placing drivers and TSR's in upper memory with Dos 5.0 and 6.0. If this is not possible, alternate versions of the programs are provided. The executables *.sm should be renamed to *.Exe after first renaming the originals as *.Big. The small executables cannot be used with more than 2500 sites or 5000 LEC's.

10.19 Version 6 Firmware

Tone and Master Controllers equipped with version 6.0 firmware offer additional commands. (4/97)

10.19.1 Additional Dialing Register Actions

Tone Controllers with version 6.0 firmware provide these Dialing Register actions in addition to those given in section 9.4.

Action = **P***

Initialize all gains to factory default. See Gain Table. This is only necessary if gains have been altered within a Dialing Register, and it is desired to restore them to the factory settings. The start of every Dialing Register implicitly initializes all gains to the current gain setting upon activation. This action *does not* alter the value of the current gain settings.

Action = **PWxxyy**

Set filter 1 detect threshold according to parameter xx; set filter 2 detect threshold according to parameter yy; see Gain Table. The W* commands use filter 2 to detect SIT and successful tones; filter 1 is used to detect busy, reorder, ringback, voice, and dialtone signals. Making these filters less sensitive increases rejection of unwanted signals; making these filters too sensitive can cause false positive detection due to spurious signals, or noise on the line.

Action = **PTxxyy**

Set transmit tone 1 level according to parameter xx; set transmit tone 2 level according to parameter yy; see Gain Table. Tone 1 is used for SIT and the low frequency DTMF and MF tones. Tone 2 is used for the high frequency DTMF and MF tones.

Action = **PQxxyy**

Set transmit tone 1 quiet level according to parameter xx; set transmit tone 2 quiet level according to parameter yy; see Gain Table. These levels are used to generate the local dialtone or ready tone in the W#P and W#D commands.

Action = **PDxxyy**

Set DTMF receive gain according to parameter xx; set auxiliary input transmit gain according to parameter yy; see Gain Table.

Action = **M*wwwxyyyz**

This is a restriction on the existing action. Permissible values for x and z are 0 and 2; the 1 option is eliminated. The transmit levels for tone 1 and tone 2 are set by parameters xx and yy in the PTxxyy action, respectively.

Action = **W**Vntdd**

Identical to W*ntdd, except for international cadences: double-ring ringback and reorder signals.

Action = Wpnzttxxyydd**

Similar to the W* action, except does not detect SIT tones and instead permits programmable successful tone detection frequency: wait up to tt seconds to receive tone lasting d.d or 0.0dd seconds, n DTMF digits, or m<n DTMF digits after an interdigital timeout of z seconds, or cadence outputs: busy, reorder, ringback, dialtone, voice. Filter 1 parameter xx should be centered on cadence frequency center of 480 Hz (75 for 35795 ratio, or 37 for 17898 ratio). Filter 2 parameter yy determines the successful tone frequency. Filter parameters xx and yy are either (17898/center frequency) or (35795/center frequency) according to option parameter p:

p	Cadence	Duration	Ratio
1	USA	d.d	17898
2	USA	d.d	35795
3	USA	0.0dd	17898
4	USA	0.0dd	35795
5	International	d.d	17898
6	International	d.d	35795
7	International	0.0dd	17898
8	International	0.0dd	35795

The tone duration 0.0dd must typically be set 20-30 ms longer than desired. Generate a dialing failure on a timeout. Result codes identical to W* action.

Action = WT*pttxxyydd

This action is a superset of the previous WT action, equivalent to WT*1tttxxyydd. Wait up to tt seconds for presence or absence of tone(s) lasting d.d or 0.0dd seconds. Filter 1 parameter xx and filter 2 parameter yy are either (17898/center frequency) or (35795/center frequency) according to option parameter p:

p	Look for	Duration	Ratio
1	Presence	d.d	17898
2	Presence	d.d	35795
3	Presence	0.0dd	17898
4	Presence	0.0dd	35795
5	Absence	d.d	17898
6	Absence	d.d	35795
7	Absence	0.0dd	17898
8	Absence	0.0dd	35795

For z = 1 or 2, look for filter z energy only; if z = B, look for both tones. The tone duration 0.0dd must typically be set 20-30 ms longer than desired. If successful and looking for tone presence, add 6#Tddd to the billing code field, ddd = tenth seconds elapsed. If unsuccessful, generate a dialing failure.

Action = W#Ptddd

Identical to W#Ttddd, except that a Precise dialtone (350 + 440 Hz) is transmitted as a prompt while waiting to receive the first DTMF digit. Transmit at the quiet level.

Action = W#Dttdd

Identical to W#Ttddd, except that a 400 Hz Dialtone is transmitted as a prompt while waiting to receive the first DTMF digit. Transmit at the quiet level.

Action = WVxxz

Set external audio input level according to xx; for z=1, activate the external Play output; for z=0, deactivate the external Play output. Used to transmit voice messages (Wait for Voice): a first WV action can set a nonzero level and turn on a message machine; a second WV action, after a delay, can set a zero level and turn a message machine off.

10.19.2 Additional External Communications Protocols

Master Controllers with version 6.0 firmware provide these commands in addition to those given in section 9.3.

Command: MBUFC

This command has been eliminated.

Command: SeLFTeST**Code: SLFTSTbb, SLFTST***

Response: return code from board bb

Function: perform a self-test command (04) on controller board address bb. If bb=00, then tests the Master Controller; the same as the previous SLFTST command. For SLFTST*, perform a self-test on all Tone Controllers. Restricted command.

The following commands must only be issued if *all* Tone Controllers have version 6 firmware:

Command: Analog Tone Controller Test**Code: ATCTSTbb, ATCTST***

Response: return code from board bb; 00 if OK

Function: perform an analog self-test on Tone Controller board address bb. For ATCTST*, perform the test on all Tone Controllers. Restricted command.

Command: INitalize all Gains**Code: ING***

Response: R

Function: Initialize all Tone Controller gains to factory settings. Equivalent to INGT2824, INGQ4240, INGW5656, INGD0099.

Command: INitalize Gains for Transmit**Code: INGTxxyy**

Response: R

Function: Initialize all Tone Controller tone 1 levels according to parameter xx, all tone 2 levels according to parameter yy. xx and yy = 00-99. See Gain Table. These override the factory settings and take effect at the beginning of all Dialing Registers.

Command: INitalize Gains for Quiet level**Code: INGQxxyy**

Response: R

Function: Initialize all Tone Controller tone 1 quiet levels according to parameter xx, all tone 2 quiet levels according

to parameter yy. xx and yy = 00-99. See Gain Table. These override the factory settings and take effect at the beginning of all Dialing Registers.

Command: INititalize Gains for W*

Code: **INGW**xyyy

Response: R

Function: Initialize all Tone Controller filter 1 detection thresholds according to parameter xx, all filter 2 detection thresholds according to parameter yy. xx and yy = 00-99. See Gain Table. These override the factory settings and take effect at the beginning of all Dialing Registers.

Command: INititalize Gains for Dtmf receive and external audio input

Code: **INGD**xyyy

Response: R

Function: Initialize all Tone Controller DTMF receiver amplifiers according to parameter xx, all external audio input gains according to parameter yy. xx and yy = 00-99. See Gain Table. These override the factory settings and take effect at the beginning of all Dialing Registers.

Command: COMunications TeST

Code: **COMTST**bb, **COMTST***

Response: 00 if all OK, else error code

Function: perform a communications test on controller board address bb. For COMTST*, perform a communications test on all Tone Controllers. Restricted command.

10.19.3 Additional Internal Communications Protocols

These Tone Controller commands are in addition to those in section 9.5.9.2

Mnemonic: ING

Command: Initialize Gains

Code: (2E)(pp)(xx)(yy)

Response: (ACK)

Function: Change a pair of default gains

pp=11 (ING*, P*) xxyy must be sent

pp=23 (INGWxyyy, PWxyyy)

pp=17 (INGTxyyy, PTxyyy)

pp=21 (INGQxyyy, PQxyyy)

pp=16 (INGDxyyy, PDxyyy)

xx, yy=00-99

Mnemonic: ATEST

Command: Analog Test

Code: (2F)

Response: (00), pass; (cc), fail

Function: Perform an analog self-test; takes approximately 20 seconds. If fails, send error code (cc) and leave the Tone Controller in the mode where the test failed for diagnostic purposes; it may be necessary to perform a reset to continue from that point.

10.19.4 Gain Table

All settings are for a 600 ohm termination. *Transmit* is the output level in dBm, used in the INGT and INGQ commands, and Dialing Register actions PT and PQ. *Filter* is the filter 1 and 2 detect threshold levels in dBm, used in the INGW command and Dialing Register action PW. *DTMF* is the gain in front of the DTMF receiver, in dB; at a gain of 0 dB the DTMF detection levels are nominally -29 to +1 dBm, each tone. *External* is the gain from the external audio input to the line, in dB.

xx,yy	Transmit	Filter	DTMF	External
00		-8	0	+12
01		-8.5	+0.5	+11.5
02		-9	+1	+11
03		-9.5	+1.5	+10.5
04		-10	+2	+10
05		-10.5	+2.5	+9.5
06		-11	+3	+9
07		-11.5	+3.5	+8.5
08		-12	+4	+8
09	+2.5	-12.5	+4.5	+7.5
10	+2	-13	+5	+7
11	+1.5	-13.5	+5.5	+6.5
12	+1	-14	+6	+6
13	+0.5	-14.5	+6.5	+5.5
14	0	-15	+7	+5
15	-0.5	-15.5	+7.5	+4.5
16	-1	-16	+8	+4
17	-1.5	-16.5	+8.5	+3.5
18	-2	-17	+9	+3
19	-2.5	-17.5	+9.5	+2.5
20	-3	-18	+10	+2
21	-3.5	-18.5	+10.5	+1.5
22	-4	-19	+11	+1
23	-4.5	-19.5	+11.5	+0.5
24	-5	-20	+12	0
25	-5.5	-20.5	+12.5	-0.5
26	-6	-21	+13	-1
27	-6.5	-21.5	+13.5	-1.5
28	-7	-22	+14	-2
29	-7.5	-22.5	+14.5	-2.5
30	-8	-23	+15	-3
31	-8.5	-23.5	+15.5	-3.5
32	-9	-24	+16	-4
33	-10	-25	+17	-5
34	-11	-26	+18	-6
35	-12	-27	+19	-7
36	-13	-28	+20	-8
37	-14	-29		-9
38	-15	-30		-10
39	-16	-31		-11
40	-17	-32		-12
41	-18	-33		-13
42	-19	-34		-14
43	-20	-35		-15
44	-21	-36		-16
45	-22	-37		-17
46	-23	-38		-18
47	-24	-39		-19
48	-25	-40		-20
49	-26	-41		-21
50	-27	-42		-22
51	-28	-43		-23
52	-29	-44		-24
53	-30	-45		-25
54	-31	-46		-26
55	-32	-47		-27
56	-33	-48		-28
57	-34	-49		-29
58	-35	-50		-30
59	-36	-51		-31
60	-37	-52		-32
61	-38	-53		-33
62	-39	-54		-34
63	-40	-55		-35
64	-41	-56		-36
65	-43	-58		-38
66	-45	-60		-40
67	-47	-62		-42
68	-49			-44
69	-51			-46
70	-53			-48
71	-55			-50
72	-57			-52
73	-59			-54
74	-61			-56
75	-63			-58
76	-65			-60
77	-67			-62
78	-69			-64
79	off			off
99	off			off

10.20 April 2005 Update Option

ARONTS systems equipped with this hardware and software feature option provide SNMP trap output and telnet remote access. An ethernet port with static address is required.

10.20.1 SNMP Trap Output

ARONTS can generate an SNMP Trap output to alert network monitoring stations of excessive Failure Log entries. From the *More* screen under *System Setup* several SNMP related options are provided:

SNMP Trap Logcodes: select which logcodes are to be counted towards the trigger level to generate an SNMP Trap message.

SNMP Trap Log Entry Trigger: sets the number of log entries specified in the previous option which are required to trigger an SNMP Trap message. Valid values are 1-65535.

SNMP Trap: can be set to *Enabled* or *Disabled*.

If ARONTS is equipped for this feature, and the *SNMP Trap* setting is enabled, then when *new* log entries with logcodes matching the *SNMP Trap Logcodes* setting reach the number set by the *SNMP Trap Log Entry Trigger* parameter, ARONTS generates a single SNMP Trap message. The count is cleared upon entering the testing operation, whether via the Main Menu *Test Sites*, *Resume Testing*, or *Run Job Queue* method. While testing is in progress, the MASTER DISPLAY screen shows the current count at the bottom right of the screen under *Log Entries*. The field displays *x/y*, where *x* is the number of matching SNMP Trap Logcodes added to the Failure Log during this run; and *y* is the number of total entries in the Failure Log (not the number generated during this run). The *y* value is identical to that displayed if the SNMP Trap option is not present or activated.

The SNMP Trap message is sent to the IP address specified in the ethernet setup screens. It can be modified by using a web browser pointed to the ARONTS ethernet IP address. Logging in as *admin* with its associated password provides access to the appropriate parameter screens.

After receiving an SNMP Trap message at the monitoring station, the user may wish to initiate a telnet session to gain remote control of ARONTS and inspect the Failure Log to determine the best course of action.

10.20.2 Telnet Remote Access

The *More* screen under *System Setup* provides a setting *Telnet Access*, which can either be *Enabled* or *Disabled*. If ARONTS is so equipped, and telnet access is enabled, then the ARONTS menu system can be reached via a telnet operation. The remote system must use TCP access to the ARONTS ethernet IP address specifying **Port 7001**. The

terminal emulator program should be set for ANSI mode. A suitable program is Hyperterminal. TCP (Telnet) access operates in the same manner as remote modem access described in section 5.3. Of particular note is the special character table shown in that section. The terminal emulator program may be set up to map these keys automatically, or at a minimum the user must remember to use *control A* for any menu screen *Escape* key action.

The *Main Menu*, *Run Job Queue*, and *Tester Program* all provide an option to kill the remote telnet session: these should be used to gently exit remote access and restore control to the local operator. However, disconnecting the TCP session without using these menu options *while in those three applications only* automatically restores local operation. Should a session be inadvertently disconnected when not in those three applications, the user should reconnect, proceed to one of those screens, and exit to restore local control.

If remote access is in progress via modem, then remote telnet operation is inhibited; if remote access is in progress via telnet/TCP, then remote modem operation is inhibited.

10.21 June 2006 Update

This ARONTS software-only update addresses Originating Numbers, RTS-2 sites, and Expected Timeouts.

10.21.1 Installation

It is safest to first duplicate the files in the ARONTS directory to another directory. (Mkdir \ARONTS1; xcopy *.* \ARONTS1 /s from the ARONTS directory.) Updates from previous ARONTS software requires the Sites.dat file to be converted into a newer format. To perform the conversion, from the Dos prompt in the ARONTS directory, execute the CvtSites command. It automatically backs up the previous file (to OldSites.dat). Once this is done, the new software version must be used.

10.21.2 Originating Numbers

Previous software had requirements making the Originating Numbers for RTS-1 ports dependent upon one another; each port could not be identified with an independent number. This linkage is eliminated; each of the eight ports can have any number associated with it no matter what is assigned to the other seven ports.

The capability of identifying RTS-1 sites (under Site Information) as one or two modules, corresponding to 8 or 16 ports, is eliminated. (The 8/16 option described in section 6.3.1 is gone, as is the Originating Number linkage). The ports previously identified as 11-18 and 21-28 are now identified simply as 1-8. Accordingly, when identifying the *Out Line* in Dialing Registers (section 6.4.5), the single digits 1 through 8 are used. Dialing Registers containing 11-18 from previous files are interpreted as outlines 1-8 to provide backwards compatibility.

o1-o8 Dialing Register Commands

A new Substitution Dialing Register command (section 7.3.1) is provided, which is 3-characters long: **o1x** through **o8x**. The lower-case "o" refers to an Originating Number. The second character, 1 through 8, references the Originating Number for that RTS-1 or RTS-2 line. The trailing **x** is 0-9 or * as described in section 7.3.1 to specify the number of digits.

This command makes it easier to construct Dialing Registers which use one RTS-1 or RTS-2 line to call another of its lines; the same register can be used across all sites, and it is not necessary to duplicate Originating Numbers as Test Numbers. One example to employ the command is to use line #2, for instance, to leave voicemail for line #3 with **o3***; subsequently, the voicemail can be retrieved directly from line #3. As always, it is still necessary to specify one Test Number in the Test Definition even though it is unused.

Originating Number Checks in Tester

As described in sections 3.4 and 3.9, it is possible for sites on ARONTS ports to specify Test Numbers which are currently in use at other sites connected to other ARONTS ports. If those Test Numbers are not marked for Multiple Calls, those tests are skipped for partitions using Operation Tables, and the order rearranged or Paused for partitions Routining. As clarification, this check is done using the Test Number *number*; i.e. Test Number 10 is checked against any other ports which might be using Test Number 10. The actual telephone number stored as Test Number 10 is not compared.

This software version additionally checks the actual telephone number of the Test Number against all Originating Numbers stored for all sites currently being accessed by ARONTS. This primarily comes into play when an RTS-2 line is used as a *responder*; as shipped, the third line on RTS-2's is programmed for this behavior. The RTS-2 responder function permits in-house RTS-2's to be used as milliwatt Test Numbers without reliance on Telco milliwatts. However, the RTS-2 responder function can only be used if the unit is not already in use. The software feature discussed here prevents attempting to use such Test Numbers when the destination RTS-2 which provides the responder line is already in use on another ARONTS port. With Routining, care must be taken not to create "lock-up" situations where two RTS-2's are being accessed by ARONTS and the Test Definition for each is configured to call the other's responder line: in such a case, they both will Pause indefinitely.

10.21.3 RTS-2 Sites

The RTS-2 Test commands are a superset of the RTS-1 command set, and therefore they can be accessed as if they were RTS-1's. This software version offers a separate RTS-2 Site type (under Site Information). Both the RTS-1 and RTS-2 provide internal peg counts: commands 62-65 for Test Mode accesses, Program Mode accesses, access Failures, and access Answers. The RTS-2 additionally provides a cumulative count of active Minutes (command 66) and a Unit ID number (command 60).

ARONTS automatically polls sites marked as RTS-1 and collects the 62-65 data (if enabled under System Setup). This works whether the sites are actually RTS-1's or RTS-2's. With this software version, ARONTS also collects the 66 and 60 information from sites marked as RTS-2's. No changes are necessary in the ARONTS environment other than changing the site type to RTS-2 to retrieve that data. The most recent values collected are shown in the Analysis (Data) displays and listings as well as the Display Details option in the Failure Log and the Display One screen while testing.

For backward compatibility, the default RTS-2 setting uses "Short" counts: the 62-66 data is sent in 3-digit format

(which is all the RTS-1 provides). However, the RTS-2 actually maintains these counts in 6-digit form. By default, ARONTS polls RTS-2's for 3-digit counts. If the RTS-2 is configured *not* to use Short counts, it responds to commands 62-66 with six digits (parameter 03, nominally reprogrammed with 9403062). If the RTS-2 is placed into this mode, it must *not* be marked as an RTS-1 site; additionally, under System Setup/More the new option *Collect 6-digits of data from RTS-2's* must be set to *Yes*. ARONTS then retrieves all of the data in 6-digit format. With ARONTS configured this way, if the RTS-2 *is* set for Short counts, this is detected and it falls back to collecting the information in 3-digit mode (but it adds several seconds to the retrieval process to detect the mismatch).

To summarize, it is preferable to mark RTS-2 sites as RTS-2 sites (rather than RTS-1 sites) under Site Information; and if they are programmed not to utilize Short counts, enable 6-digit collection in System Setup. The displays and reports automatically reflect whatever is retrieved.

10.21.4 Expect Timeout

Under certain test scenarios it is expected that a Dialing Register *should* timeout. An example is the detection of a "stuttered" dialtone indicating a message waiting. This software version offers an additional Dialing Register *Expect* field option: *Timeout*. Registers marked to expect timeouts are logged as Successful (logcode 100) if they do timeout. The log line shows *Passed (Timeout as Expected, DFx)* indicating that the xth W action timed out.

When a Dialing Register marked to expect a timeout does not timeout it is logged with a new code: *134 Didn't time out as expected*.

As always, in order to achieve a correct Failure Log display and listing the Dialing Registers (and Test Numbers) must not be altered between the test run and executing the (Main Menu) Failure Log.

10.22 June 2007 Update

This ARONTS update addresses running the software under Windows XP and extended SNMP trap generation and monitoring.

10.22.1 Hardware

A PC running Windows XP with a serial port (COM1 or COM2) for connection to the Test Module is required. An ethernet connection to a LAN is necessary for Remote Access, shared output monitoring, and SNMP trap creation. A floppy disk drive makes it more convenient to transfer files from a predecessor ARONTS computer. For backwards compatibility the software can run in a Dos-only environment; however, the extended SNMP trap generation and monitoring features are not then available.

10.22.2 Installation

Open C:\Windows\System32\Config.nt. After the line: `device=%SystemRoot%\system32\himem.sys` add a new line: `device=%SystemRoot%\system32\ansi.sys` and save.

Create an ARONTS user account with limited or administrative privileges. If remote access is to be utilized a password is required (aronts).

With Windows Explorer, create a C:\ARONTS folder. Extract prog6-07.zip to the ARONTS folder. If data files are not to be transferred from another ARONTS computer, extract data_500.zip to the ARONTS folder as well. Create a Report folder in C:\ARONTS. If the Test Module is not attached to the computer's COM1 port, edit Menu.bat and change `Set TELCRO=COM1` to `Set TELCRO=COM2`.

Right-drag Menu.bat to the desktop and create a shortcut; rename it ARONTS. Double-click the ARONTS icon to bring up the ARONTS software window. Right-click its title bar and set its properties for the largest font size which results in a suitable display; save the changes to the desktop shortcut. (Alt-Enter often toggles the display window between normal and full screen modes, but full screen mode cannot be used when accessing via Remote Desktop.) Right-drag the ARONTS desktop icon to C:\Documents and Settings\ARONTS\Start Menu\Programs\Startup and create a shortcut. If SNMP traps are to be generated, right-drag Startrap.bat in C:\ARONTS to C:\Documents and Settings\ARONTS\Start Menu\Programs\Startup and create a shortcut (rename it Startrap). When running, this window may be minimized but must not be closed.

To transfer files from another ARONTS computer: Go to File Maintenance and Archive each of the six file Current Versions into their respective zip archives. Note the Current Version numbers. Select Backup/Retrieve and Backup everything to a floppy disk except programs

(statistics and log file may be omitted if desired). Put the floppy disk in the new computer and go to File Maintenance. Select Backup/Retrieve and Retrieve the same files. Escape to the first File Maintenance screen and Retrieve the Current Version numbers from the six archives.

From the ARONTS Main Menu, select Custom Menu and Initialize SNMP Data.

While logged on with Administrative privileges: Right-click the C:\ARONTS\Report folder, select Sharing, and check *Share this folder on the network*. Also check *Allow network users to change my files* to permit remote users to delete used print files. Select Control Panel, System, the Remote tab, and under Remote Desktop check *Allow users to connect remotely to this computer*. Select Remote Users and Add ARONTS as an authorized remote desktop accessor. Install the net-snmpp-5.4.0-1.win32.exe program (only required for SNMP trap generation). Only the Base Components and Standard agents boxes need be checked.

Edit TestTrap.bat in C:\ARONTS and change 1.1.1.2 to the desired SNMP Trap receiver's IP address. Double-click TestTrap.bat and verify that the *ARONTS Test Message* is received.

10.22.3 Rawdata Path

The default Rawdata path is C:\ARONTS\Report to permit LAN access to Rawdata.txt as it is updated. The path can be changed by altering the suitable line in Menu.bat.

10.22.4 Print Options

Under the previous Dos-only environment, when any List command is given, the file Printer.txt is created in the C:\ARONTS folder. Next, the local printer's status is checked and if it is online at that instant, Printer.txt is automatically spooled for printing (second paragraph in Chapter 6). (To maintain this operation on a Dos-only system, delete PrintChk.dat from C:\ARONTS.)

List commands continue to operate by first creating Printer.txt. One of two things next occurs, depending upon the setting chosen under Custom Menu *Autoprint*: if Never is picked, the newly created Printer.txt is copied to the C:\ARONTS\Report (shared) folder with a new name of PrintXXX.txt – where XXX spans the range 000-999. The first serial number not found is used for the new file. In this manner, if Remote Desktop is used to control the ARONTS computer, and a List option is performed, the remote user has immediate access to the print file through the network. After copying or printing, the user should delete the PrintXXX.txt file for simplicity in identifying new print files.

If Autoprint Always is picked, Printer.txt is automatically spooled to the system printer. A serialized print copy is not created in the Report folder.

Under the Windows environment, the Main Menu *Terminate Print Job* option is not used; instead, the built-in Windows local printer folder is best utilized for printer control.

Standard ARONTS List options presume a fixed width font with 80 characters per line. Loading PrintXXX.txt into Notepad for printing suffices. Wide list options assume a 132 character per line capability. It is best to open PrintXXX.txt in Word, Wordpad, or other word processing program in order to set a small fixed font size, landscape printing, or both prior to printing.

10.22.5 SNMP Trap Output

SNMP traps are generated in a different manner than described in section 10.20.1. Traps are handled independently for each site and provide information about the event. Up to 20 Dialing Registers are marked as potentially initiating a trap. Each of these registers is designated with a streak number required to send a trap. Ordinarily this refers to a cumulative number of failures (of any type) for that register at that site without any intervening successes (passes). To define these "trap" registers, Custom Menu option *Edit SNMP Registers* is used (it simply edits the text file SNMPRegs.dat). Beginning at the third line in the file, up to 20 lines can be included with information on 20 Dialing Registers. The first number is the Dialing Register number. A streak number is specified next: negative for failures and positive for successes. Typically this is a negative number. This sets the threshold of cumulative failures (or successes) for when a trap is to be generated. This streak is handled separately for each site: i.e., if -5 is chosen, this requires five successive failures for this Dialing Register on a particular site; successes with this register at another site take no effect.

After the streak specification, a textual description is provided. Only the first 20 characters are used. This description is included in the generated SNMP trap message.

Replace the sample third line with actual information. To verify the interpretation of SNMPRegs.dat, after saving and closing Notepad select Custom Menu option *View SNMP Registers*.

If (for some reason) a positive streak is specified for an SNMP register, a single trap message is generated when that streak of successes is reached; no further traps will be generated for that site/register (until *Initialize SNMP Data* is executed, or a failure occurs which resets the successful streak). If a negative streak (cumulative failures) is specified, a single trap message is generated when that streak of failures is reached. Additional failures without an interven-

ing success do not create more traps. Once a trap has gone out for a failure streak, the next success for that site/register generates a single trap message indicating success (the problem has cleared). Once a success resets the failure streak count, another streak of failures can again create a failure trap message.

The trap message is a Generic Trap (6) with a Specific Trap Code of the site number. The textual description attached is of the form:

```
10: White Marsh, MD Failed Reg 10 (no  
MWI after 30 sec) 5 times 06/10/07  
20:05:11
```

The site number is listed first (the same as the Specific Trap Code) followed by the first Notes line from Site Information (trailing spaces are omitted). Either *Failed* or *Passed* follows. The Dialing Register number and SNMPRegs.dat description are shown next. The streak threshold is shown (or 1 for a pass after a previous failure streak generated a trap). The date and time are appended to the message content.

The streaks used to determine if a trap message is to be generated are persistent; i.e., stopping a test session and starting a new one retains the previous streak count (as well as the cumulative passed and failed counts depicted in TrapStats.htm).

Depending on the system, it can take a number of seconds to actually complete the SNMP trap message generation. It is presumed that the test environment is set up in such a way that voluminous quantities of traps are not typically sent, which would significantly slow down all ARONTS test processing.

With SNMP Trap Enabled in Setup/More, when testing is in progress the MASTER DISPLAY screen shows the Log Entry count as x/y as described in section 10.20.1. However, x represents log entries using Dialing Registers listed in SNMPRegs.dat which were added in the current test run. The y value continues to show the total number of entries in the log file.

Configuring SNMP Data

The first line in SNMPRegs.dat defines the SNMP trap message. When editing it, change 1.1.1.2 to the IP address of the trap receiver as tested in section 10.22.2. For a different MIB manufacturer code, replace 1.3.6.1.4.1 as desired. The ~ character represents the site number, and is used for the Specific Trap Code; if a single Specific Trap Code is desired for all sites, replace ~ with the desired Specific Trap Code. If a different MIB category is desired for the description, change 1.3.6.1.2.1.1.1 to another value. The | character represents the pre-built trap textual message content. When making changes in this line, it is useful to first test them with TestTrap.bat by changing that file.

Viewing Trap Generation Status

In addition to traps received at the network SNMP monitoring station, LAN users can access status files in the shared Report folder. `Traps.htm` contains a list of all traps generated: each line is the textual description sent with the trap (failures depicted in red). Double-clicking should display the file in the default web browser. The file continuously appends as traps are generated. An incomplete last line may appear as the shared file is accessed, but the information is at most one minute late.

`TrapStat.htm` shows the cumulative passed and failed counts, and current streak statuses for the SNMP Dialing Registers for each site. The streak is noted as passed or failed. The site number and description, and SNMP Dialing Register description are the same as for the trap messages. The date/time shown indicates the last time this site/register encountered action. Failure streaks are depicted in red. Double-clicking should display the file in the default web browser. This file is updated once per minute.

Counts in `TrapStat.htm` are cleared, and entries in `Traps.htm` are deleted with the Custom Menu *Initialize SNMP Data* option.

10.22.6 Remote Access

Under Windows XP, remote modem and telnet access built into the ARONTS software is not used. Instead, the Windows application Remote Desktop is employed. The client computer specifies the ARONTS computer information along with the ARONTS user and associated password. When a remote control session has ended, the user should end the Remote Desktop session to permit others to gain control.


It should be noted that it is not necessary for a remote user to activate Remote Desktop merely to monitor the running status; the shared Reports folder available over the LAN permits inspection of the `Rawdata.txt` (if that is even required with the inclusion of the other files), `Traps.htm`, and `TrapStat.htm` files.

10.22.7 File Maintenance

While the Backup/Retrieve features provided under Main Menu item *File Maintenance* may still be used with floppy disks, in the Windows environment it is simple to drag the entire `C:\ARONTS` folder to backup media such as flash drives. However, the File Maintenance options to store different versions of the various data files into the six archives can still be used to advantage for maintaining multiple files for differing test scenarios.

Install/uninstall options are not required for the ARONTS software proper; copying and deleting the `C:\ARONTS` folder suffices. The general setup requirements addressed in section 10.22.2 are applicable.

Testing Flow Diagram

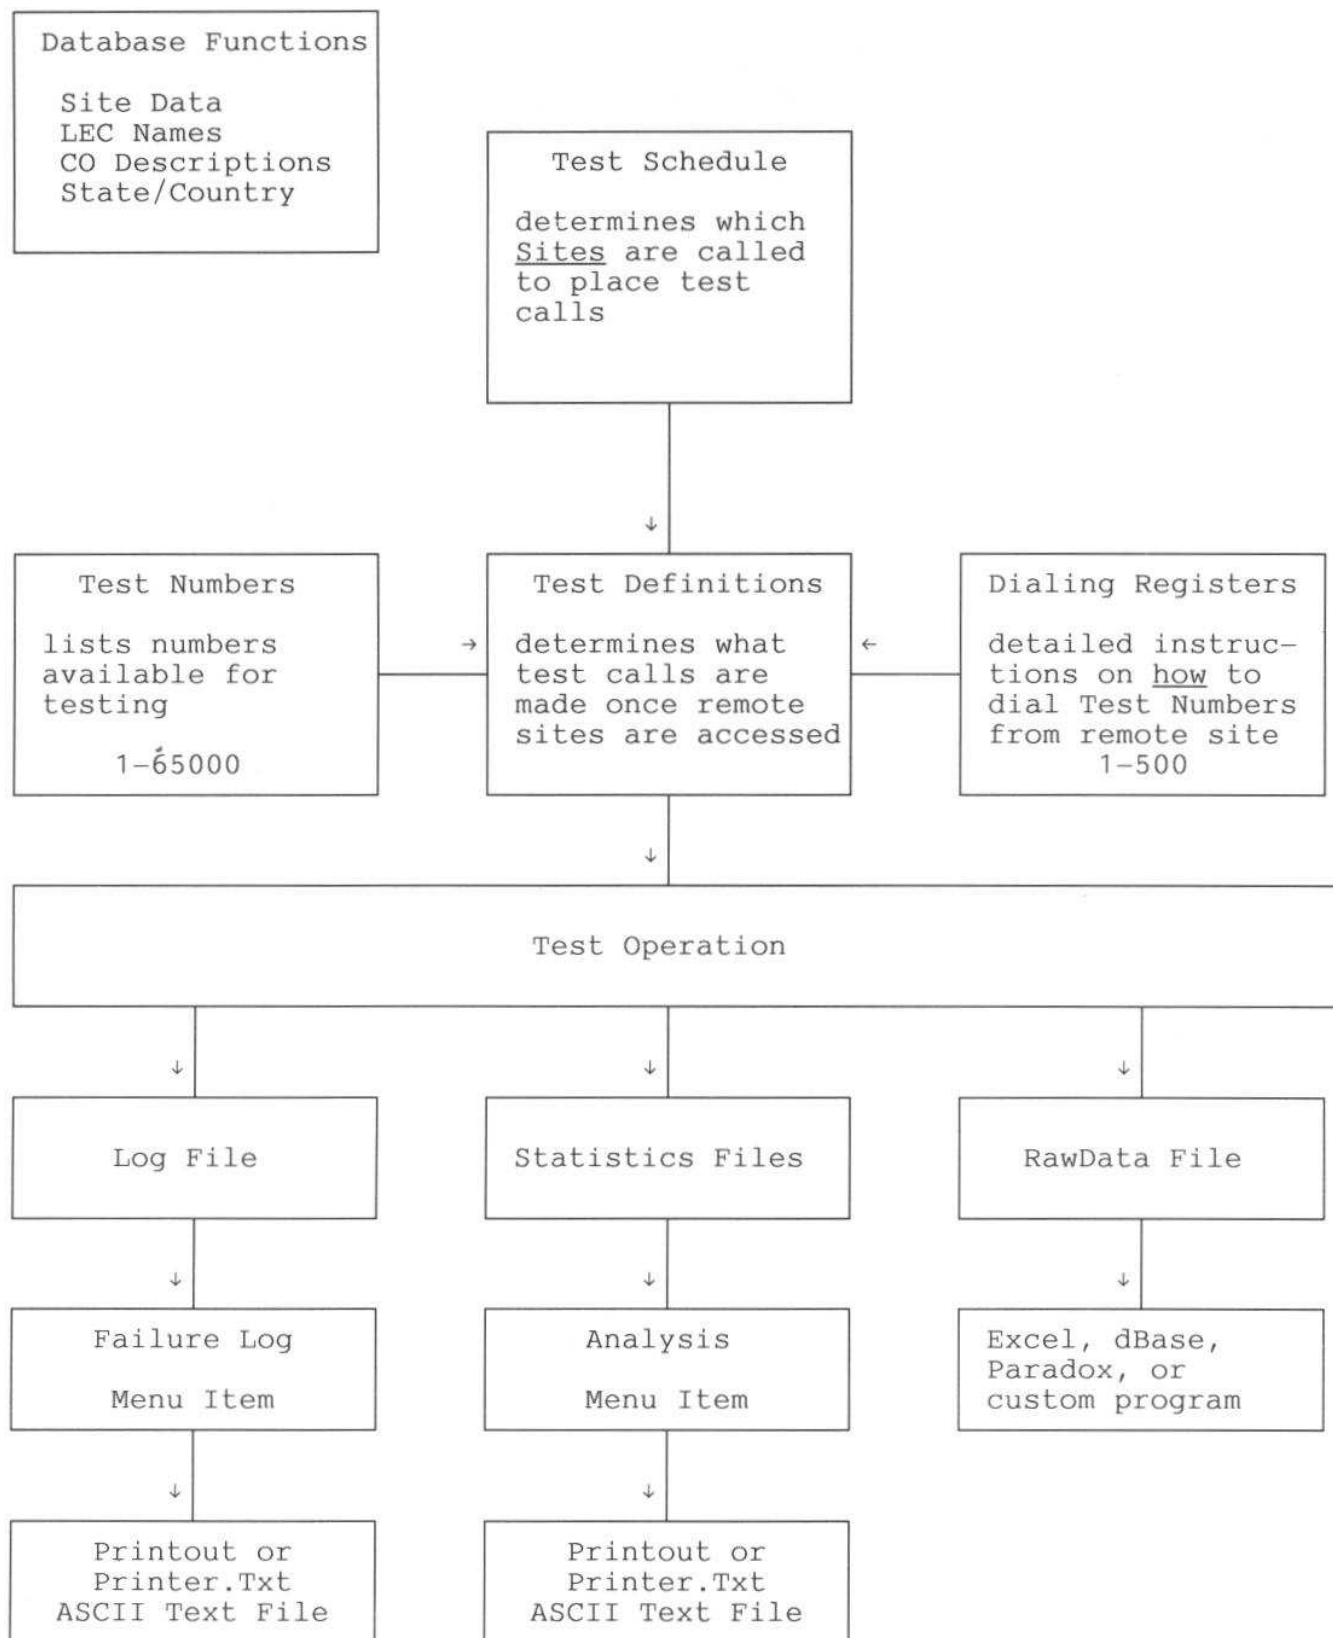

ARONTS Dip Switch settings

A switch setting of 0 is marked CLOSED, ON, or with a line (—); a switch setting of 1 is marked OPEN, OFF, or with no line.

.....

Master Controller Dip Switch settings

Switch
7654321
0001110 (search all)
0000110 (quick)

.....

Coupler Controller Dip Switch settings

Switch
7654321
0000000 Coupler Controller A (AR12, 24)
0000001 Coupler Controller B (AR36, 48)

.....

Tone Controller Dip Switch settings

Card	Switch <u>87654321</u>	Card	Switch <u>87654321</u>	Card	Switch <u>87654321</u>	Card	Switch <u>87654321</u>
1A	11000001	2A	11001101	3A	11011001	4A	11100101
1B	11000010	2B	11001110	3B	11011010	4B	11100110
1C	11000011	2C	11001111	3C	11011011	4C	11100111
1D	11000100	2D	11010000	3D	11011100	4D	11101000
1E	11000101	2E	11010001	3E	11011101	4E	11101001
1F	11000110	2F	11010010	3F	11011110	4F	11101010
1G	11000111	2G	11010011	3G	11011111	4G	11101011
1H	11001000	2H	11010100	3H	11100000	4H	11101100
1I	11001001	2I	11010101	3I	11100001	4I	11101101
1J	11001010	2J	11010110	3J	11100010	4J	11101110
1K	11001011	2K	11010111	3K	11100011	4K	11101111
1L	11001100	2L	11011000	3L	11100100	4L	11110000

ARONTS FAQ's

What are some examples of Dialing Registers used for test calls?

Test Dialing Register Examples

1. RTS redialing 1 + 10 digits with absolute comparison
2. RTS redialing 1 + 10 digits without comparison
3. RTS redialing with access codes
4. RTS credit card call
5. RTS redialing with access codes requiring secondary dialtone
6. Measure the time it takes for the Central Office to return local dialtone
7. Generate test calls of specific durations in order to perform billing verification.
8. Measuring the response time for voice response systems.
9. ARONTS reprogramming RTS-1 and RTS-2 *Test* and *Program* codes.
10. ARONTS making RTS-2 level measurements.
11. Retrieving RTS-2 firmware versions.
12. Retrieving RTS-2 unit ID numbers.

1. RTS redialing 1 + 10 digits with absolute comparison:

```
Q 32 1n* # WC10 1n* E WB W*4560 WQ30 ##### WE03 W0
```

Spaces in the Dialing Register have no effect and are used merely to aid understanding. The Q at the start of the Dialing Register pauses one quarter second. The sequence 32 1n* # commands the RTS to slow DTMF redial whatever is between the 32 and the #. In this example, these digits are specified as 1n*; the 1 means literally dial DTMF digit 1; n* means dial all digits of the Test Number (which is assumed in this case to be a ten digit number). After receiving this command from ARONTS, the RTS takes line 2 off-hook (from the 32 command), waits for loop current, waits for dialtone, and redials the specified 11 DTMF digits at a rate of 5 digits per second. The redialing takes 2.2 seconds, plus one or two seconds to receive dialtone, so this process requires about four or five seconds.

The next Dialing Register sequence, WC10 1n* E, causes ARONTS to listen for the RTS redialing the requested number. WC10 causes ARONTS to listen up to ten seconds for whatever code precedes the ending E. In this case, the code is 1n*, which is the same DTMF digit 1 plus the ten DTMF digit Test Number. The same digit stream must be specified between the WC10 and the E as between the preceding 32 and the #. The first sequence instructs the RTS what it should dial, and the second tells ARONTS what it should wait for the RTS to redial.

The purpose of using the WC command in this example is to make certain that the specified test call is properly dialed before the result of the test call is counted as valid. Once the Dialing Register successfully goes past this point, ARONTS has verified that the requested test call has actually been placed at the remote site. Therefore, whatever happens subsequently is a real success or failure of the network under test. If the WC code fails, ARONTS will retry the test call. If the network quality between ARONTS and the RTS is such that dropouts occur, it is possible that the RTS will properly and accurately redial the DTMF digits, but ARONTS does not hear the process perfectly; perhaps a dropout occurs which causes a missed digit, or breaks a single digit into two; so the result is that the test call is ignored and repeated unnecessarily. On the other hand, if a network dropout occurs while ARONTS is sending the 32 command, it is possible for the RTS to receive an incorrect digit stream, and perfectly redial a wrong number. However, the WC command will fail and the test repeated.

WB is always used to clear the results field. W*4560 is used in this example to have ARONTS look for the 1004 Hz milliwatt tone, while also detecting busy signals, DTMF splashback, etc. The 45 specifies how to handle any received DTMF splashback signals, which are rare. Here the 4 indicates that a maximum of four DTMF digits is expected; the 5 specifies a five second timeout after at least one DTMF digit is received in case four are not sent. The ending 60 causes ARONTS to wait up to 60 seconds to determine the call disposition. In most cases, the RTS has already been issued a shorter timeout setting, so that this ARONTS timeout should not occur.

The subsequent WQ30 sequence instructs ARONTS to wait up to 30 seconds for the milliwatt signal to drop (wait for quiet). As soon as it does, ARONTS sends DTMF digits #####. Only three #'s are required to command the RTS to exit the test call; however, sending a fourth makes it more certain that the RTS receives the call knockdown code. Sending more than four will cause an RTS error and should not be used.

The final WE03 W0 is used to end the Test Dialing Register. If the RTS successfully exits the test call as a result of the previous #####, the register exists gracefully from the WE03 command (wait for exit up to 3 seconds). If the RTS does not detect the #####, the register forcibly exits via the W0 sequence, which causes ARONTS to go into recapture control mode. This is invisible to the user, except that log code 112 may be inserted into the log file. This has no significant meaning relative to the network under test.

The Dialing Register should be marked with Outline 12 indicating that the test call is being placed on RTS line number 2 on module 1. The 2 matches the 2 in the 32 command. Should 33 be used to place the test call on RTS line number 3, then the Outline must be set to 13 correspondingly.

The *Expect* field must be set to Milliwatt to match the W* command used in the Dialing Register. The *Continue with* field must be set to No, as this is the entire Dialing Register. The *Call Code* field is optional.

2. RTS redialing 1 + 10 digits without comparison:

```
Q 32 1n* A # WC10 A E WB W*4560 WQ30 ##### WE03 W0
```

This example is identical to the preceding example except that ARONTS does not listen to the RTS redial the test call to verify accuracy. A trick is used here. The RTS is commanded to send the same 1 + ten digits, but to send an additional DTMF fourth column digit A afterwards. In many cases, the Telco's Central Office ignores this extra digit. If it does not, this method cannot be used. The WC command is used, but only to wait to hear the single DTMF digit A. So as soon as the RTS finishes redialing the Test Number, ARONTS proceeds in the Dialing Register. This is the method shown in section 7.3.3 of the ARONTS manual. This simplifies and shortens the Dialing Registers, but should only be used if the network quality between ARONTS and the RTS is high.

3. RTS redialing with access codes:

```
Q 32 1010288 1n* # WC10 1010288 1n* E WB W*4560 WQ30 ##### WE03 W0
```

This is identical to example 1, except that DTMF digits 1010288 are inserted into the 32 RTS redial command and the WC comparison command. In this case, the domestic calls are forced over the AT&T network. Whatever the dial plan digits are, they must be placed identically in both places. This method is used for 011 international calls as well.

4. RTS credit card call:

```
Q 32 0n* # WC10 0n* E WT302222102 SSS c0 MS04 WB W*4560 WQ30 ##### WE03 W0
```

This is similar to example 1 except for the following: The RTS is redialing 0 + the Test Number, so 0n* is placed in the 32 redial command and the WC comparison sequence. After the redialing is complete, ARONTS uses the WT302222102 energy detect sequence to detect a bong tone or a voice prompt requesting a credit or calling card number. In this case, up to 30 seconds is permitted before timing out. Each S pauses one second to make sure the Telco is ready to receive the credit card number. The c0 denotes that credit card number 0 should be sent in DTMF. This is entered under system setup. It should be noted that ARONTS itself is transmitting this DTMF data through the entire network; the RTS is not regenerating it. The MS04 sequence pauses four seconds (SSSS accomplishes the same thing). This must be adjusted to match the carrier's "Thank you" or other advertisement message sent after receipt of the credit card information. Without a proper delay, ARONTS may detect voice in the subsequent W* command and end the test call.

5. RTS redialing with access codes requiring secondary dialtone:

```
Q 32 18005551234 # W3 1n* WB W*4560 WQ30 ##### WE03 W0
```

In this example, ARONTS commands the RTS to redial the access number, which is 1-800-555-1234. A precise dialtone is expected next; W3 waits for it. If a 400 Hz ready tone is returned, W2 should be used instead of W3. If steady dial or ready tones are not returned, then either an energy detect similar to that of example 4 (with appropriate center frequency settings), or fixed delays (SS...S or MSxx) can be used instead of a W3 or W2 command. The rest of the dialing is done directly from ARONTS and is not redialed through the RTS. In this example, ARONTS DTMF dials 1 + the Test Number (1n*). The rest of the Dialing Register is identical to example 1.

The comparison command:

```
... WC10 18005551234 E ...
```

can be inserted in front of the W3 if desired, but it is generally unnecessary, as the W3 command will fail if dialtone

is not returned. The default timeout for the W3 command is 30 seconds. If loss of a dialed digit returns local dialtone in less time than that, and the comparison sequence is not used, then there could be a problem with local dialtone being interpreted as secondary dialtone. The timeout for W3 can be altered by placing an IDW3xx command in the Module Initialization Commands:

IDW315 -R

for example, which changes it to 15 seconds. The W1 command's default precise dialtone timeout is 4 seconds (this is changed to 20 seconds in the Module Commands with IDW120). W1 requires a constant one second dialtone for detection, while W3 requires a constant three second dialtone (to make certain that ringback tone does not cause false detection).

If there is any difficulty with reception of DTMF digits end-to-end, it may be desirable to slow down the ARONTS dialing:

... W3 P10 1n* P05 WB ...

P10 slows ARONTS' DTMF dialing to 5 digits per second (100 milliseconds on and off times). P05 restores it back to the standard 10 digits per second (50 milliseconds on and off times).

With international calls and poor quality Central Offices, this type of end-to-end dialing can be problematic. If the above 5 digit per second DTMF dialing does not provide satisfactory operation, the following portion should be tried:

... W3 P25 PT1612 1n* P* P05 WB ...

This method can only be used with Tone Controllers equipped with version 6 firmware. The P25 causes very slow DTMF dialing at two digits per second. PT1612 increases ARONTS' DTMF output levels to -1 dBm for the low tone and +1 dBm for the high tone. P* restores the output levels, and P05 returns to normal speed DTMF dialing.

6. Measure the time it takes for the Central Office to return local dialtone:

MS60 12 WB WT995141B10 xxxxxxxx S #### WE03 W0

In this example, ARONTS commands the RTS to take line 2 off-hook with the 12 command. A precise dialtone (consisting of 350 Hz + 440 Hz) is detected with WT995141B10, which provides a timeout value of 99 seconds; looks for the presence of two tones (B); 51 specifies 350 Hz and 41 specifies 440 Hz; and the tones must be present for 1.0 second (10). xxxxxx represents a quiet termination local number. The register's Expect field is set to milliwatt. Dialtone presence in less than 99 seconds logs a *successful* test. The placement of MS60 in the beginning of the register delays 60 seconds prior to taking the line off-hook. This spaces out the tests to provide a sample of the CO's readiness due to possible customer overloading.

Due to the time it takes the RTS to take the line off-hook, and the detection method programmed into the WT command, the time logged is approximately 1.9 seconds greater than the actual time. The failure log can be used to inspect these times if the *log all tests* option is enabled under System Setup. If the Statistics are zeroed prior to running these tests, the Analysis outputs represent the mean and standard deviations of the dialtone delay (with the above mentioned offset).

7. Generate test calls of specific durations in order to perform billing verification.

Billing Verification Dialing Registers

A typical dialing register used for call completion testing through the RTS-2 is:

Q 32 n7 # W#0710 WB W*4550 #### WE03 WQ75 ##### WE03 W0

This commands the RTS-2 to hang up the test call as soon as the milliwatt signal from the test number dialed is returned. The W* command requires the presence of the 1004 Hz tone for about 1 second. Immediately thereafter, the first three #'s disconnect the call when recognized by the RTS-2. This last process takes about 0.4 seconds. Measurements indicate that the call is in progress for a total of 1.5 seconds. Any delays placed between the W* command and the ##### add to this existing fixed delay.

A typical dialing register used for billing verification testing through the RTS-2 is:

Q 32 n7 # W#0710 WB W*4550 Q Q MS56 #### WE03 WQ75 ##### WE03 W0

This adds the delay of QQMS56 after the milliwatt is detected prior to commanding a call disconnect. Each Q adds a quarter second, and the MS56 adds an additional 56 seconds. Adding in the existing 1.5 seconds yields a call hold time of 58 seconds.

Timing Precision

The MSdd dialing register command delays dd seconds. The actual delay time is between (dd) and (dd - 1) seconds. Therefore, the above nominal 58 second dialing register produces a call hold time between 57 and 58 seconds. A representative test call with the above dialing register was measured with a call hold time of 57.22 seconds.

Concatenating additional MS delay commands together in order to exceed 99 second delays do not produce additional imprecision. For example, MS58 MS60 together will cause a delay between 117 and 118 seconds. If another command which requires more than one second to execute is placed between them, an additional imprecision of up to one second results.

The S command produces a delay between 1.0 and 1.1 seconds. The Q command produces a delay between 0.24 and 0.25 seconds. The MDdd command produces a delay between (dd) and (dd - 1) milliseconds.

Test Numbers

Milliwatt numbers may be used for billing verification test calls with the RTS-2 as long as verification is made that the ### is properly detected to disconnect the call in the presence of the milliwatt tone. It is preferable to use quiet termination test numbers (which produce a 10-second 1004 Hz tone and then silence). This eliminates the possibility of the tone blocking reception of the ### signaling. These quiet term test numbers *must* be used with RTS-1's, which do not generally have the ability to accept commands while the tone is present.

Calling Card Billing Verification Tests

A typical dialing register used to place fixed duration calls charged to a calling or credit card is:

```
Q 32 0n* # W#1110 WT302222102 SSS P10 c0# P05 WB WT151822112 QQ MS58 ##### WE03 W0
```

See **RTS credit card** call example above for explanation of the center portion of this dialing register. In the example above, a # is placed after the c0 command; this sends the DTMF "#" digit after the credit card number entry to speed up call acceptance. Additionally, P10 and P05 surround the c0# credit card number to slow its dialing down to 5 DTMF digits per second, as in some cases the CO's have been found to be lacking in the reception at 10 digits per second. Many carriers insert a "Thank you" message after call acceptance prior to connecting the call. In this case, in order to commence timing the call, it is necessary to correctly detect the initial milliwatt tone and ignore the welcome message. Use of the W* detection command may cause the voice to be detected instead of the milliwatt; therefore, the above register uses another WT command which is programmed to detect a 1004 Hz tone; it ignores the preceding voice signal. The trailing WT parameter requires the presence of the tone for 1.2 seconds. Measurements have shown that this matches the detection time for the W* command. So the timing discussion above for non calling card calls applies to this dialing register as well. This example produces a call hold time of 60 seconds (59-60).

Version 6.1 Firmware

Tone Controllers equipped with firmware version 6.1 or later have the additional dialing register command MPsss available. The parameter sss can take the values of 000-999 (three digits required). This command produces a delay of sss seconds, precisely. This command should be used to generate test calls for billing verification instead of the MSdd command (which has 1 second of imprecision).

A typical dialing register used for billing verification testing with 1+10 digit dialing is therefore:

```
Q 32 1n* # W#1110 WB W*4550 QQ MP058 ### WE03 W0
```

This produces a call hold time of 60 seconds (1.5 from W* and ###, 0.5 from QQ, and 58 from MP) and is repeatable without timing variability.

A typical dialing register used to place a 60 second call charged to a calling or credit card is therefore:

```
Q 32 0n* # W#1110 WT302222102 SSS P10 c0# P05 WB WT151822112 QQ MP058 ### WE03 W0
```

8. Measuring the response time for voice response systems.

By using the same dialing register as example #1:

```
Q 32 1n* # WC10 1n* E WB W*4560 WQ30 ##### WE03 W0
```

The expect field is set to Milliwatt as usual. If the system under test returns a voice prompt, then the expected result is log code 121 (Voice). The delay time is also given; however, the voice detect circuitry in the W* command requires a varying number of seconds to qualify it as voice. Using this register will show all of the possible results (such as busy, reorder, SIT, DTMF, etc.), but the delay time is not particularly accurate, because the voice detection time depends upon the actual individual voice recording.

To obtain an accurate measurement of the voice prompt response time, the following dialing register can be used:

```
Q 32 1n* # WC10 1n* E WB WT994550102 WQ30 ##### WE03 W0
```

In order to use this register, the system under test must not provide ringback tone prior to producing the voice prompt. This dialing register uses WT to detect the voice response instead of W*. The above parameters specify a timeout of 99 seconds; look for energy around 400 Hz (45) from filter number 1 (50 sets the second filter frequency and is irrelevant because of the following 1 which specifies to use only the first filter) which lasts for 0.2 seconds (02 at the end). The voice is normally detected within one second, giving more accurate delay time measurements than the W* method. However, this register (which should have its Expect field set to Milliwatt) will only return a log code of 100 (successful, or passed) for energy received (with the appropriate delay time), or 127 for a timeout (energy not detected within the specified 99 seconds). For this dialing register, the RTS internal call timeout should either be disabled, or set longer than the WT timeout setting.

It is recommended that tests with both the W* and WT methods be made to verify voice response systems; if the W* tests reveal the calls are mostly the expected voice response, then the delay values found from the WT tests can be used for greater accuracy.

9. ARONTS reprogramming RTS-1 and RTS-2 Test and Program codes.

This is discussed on page 46 of the manual (7.3.3). The *Program* code shown on the Site Information screen must be correct -- if not, update it. First, change the #t* in the Access register to #p*. The Access register is generally 1-3, but is specified on the Site Information screen. A typical access register then would be:

```
W1 1a* W#0130 Q #p* W#0103 Q WB WD
```

Create a new test register to change the Test code (to 8732 in this example):

```
RTS-1: 741 8732# 8732# WB W#T0103 Q WD  
RTS-2: 91 8732# 8732# WB W#T0103 Q WD
```

Create a new test register to change the Program code (to 2378 in this example):

```
RTS-1: 742 2378# 2378# WB W#T0103 Q WD  
RTS-2: 92 2378# 2378# WB W#T0103 Q WD
```

Set the Expect field in these registers to "RTS". Create a Test Schedule which accesses the desired locations. Create a Test Definition which uses any Test Number and one or both of the above registers to reprogram the Test or Program code, or both. Run the test and inspect the log file to find any units which did not accept the commands. Go to Site Information and reprogram the Test and Program code fields with the new values. Change the access register back to its original form (#t*). For security purposes, change the embedded Test and Program codes in the above registers to invalid values.

Preferred Method. Instead of changing the Access register back and forth, it is better to have the Test Register command the unit to exit Test Mode (01 W#0103) and enter Program Mode (#p* W#0103). It is also an improvement not to embed the new code into the dialing register itself. Use the *Secret Authcodes* feature (System Setup) to store the new code. This example uses Secret Authcode 1 (s1) to change the program code:

```
RTS-2: 01 W#0103 Q #p* W#0103 Q 92 s1#s1# WB W#T0103 Q WD
```

Then it is only required to change Secret Authcode 1 to the desired new Program Code without any dialing register changes to subsequently reprogram the code at a later time.

10. ARONTS making RTS-2 level measurements.

See the first two paragraphs in the example for doing this manually on the [RTS-2 Faqs](#) page.

Calling a Telco or switch milliwatt number:

```
RTS-2: 32n*# WT201818130 WQ15 ##8 MS08 WQ15 ##### W#0103 Q 83 WB W#0205 WD
```

Set the Expect field to "DTMF Code". 32n*# dials the test number. WT201818130 waits to hear a 1000 Hz tone that lasts 3 seconds. WQ15 waits for the one second tone dropout. ##8 commands the RTS-2 to measure the level. MS08 pauses 8 seconds to wait for the measurement to be made, and for the second tone burst to appear. WQ15 waits for the second tone burst to end. ##### commands the RTS-2 to end the test call to the responder. W#0103 waits for the test prompt. 83 commands the RTS-2 to play back the measurement. WB clears previous response codes. W#0205 receives the two DTMF digits response from the RTS-2 and logs it. WD marks the end.

The above register logs two DTMF digits; to convert to a dBm level, DTMF digits 1-9 represent that value (number

of beeps when in human response mode); 0, *, #, A, B, C represent 10-15 respectively; and D represents a zero value. These DTMF digits are also found in the *Data* field of the Rawdata.txt output file. Run the batch file DTMF_dB.bat (..\DTMF_dB 12) from the \ARONTS\Report folder to create a new Rawdata.csv output file. The csv file overwrites any existing file without warning. The csv file can be opened into Excel. DTMF_dB adds two columns to the end of every record: the (total beep) count, in the range of 0-255; and the dBm level in the range of +3 to -60. *Note: it interpolates the spreadsheet chart to tenth-dB resolution, but that does not alter the underlying precision.* The two new columns only have meaning for Rawdata records emanating from the above dialing register. Either use Excel to strip off all other rows, or alternatively use the *Log Codes* option under System Setup/File Descriptors to restrict Rawdata output to code 130 (Manual DTMF code) only. By default *Data* is the twelfth Rawdata field; if the File Descriptor is changed to add or drop fields, modify 12 in DTMF_dB.bat to indicate which field contains *Data*.

Calling an RTS-2 responder line:

RTS-2: 32n*#WT201818130WQ15 PT3533##8MS08WQ15PT2016####W#0103Q83 WBW#0205 MS12WD

Set the Expect field to "DTMF Code". Some spaces have been removed to fit, which makes this less clear. This register is identical to the one above, except for: PT3533 lowers the ARONTS DTMF output level hopefully sufficiently to prevent the called (responder) RTS-2 from hearing the # in the ##8 (first RTS-2) command, which would cancel the responder call. PT2016 raises the ARONTS DTMF output level hopefully sufficiently to cause the called (responder) RTS-2 to hear the # in the ##### (first RTS-2) command, which cancels the responder call. MS12 pauses 12 seconds at the end to let the responder RTS-2 to complete the default third tone burst and hang up. This is in case it does not hear the # disconnect and there is no disconnect supervision on the second RTS-2 (so that the line will be ready to answer another test call immediately). See the above discussion regarding DTMF codes and dBm levels.

Calling an RTS-2 and commanding a milliwatt without requiring a responder line:

Q 32 n*# W#1010 W#0130 Q PT2016 #t* W#0103 Q 71 S WB WD

Set the Expect field to "Nothing" and *Continue with* this register:

WT201818130WQ15 PT3533 ##8 MS08WQ15PT2016P20#S00SSS ####W#010383 WBW#0205 SS WD

Set the Expect field to "DTMF Code".

The first register dials an access (or other) second RTS-2 line, boosts the ARONTS output DTMF tone level (if line losses are very high on the RTS-2 lines it can be difficult to command the second RTS-2 through the first), logs into the second RTS-2 with the test code (this presumes that all units have the same code), and issues the 71 milliwatt tone command. The second register detects the milliwatt tone, lowers the ARONTS output DTMF tone level (so that the second RTS-2 hopefully does not hear the next #), commands the first RTS-2 to measure the level with ##8, waits for the first tone burst to drop, boosts the DTMF level again, initiates slow ARONTS DTMF dialing with P20, sends # to the second RTS-2 to end its 71 command, pauses a second with S, sends a 00 disconnect to the second RTS-2, pauses three seconds with SSS, hangs up the test call from the first RTS-2 with ### and acknowledgement with W#0103, commands the first RTS-2 to play back the measurement with 83, and retrieves the response with WBW#0205. See the above discussion regarding DTMF codes and dBm levels.

If the second RTS-2 has firmware version 1.4 or later, replace the above two registers with:

Q 32 n*# W#1010 W#0130 Q PT2016 #t* W#0103 Q 041 W#0103 Q 71 S WB WD
WT201818130WQ15 ##8 MS08WQ15PT2016P20*S00SSS ####W#010383 WBW#0205 SS WD

The difference here is that the second RTS-2 is put into Alternate call in-progress commands with Q 041 W#0103; the lowering ARONTS level (PT3533) is not needed; and exits the second RTS-2's 71 command with * instead of #.

Sample Test Runs

The rawdata and analysis of three ARONTS test runs are in this spreadsheet. The DTMF_dB.bat program was used as described above. They use these registers:

```
Call Code: Out Line: 1 Reg: 24 Nothing Continue with: 25
Q 32 1n*# W#1110 W#0130 SS PT1414 P50 #t* W#0105 Q 041 W#0103 Q 71 S WB WD
.....
Call Code: L2 Out Line: 1 Reg: 25 DTMF Code Continue with: 26
WT201818130WQ15 ##8 MS08WQ15PT1414P50**S 82 P05 ##1 MS13 P10 83 WBW#0205SSWD
.....
Call Code: L1 Out Line: 1 Reg: 26 DTMF Code Continue with: No
PT1414P50 00 SSS P05 ### W#0103 Q 83 WB W#0205 SS WD
.....
```

Call Code: Out Line: 1 Reg: 27 Nothing Continue with: 25
Q 12 W#0130 SS PT1414 P50 #t* W#0105 Q 041 W#0103 Q 71 S WB WD
.....

The L1 register measures the level received by the first RTS-2 from the second; The L2 register measures the level received by the second RTS-2 from the first. The *VoIP-POTS* lines indicate tests made by using a VoIP outgoing line on the first RTS-2 to call an incoming POTS line on the second RTS-2; the tests were initiated with register 24. The *direct* lines indicate tests made by directly connecting the second RTS-2's line 1 to outgoing line 2 on the first RTS-2 (second unit must be configured for a telephone instrument); the tests were initiated with register 27. For all of these tests, the first RTS-2 was directly connected to ARONTS in the same manner. The *adapt* lines were tests made with the default Test Tone gain profile of 128 decimal; the *direct* (without adapt) lines were tests made with a Test Tone gain profile of 000 decimal, which turns off the adaptive balance. In brief, this analysis shows that the average levels are as expected, but the standard deviation illustrates that the level measurements are within 1 to 2 dBm.

11. Retrieving RTS-2 firmware versions.

Create a Test Register:

Q 67 WB W#0205 S WD

Set the Expect field to "DTMF Code". Specify any one Test Number (it is not used) in the Test Definition. The Failure Log will show logcode 130 (failed Manual DTMF code) and the RTS-2 firmware version will be displayed as a 2-digit DTMF code (i.e. 13 means version 1.3). The Rawdata.txt report output file (activated under System Setup) will also contain those two digits in the Data field (import it into Excel to view).

12. Retrieving RTS-2 unit ID numbers.


ARONTS software versions after June 2006 automatically retrieve the Unit ID; to generate a report, from Test Analysis, *list report* under Site Data. For earlier software releases, create a Test Register:

Q 60 WB W#0605 S WD

Set the Expect field to "RTS". Specify any one Test Number (it is not used) in the Test Definition. The Failure Log will show logcode 100 (passed) and the unit ID will not be displayed as a DTMF code. However, the Rawdata.txt report output file (activated under System Setup) will contain the Unit ID in the Data field (import it into Excel to view).

©1991, 2011

IC Engineering, Inc.

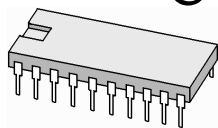

*PO Box 321
Owings Mills, MD
USA 21117-0321*

www.ICengineering.com
410-363-8748